



Service
Service
Service

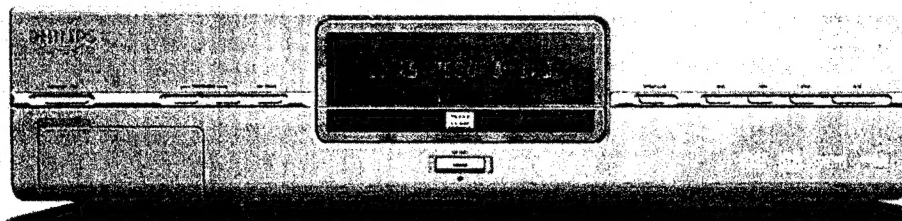

TR01001_001
080502

Service Manual



Contents

	Page
1 Technical Specifications and Connection Facilities	4
2 Safety Information, General Notes	6
3 Directions for Use	8
4 Mechanical Instructions	45
5 Diagnostic Software	51
6 Block Diagrams, Waveforms, Wiring Diagram	81
Wiring Diagram	83
Waveforms	84
Electrical Diagrams And Print-Layouts	93
Display Panel (Diagram 1)	93
Front Connector Panel (FC) (Diagram 2)	97
Key Panel (KEY) (Diagram 3)	99
Record Key Panel (REC) (Diagram 4)	100
Analog Board: Fronted Video (FV) (Diagram 1)	101
Analog Board: In / Out Video (IOV) (Diagram 2)	102
Analog Board: In / Out Audio (IOA) (Diagram 3)	103
Analog Board: Power Supply (PS) (Diagram 4)	104
Analog Board: Multi Sound Processing (MSP) (Diagram 5)	105
Analog Board: VPS (VPS) (Diagram 6)	106
Analog Board: Follow Me (FOME) (Diagram 7)	106
Analog Board: Digital In / Out (DIGIO) (Diagram 8)	107
Analog Board: Audio Converter (DAC_ADC) (Diagram 9)	108

Contents

	Page
UPC 12 Sub PCB: Centra Controller (CECO) (Diagram 10)	114
UPC 12 Sub PCB: Fan Control (FACO) (Diagram 11)	115
DVIO Front Board (Diagram 1)	118
DVIO Board: 1394 Interface (Diagram 2)	119
DVIO Board: Microprocessor (Diagram 3)	120
DVIO Board: FIFO & Control (Diagram 4)	121
DVIO Board: DVCODEC (Diagram 5)	122
DVIO Board: A & V Output (Diagram 6)	123
Digital Board: VSM Buffer Memory and Bit Engine Interface (Diagram 1)	128
Digital Board: AV Dec. ST15508 (Diagram 2)	129
Digital Board: AV Decoder Mem. (Diagram 3)	130
Digital Board: Video Enc. Empress (Diagram 4)	131
Digital Board: VIP CVBS Y/C Video Input (Diagram 5)	132
Digital Board: Analog Board Cons. Video In/Out (Diagram 6)	133
Digital Board: Progressive Scan (Diagram 7)	134
Digital Board: Progressive Scan (Diagram 8)	135
Digital Board: Power, Clock and Reset Audio Clock (Diagram 9)	136
8 Alignments	145
9 Circuit-, IC Descriptions and List of Abbreviations	148
10 Spare Part List	212

©Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



PHILIPS

1. Technical Specifications and Connection Facilities

1.1 General:

1.2.7 Tuning

Mains voltage : 198V-276V
Mains frequency : 43 Hz - 63Hz
Power consumption mains : 28 W
Power consumption standby : < 7 W
Power consumption low power stand-by : < 3 W

Automatic Search Tuning
scanning time without antenna : typ. 3 min, PAL
stop level (vision carrier) : $\geq 37\text{dB}\mu\text{V}$
Maximum tuning error of a recalled program : $\pm 62.5\text{ kHz}$
Maximum tuning error during operation : $\pm 100\text{ kHz}$

1.2 RF Tuner

Test equipment:Fluke 54200 TV Signal generator
Test streams:PAL BG Philips Standard test pattern

1.2.1 System:

PAL B/G, PAL D/K, SECAM L/L', PAL I

1.2.2 RF - Loop Through:

Frequency range : 45 MHz - 860 MHz
Gain: (ANT IN - ANT OUT) : -6 dB to 0dB

1.2.3 Radio Interference:

Input voltage /3 tone method (+40 dB min) : no limit

1.2.4 Receiver:

PLL tuning with AFC for optimum reception
Frequency range: : 45.25 MHz - 857 MHz
Sensitivity at 40 dB SIN : $\geq 60\text{dB}\mu\text{V}$ at 75 Ω
(video unweighted)

1.2.5 Video Performance:

Channel 25 / 503.25 MHz.
Test pattern: PAL BG PHILIPS standard test pattern,
RF Level 74 dBV
Measured on SCART 1
Frequency response: : 0 - 4.00 MHz +0-4dB
Group delay (0.1 MHz - 4.4 MHz) : 0 nsec \pm 150nsec

1.2.6 Audio Performance:

Audio Performance Analogue - HiFi:
Frequency response at SCART 1 (L+R) output: : 100 Hz - 12 kHz / 0 \pm 3dB

S/N according to DIN 45405, 7, 1967 :
and PHILIPS standard test pattern video signal:
Harmonic distortion (1 kHz, \pm 25 kHz deviation) : FM \geq 50dB; AM \geq 45dB, unweighted
: FM \leq 1.5%, AM \leq 2%

Audio Performance NICAM:

Frequency response at SCART 1 (L+R) output: : 40 Hz - 15 kHz 0 \pm 3dB
S/N according to DIN 45405, 7, 1967 :
and PHILIPS standard test pattern video signal:
Harmonic distortion (1 kHz): : \geq 60 dB unweighted
: \leq 0.5 %

Crosstalk 1kHz : >85dB
Crosstalk 20Hz-20kHz : >70dB
Frequency response 20Hz- 20kHz : \pm 0.2dB max
Signal to noise ratio : >85 dB
Dynamic range 1kHz : >75dB
Dynamic range 20Hz-20kHz : >70dB
Distortion and noise 1kHz : >75dB
Distortion and noise 20Hz-20kHz : >65dB
Intermodulation distortion : >70dB
Mute (spin-up, pause, access) : >85dB
Outband attenuation: : >40dB above 25kHz

1.6 Digital Output

1.6.1 Coaxial

CDDA/ LPCM (incl MPEG1)
MPEG2, AC3 audio
DTS
: according IEC658
: according IEC1937
: according IEC1937, amendment 1

1.7 Digital Video Input (IEEE 1394)

1.7.1 Applicable Standards

Implementation according:
IEEE Std 1394-1995
IEC 61883 - Part 1
IEC 61883 - Part 2 SD-DVCR (02-01-1997)
IEC 61883 - Part 2 SD-DVCR using digital VCR's using 6.3 mm magnetic tape - dec.1994
Mechanical connection according:
Annex A of 61883-1

1.8 P50 System Control

Via SCART pin nr 10

1.9 Dimensions and Weight

Height of feet : 10mm
Apparatus tray closed : WxDxH: 435 x 324.5 x 88cm
Apparatus tray open : WxDxH: 435 x 366 x 88cm
Weight without packaging : app. 4 kg \pm 0.5 kg
Weight in packaging : app. 6.5 kg

1.10 Laser Output Power & Wavelength

1.10.1 DVD

Output power during reading : 0.8mW
Output power during writing : 20mW
Wavelength : 660nm

1.10.2 CD

Output power : 0.3mW
Wavelength : 780nm

1.3.3 Audio/Video Front Input Connectors

Audio

Input voltage : 2 Vrms
Input impedance : $>10\text{k}\Omega$

Video - Cinch

Input voltage : 1 Vpp \pm 3dB
Input impedance : 75 Ω

Video - YC (Hosiden)

Input voltage Y : 1Vpp \pm 3dB
Input impedance Y : 75 Ω
Input voltage C : burst 300 mVpp \pm 3 dB
Input impedance C : 75 Ω

1.4 Video Performance

All outputs loaded with 75 Ohm
SNR measurements over full bandwidth without weighing.

1.4.1 SCART (RGB)

SNR : $> -65\text{ dB}$ on all output
Bandwidth : 4.8 MHz \pm 2dB

1.5 Audio Performance CD

1.5.1 Cinch Output Rear

Output voltage 2 channel mode : 2Vrms \pm 2dB
Channel unbalance (1kHz) : <1dB
Crosstalk 1kHz : >95dB
Crosstalk 20Hz-20kHz : >85dB
Frequency response 20Hz- 20kHz : \pm 0.2dB max
Signal to noise ratio : >95 dB
Dynamic range 1kHz : >85dB
Dynamic range 20Hz-20kHz : >80dB
Distortion and noise 1kHz : >85dB
Distortion and noise 20Hz-20kHz : >75dB
Intermodulation distortion : >77dB
Mute : >95dB
Outband attenuation: : >40dB above 30kHz

1.5.2 Scart Audio

Output voltage 2 channel mode : 1.6Vrms \pm 2dB
Channel unbalance (1kHz) : <1dB

2. Safety Information, General Notes

2.1 Safety Instructions

2.1.1 General Safety

Safety regulations require that during a repair:

- Connect the unit to the mains via an isolation transformer.
- Replace safety components, indicated by the symbol only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.

Safety regulations require that after a repair, you must return the unit in its original condition. Pay, in particular, attention to the following points:

- Route the wires/cables correctly, and fix them with the mounted cable clamps.
- Check the insulation of the mains lead for external damage.
- Check the electrical DC resistance between the mains plug and the secondary side:
 1. Unplug the mains cord, and connect a wire between the two pins of the mains plug.
 2. Set the mains switch to the 'on' position (keep the mains cord unplugged).
 3. Measure the resistance value between the mains plug and the front panel, controls, and chassis bottom.
 4. Repair or correct unit when the resistance measurement is less than 1 M Ω .
 5. Verify this, before you return the unit to the customer/user (ref. UL-standard no. 1492).
 6. Switch the unit 'off', and remove the wire between the two pins of the mains plug.

2.1.2 Laser Safety

This unit employs a laser. Only qualified service personnel may remove the cover, or attempt to service this device (due to possible eye injury).

Laser Device Unit

Type	Semiconductor laser
Wavelength	GaAs
	: 650 nm (DVD)
	: 780 nm (VCD/CD)
Output Power	: 20 mW
	(DVD+RW writing)
	: 0.8 mW
	(DVD reading)
	: 0.3 mW
Beam divergence	(VCD/CD reading)
	: 60 degree

Figure 2-1

Note: Use of controls or adjustments or performance of procedure other than those specified herein, may result in hazardous radiation exposure. Avoid direct exposure to beam.



2.2 Warnings

2.2.1 General

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are at the same potential as the mass of the set by a wristband with resistance. Keep components and tools at this same potential.
- Available ESD protection equipment:
 - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and earth cable) 4822 310 10871.
 - Wristband tester 4822 344 13989.
- Be careful during measurements in the live voltage section. The primary side of the power supply (pos. 100V), including the heatsink, carries live mains voltage when you connect the player to the mains (even when the player is 'off'). It is possible to touch copper tracks and/or components in this unshielded primary area, when you service the player. Service personnel must take precautions to prevent touching this area or components in this area. A 'lightning stroke' and a stripe-marked printing on the printed wiring board, indicate the primary side of the power supply.
- Never replace modules, or components, while the unit is 'on'.
- The use of optical instruments with this product, will increase eye hazard.
- Only qualified service personnel may remove the cover or attempt to service this device, due to possible eye injury.
- Repair handling should take place as much as possible with a disc loaded inside the player.
- Text below is placed inside the unit, on the laser cover shield:

CAUTION: LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. LASER RADIATION MAY BE EMISSION FROM THE LASER SOURCE WHEN THE UNIT IS OPERATING. DO NOT ATTEMPT TO SERVICE THE UNIT WHEN THE LASER IS ON. LASER RADIATION MAY BE EMISSION FROM THE LASER SOURCE WHEN THE UNIT IS OPERATING. DO NOT ATTEMPT TO SERVICE THE UNIT WHEN THE LASER IS ON. LASER RADIATION MAY BE EMISSION FROM THE LASER SOURCE WHEN THE UNIT IS OPERATING. DO NOT ATTEMPT TO SERVICE THE UNIT WHEN THE LASER IS ON.

Figure 2-2

2.2.3 Notes

Dolby
Manufactured under licence from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works.
©1992-1997 Dolby Laboratories, Inc. All rights reserved.




Figure 2-3

Trusurround
TRUSURROUND, SRS and symbol (fig 2-4) are trademarks of SRS Labs, Inc. TRUSURROUND technology is manufactured under licence from SRS Labs, Inc.



Figure 2-4

Video Plus

"Video Plus" and "PlusCode" are registered trademarks of the Genstar Development Corporation. The "Video Plus" system is manufactured under licence from the Genstar Development Corporation.



Figure 2-5

Macrovision

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

3. Directions For Use



Select previous title/search backwards:
Briefly press the button during playback: Previous chapter/film or previous title

Hold down the button: Search backwards

Hold down the button during the still picture: slow motion backwards



Select next title/search forwards:

Briefly press the button during playback: Next chapter/film or next title

Hold down the button: Search forwards

Hold down the button during the still picture: slow motion forward

STOP ■
Stop: Stop playback / recording, except with programmed recordings (TIMER)

Hold down the button to open and close the disc tray



REC/OTR ●
Record: Record the current TV channel

EDIT
EDIT: For displaying the edit menu for DVD-(RW) discs, for setting chapter markers



TIMER
TIMER: To program a recording with ShowView[®] without ShowView[®] or to alter/clear programmed recordings

Additional TV functions



TV VOLUME +
TV volume: Increase TV volume



TV VOLUME -
TV volume: Reduce TV volume

For the following functions you need to hold down the button **DVD/TV** at the side and then select the function you need with the appropriate button.



0..9
Number buttons: 0..9



CHANNEL +
TV programme number: To select a higher programme number



CHANNEL -
TV programme number: To select a lower programme number

Front of the device



STANDBY/ON
Switch on or off. To switch off or on, interrupt a function, interrupt a programmed recording (TIMER)



CHANNEL -
Select: Lower programme number



CHANNEL +
Select: Higher programme number



REC MODE
Record type (quality): To select the maximum possible record time

The remote control



MONITOR
Monitor: This button lets you switch between the (internal) TV tuner in the DVD recorder (TV picture on the TV set) and playback on the DVD recorder



STANDBY ○
Switch on or off. To switch set on or off, interrupt menu function, interrupt a programmed recording (TIMER)



TV/DVD
TV/DVD switch: Switches the start socket: EXT 2 AUX (IO directly to the TV set. This lets you watch the picture from any unit connected to this start socket (set-top box, video recorder or satellite receiver) and at the same time record from another source
If you have not connected a device to start socket: EXT 2 AUX (IO) you can use this button to switch between TV reception and DVD recorder
This, however, functions only if you have connected your TV set to the DVD recorder using a start cable (socket: EXT 1 TO TV-IO) and your TV set reacts to the switching



T/C
Title/Chapter: Choose the T (Title)/C (Chapter) directly from the menu bar
If "IFEP" appears in the display, the index menu from a recorded disc or an introductory film will be shown. In this case, this function is not available



PLAY MODE
Playback type: Choose between repeat, shuffle play and intro-scan



REC. MODE
Record type (quality): To select the maximum possible record time



0..9
Number buttons: 0..9



DISC-MENU
Disc menu: To show the DVD menu or the index screen



SYSTEM-MENU
System menu: Call up/leave the main menu (menu bar at the top of the screen)



SELECT
Select: Select function/value



OK
Store/confirm: To store or confirm entry



Cursor keys: Left, right, up, down



RETURN
Back: Return to previous menu on a video CD (VCD). This function works also on some DVD's



CLEAR
Delete: To delete last entry or clear programmed recording (TIMER)




CHANNEL +
Plus: Next programme number



CHANNEL -
Minus: Previous programme number



PLAY/PAUSE ▶ ||
Playback/pause: Play back a disc
If this button is pressed during playback, the DVD recorder switches to pause. You will see a still picture.
If this button is pressed during recording, the DVD recorder will also switch to pause

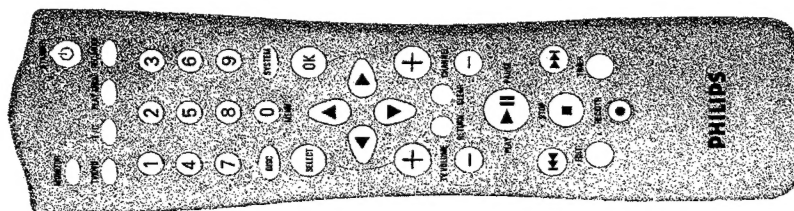

EXT 1 TO TV/IO	Start socket 1: Connection of a TV set RGB-output
OUT S-VIDEO (Y/C)	S-Video output: Connection of an S-Video compatible TV set
OUT VIDEO (CVBS)	Video output (yellow socket): Connection of a TV set with a video input (CVBS Composite Video)
OUT L AUDIO R	Analogue audio output (white/red socket): Connection of a TV set with audio input sockets or connection of an additional device (amplifier/receiver)
DIGITAL AUDIO OUT	Digital audio output: Connection of a digital audio device (amplifier/receiver)

The symbols on your DVD recorder display

These symbols can light up on your DVD recorder display:

TITLE	Displays the title number selected/played (DVD)
TRACK	Displays the track selected/played (VCD/CD)
DVD+RW	Displays the inserted DVD disc: DVD/DVD+R / DVD+RW. Disc types 'DVD-R/DVD+RW' are shown as DVD.
S-VCD	Displays the CD-disc inserted: S VCD/VCD/CD
EP+ CHAPTER	Displays recording type (Quality/Playback type: HQ, SP, EP, PP+). Displays the chapter selected/played
TOTAL TIME	Total playback time
REMAIN TIME	Time remaining
TIME	Time used
DTS	A DTS audio signal is available on the digital audio output
DD DIGITAL	A Dolby digital audio signal is available on the digital audio output
MPEG	An MPEG audio signal is available on the digital audio output
PCM	A PCM audio signal is available on the digital audio output
CHANNEL	Channel/programme number
II	Playback/record interrupted (Pause)
RECORD	Recording in progress
ZA	A satellite recording has been programmed.
o((A remote control signal has been received
o	A recording (timer) has been programmed
DECODER	A decoder has been assigned to the current TV channel (programme)



ENGLISH

RECORD	Record: Record the current TV channel
RECORD LED	Recording in progress: Red light on the RECORD button to indicate recording in progress
OPEN/CLOSE	Open/close disc tray: Open/close disc tray
◀▶	Select previous title/search backwards
▶▶	Select next title/search forwards
■ STOP	Stop: Interrupt playback/recording
▶▶ PAUSE	Playback/pause: Playback recorded disc, interrupt playback, still picture

Behind the flap at the left-hand corner on the front


DV	I-Link / DV socket (digital video input, IEEE 1394, FireWire): Connecting a digital camcorder or other suitable device (programme number EP2+)
S-VIDEO	S-Video socket: Connection of SVHS/H8 camcorders or SVHS/H8 video recorders (programme number EP1+)
Yellow socket VIDEO	Video input socket: Connection of camcorders or video recorders (programme number EP1+)
Whitered socket left AUDIO right	Audio input socket left/right: Connection of camcorders or video recorders (programme number EP1+)

Switching between sockets IN S-VIDEO (Y/C) and IN VIDEO (CVBS) is done automatically. In case both sockets are used, the signal received at socket IN S-VIDEO (Y/C) is treated with priority.

Back of the unit



1 MAINS	Mains socket: Connection to the mains supply (230V/50Hz)
2 ANTENNA	Aerial input: Connection of the aerial
3 TV	Aerial output: Connection of the TV set
EXT 2 AUX I/O	Start socket 2: Connection of an additional device (satellite receiver, set-top box, video recorder, camcorder, etc.)

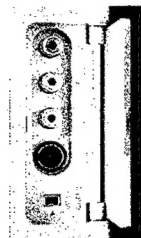

EMPTY DISC	The disc inserted is either new or has been completely erased (no recordings).
PROTECT DISC	The disc is protected against recording.
MAX. TITLE	The maximum number of titles per disc has been reached. The maximum number of titles per disc is 48.
MAX. CHAPTER	The maximum number of chapters per title has been reached. The maximum number of chapters per title is 99 and 124 per disc.
DISC FULL	The disc is full. There is no space for new recordings.
PAL/NTSC	A disc with PAL recordings has been inserted. The machine is trying to record an NTSC signal. Insert a new disc or one that contains NTSC recordings.
NTSC DISC	A disc with NTSC recordings has been inserted. The machine is trying to record a PAL signal. Insert a new disc or one that contains PAL recordings.
RECORDING	An illegal action (e.g. OPEN/CLOSE button) was attempted during recording.
FREE TITLE	Playback was started for an empty title or the following title is empty.
DISC LOCK	An attempt has been made to record during playback of a protected disc. This message appears if an attempt is made to insert a chapter marker (EDIT button).
DISC ERR	An error occurred when the title was being written. If this error keeps occurring, please clean the disc or use a new one. You will find information on how to clean the disc in the next chapter in the section 'Cleaning the discs'.
DISC ERROR	An error occurred when writing the title. Recording was continued; the error was skipped.
SETUP	After the automatic channel search, the menu for time/date settings appears on the screen.
WAIT BT	During the automatic channel search, the TV channels found will be counted.
BLOCKED	It is not possible to close/open the disc tray.
SAFE REC'D	The new recording will be made at the end of all the other recordings (SAFE RECORD).
EASYLINK	The EasyLink function is currently transferring information from the TV set.

ENGLISH

VPS/PDC	Video programming system / programme delivery control: A VPS or PDC code will be transmitted for the selected TV program.
NICAM	The DVD recorder has detected a Nicam audio signal.
STEREO	During playback a HiFi2 channel tone was detected or a HiFi2 channel tone was received.
III	Multi-function display/Text line a) Clock a) Disc title playing time a) OTS switch-off time a) Title name a) Display of programme number of TV channel/postion/channel a) Display of information, warnings.

Messages in the DVD recorder display

The following messages may appear in your DVD recorder display

TV CH	The DVD recorder is currently in the initial installation mode. Switch on your TV set and read section 'Installing your DVD recorder' in chapter 'Initial installation'.
NO SIGNAL	No input signal available (signal inadequate or unstable).
MENU	The menu on the screen is active.
OPENING	Disc tray opening.
TRAY OPEN	Disc tray open.
CLOSING	Disc tray closing.
READING	Disc being read.
MENU UPDT	Once recording has been successfully completed the table of contents is created.
NO MENU	The menu structure is created after the first recording has been made on a new disc.
COPY PROT	You have tried to copy a copy-protected DVD/video cassette.
WAIT	Please wait until this message disappears. The DVD recorder is busy performing a task.
NO DISC	No disc has been inserted for recording. If a disc has been inserted, perhaps it cannot be read.
INFO	Information on the inserted DVD is displayed on the screen.
BUSY	The DVD recorder is processing the changes to make them DVD compatible.
ERASING	The entire disc is erased.


READING

THIS MARKING INDICATES THE DVD VIDEO RECORDING AREA. THE DVD VIDEO RECORDING AREA IS THE AREA WHERE THE DVD VIDEO RECORDING IS MADE.

2

Connecting the DVD recorder

Preparing the remote control for operation

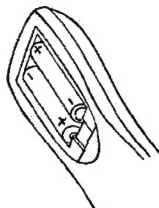

The remote control and its batteries are packed separately in the original DVD recorder packaging. You must install the batteries in the remote control before use - described in the following section.

- 1 Take the remote control of the DVD recorder and the enclosed batteries (2 batteries).
- 2 Open the battery compartment, insert the batteries as shown and then close the battery compartment.

The remote control is now ready to use. Its range is approximately 5 to 10 meters.

'Aim' correctly

In the following sections, you will need the remote control for the first time. Always point the front of the remote control at the DVD recorder and not at the TV set.

Tip

Connecting your DVD recorder to the TV set

The necessary cable connections must be made before you can record or playback TV programmes using your DVD recorder.

Connect the DVD recorder directly to your TV set. If there is a video recorder in between the picture quality may be poor because of the copy protection system built into the DVD recorder.

We recommend that you use a start cable to connect your TV set and DVD recorder.

What is a start cable?

The start or Euro AV cable serves as the universal connector for picture, sound and control signals. With this type of connection, there is practically no loss of quality in picture or sound transmission.



When you install your DVD recorder for the first time, select one of the following options:

Connecting with a start cable and Easy Link
If your TV set is equipped with Easy Link, Cinema Link, NextView Link, Q-Link, Smart Link, MagicGate, Dialogic, and you wish to use a start cable.

What is Easy Link?

If your TV set is equipped with functions such as Easy Link, Cinema Link, NextView Link, Q-Link, Smart Link, MagicGate or Dialogic, which are fully compatible with one another (TV set, DVD recorder, etc.), your DVD recorder can exchange information with your TV set. Please see your TV's operating instructions.

Connecting with a start cable without Easy Link
If your TV set is not equipped with Easy Link, Cinema Link, NextView Link, Q-Link, Smart Link, MagicGate, Dialogic, and you wish to use a start cable.

Connecting with an S-Video (Y/C) cable
If your TV set is equipped with an S-Video (Y/C) socket.

What is an S-Video (Y/C) cable?

This connecting cable, also known as the S-Video cable, is used to transmit the brightness signal (Y signal) and colour signal (C signal) separately. This mini DIN socket/plug is also called a Hornsden socket/plug.

Connecting with video (CVBS) cable
If your TV set is equipped only with a video (CVBS) socket.


What is Video (CVBS)?

This socket, usually referred to as the Cinch socket, is used for transmitting the composite video signal (R/G/B, CVBS). In this method of transmission the colour signal and the brightness signal are transmitted on the same cable. In certain circumstances, this can lead to problems with the picture, such as 'Moire' patterns.

Connecting with a scart cable and 'Easy Link'

Your DVD recorder can exchange information with your TV set using 'Easy Link'. Your TV channels can also be transferred in the same order from your TV set to your DVD recorder using 'Easy Link'.

Have the following cables ready:
an aerial cable (1, supplied), a mains cable (2, supplied), a special scart cable (3, suitable for EasyLink).



1 Switch off your TV set.

2 Remove the aerial cable plug from your TV set. Insert it into the ANTENNA socket at the back of the DVD recorder.



3 Insert one end of the supplied aerial cable into the TV socket at the back of the DVD recorder and the other end into the aerial input socket at the back of the TV set.



4 Plug a special scart cable (for EasyLink) into the scart socket EXT 1 TO TV-40 at the back of the DVD recorder and the corresponding scart socket at the back of the TV set (see TV set operating instructions).




5 Switch on the TV set.

6 Insert one end of the supplied mains cable into the mains socket ~MAINS at the back of the DVD recorder and the other end into the wall socket.




7 A message appears on the screen announcing that the transfer has started. 'EPLINK !!' appears on the display during transfer. The TV set transfers all stored TV channels, in the same order, to the DVD recorder. This may take several minutes.

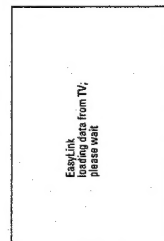

Connecting the DVD recorder

13

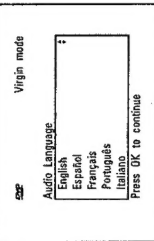

x 'Time', 'Year', 'Month', 'Date' appears on my TV screen for confirmation

Normally, the date and time are transferred from the data of the TV channel that is stored under programme P01. If the aerial signal is too weak or disrupted, you must manually set the time and date:

- 1 Check if the time in the 'Time' is correct.
- 2 If required, change the time with the number buttons 0-9 on your remote control.
- 3 Select the next line with \blacktriangle or \blacktriangledown .
- 4 Check the displayed settings for: 'Year', 'Month' and 'Date'.
- 5 When all information is correct, save by pressing OK.

Problem

x I can see more installation menus on my TV set

Not all the necessary data has been transferred. Please enter the settings by hand as follows. For more information on the various functions see 'Initial installation' in 'Installing your DVD recorder'.


- 1 Select the desired audio language using \blacktriangledown or \blacktriangle and confirm with OK.
- 2 Select the desired subtitle language with \blacktriangledown or \blacktriangle and confirm with OK.
- 3 Select the desired picture format using \blacktriangledown or \blacktriangle .
For a 4:3 TV set: choose format (black bars above and below the picture)
For a 4:3 TV set: full height format with this slider cut off
For a 16:9 TV set
- 4 Confirm with OK.
- 5 Select your country with \blacktriangledown or \blacktriangle .
If your country does not appear, select 'Other'.
- 6 Confirm with OK.

Problem

Initial installation is now complete.

Connecting with a scart cable without 'Easy Link'

Have the following cables ready:
an aerial cable (1, supplied), a mains cable (2, supplied), a scart cable (3).



1 Remove the aerial cable plug from your TV set. Insert it into the ANTENNA socket at the back of the DVD recorder.




14

Connecting the DVD recorder

Connecting with an S-Video(Y/C)cable

Have the following cables ready:
an aerial cable (1, supplied), a mains cable (2, supplied), an S-Video (SVHS) cable (3), an audio cable (4, supplied, red/white plug).




1 Remove the aerial cable plug from your TV set. Insert it into the ANTENNA socket at the back of the DVD recorder.




2 Insert one end of the supplied aerial cable into the TV socket at the back of the DVD recorder and the other end into the aerial input socket at the back of the TV set.



3 Insert one end of a S-Video (SVHS) cable into the OUT S-VIDEO (Y/C) socket at the back of the DVD recorder and the other end into the S-Video (SVHS) input socket on the TV set (usually labelled 'S-Video In' or 'SVHS In'). See TV operating instructions.



4 Insert one end of the supplied audio (Cinch) cable into the red/white Cinch socket OUT L AUDIO R at the back of the DVD recorder and the other end into the audio input socket (usually red/white) on the TV set (usually labelled 'Audio In' or 'AV In'). See TV operating instructions.



5 Switch on the TV set. Switch the TV set over to this input socket or select the relevant channel number. Please see your TV's operating instructions for the channel number you need.

6 Insert one end of the supplied mains cable into the mains socket ~MAINS at the back of the DVD recorder and the other end into the wall socket. 'TV ON' will appear on the display.



Then, read the paragraph on 'Initial installation' in 'Installing your DVD recorder'.

Connecting the DVD recorder

ENGLISH

2 Insert one end of the supplied aerial cable into the TV socket at the back of the DVD recorder and the other end into the aerial input socket at the back of the TV set.




3 Plug a start cable into the start socket EXT 1 TO TV/IO at the back of the DVD recorder and the start socket for the DVD recorder at the back of the TV set (see TV set operating instructions).




My TV set has several start sockets. Which one should I use?
Select the start socket that is suitable for both video output and for video input.
My TV set shows me a selection menu for the start socket.
Select 'VCK' as the source for this start socket.

4 Switch on the TV set.

5 Insert one end of the supplied mains cable into the mains socket ~MAINS at the back of the DVD recorder and the other end into the wall socket. 'TV ON' will appear on the display.



6 If the connection was properly made and your TV was automatically switched to the programme number for the start socket, e.g. 'EXT', 'U', 'AV', you will see the following picture:

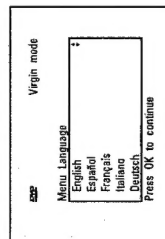


Problem
My screen is empty.
Many TV sets are switched by the DVD recorder to the programme number for the start socket by way of a control signal sent through the start cable.
If the TV set does not automatically switch to the start socket, programme number, manually change to the corresponding programme number on your TV set (see your TV's operating instructions).
Check that the start cable is connected from the TV set to the EXT 1 TO TV/IO socket on the DVD recorder. The EXT 2 AUX IO socket is intended only for additional devices.

Then, read the paragraph on 'Initial installation' in 'Installing your DVD recorder'.

Connecting the DVD recorder


Connecting with video(CVBS) cable

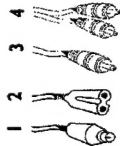


Have the following cables ready:
an aerial cable (1, supplied), a mains cable (2, supplied), a video (CVBS) cable (3, supplied, yellow plug), an audio cable (4, supplied, red/white plug).



- 1 Remove the aerial cable plug from your TV set. Insert it into the ANTENNA socket at the back of the DVD recorder.



- 2 Insert one end of the supplied aerial cable into the TV socket at the back of the DVD recorder and the other end into the aerial input socket at the back of the TV set.

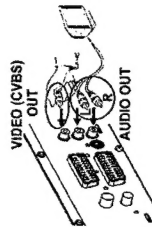

- 3 Insert one end of the supplied video (CVBS) cable into the yellow Cinch socket OUT VIDEO (CVBS) at the back of the DVD recorder and the other end into the video input socket (usually yellow) on the TV set (usually labelled 'Video in' or 'AV in'). See TV operating instructions.



- 4 Insert one end of the supplied audio (Cinch) cable into the red/white Cinch socket OUT L AUDIO R at the back of the DVD recorder and the other end into the audio input socket (usually red/white) on the TV set (usually labelled 'Audio in' or 'AV in'). See TV operating instructions.




- 5 Switch on the TV set. Switch the TV set over to the Video/Audio input socket or select the relevant programme number. Please see your TV's operating instructions for the programme number you need.



- 6 Insert one end of the supplied mains cable into the mains socket ~MAINS at the back of the DVD recorder and the other end into the wall socket. 'If ON' will appear on the display.

Then, read the paragraph on 'Initial installation' in 'Installing your DVD recorder'.

Connecting additional devices to the second scart socket



You can connect additional devices such as decoders, satellite receivers, camcorders, etc. to the EXT 2 AUX I/O socket. When playback is started on this additional device the DVD recorder automatically connects the EXT 2 AUX I/O socket with the EXT 1 TO TV-I/O socket. You will then see the picture from the additional device on your TV set, even if the DVD recorder is switched off.
The TV/DVD button on the remote control allows you to switch between playback through the EXT 2 AUX I/O scart socket and playback from the DVD recorder.

Connecting additional video recorders

You can connect a video recorder to the EXT 2 AUX I/O socket. If you have an SVHS video recorder you can additionally use the OUT S-VIDEO (V/C) socket and the OUT L AUDIO R sockets.

Please note:

Most pre-recorded video cassettes and DVDs are copy-protected. If you try to copy them you will see the message 'COPY PROTECT' on the DVD recorder's display.

Problem	
<ul style="list-style-type: none"> When copying video cassettes the display on the DVD recorder shows 'NO SIGNAL'. Check that the scart cable is plugged in firmly. The DVD recorder may not be able to recognise the video input signal if this signal is poor or does not comply with relevant standards. When I copy DVD video discs or pre-recorded video cassettes the picture is fuzzy and the brightness varies. This happens if you try to copy DVDs or video cassettes that have been copy-protected. Even though the picture on the TV is fine the recording on DVD-R(W) is faulty. This interference is unavoidable with copy-protected DVDs or video cassettes. 	

Connect camcorder to the front sockets

To copy camcorder recordings, you can use the front sockets. These sockets are located behind the flap on the left hand side.

Best Picture Quality

If you have a DV or Digital 8 camcorder, connect the DV input of the DVD recorder to the appropriate DV output on the camcorder.

Very good Picture Quality

If you have a Hi8 or S-VHS(C) camcorder, connect the S-VIDEO input of the DVD recorder to the appropriate S-VHS output on the camcorder. You must also connect the audio input left AUDIO right on the DVD recorder to the audio output on the camcorder.

Good Picture Quality

If you have a camcorder that only has a single video output (Composite Video, CVBS), connect the VIDEO input on the DVD recorder to the appropriate output on the camcorder. You must also connect the audio input left AUDIO right on the DVD recorder to the audio output on the camcorder.

Connecting audio devices to the analogue audio sockets

Two analogue audio sockets OUT L AUDIO R (audio signal output left/right) are located at the back of the DVD recorder.

These can be used to connect the following:

- a receiver with Dolby-Pro-Logic
- a receiver with two-channel analogue stereo

Can I use the 'Phono' input on my amplifier?

This socket (input) on the amplifier is designed only for record players without preamplifiers. Do not use this input for connecting the DVD recorder. The DVD recorder or the amplifier may be damaged as a result.

Connecting audio devices to the digital audio socket

At the back of the DVD recorder there is a digital audio output socket DIGITAL AUDIO OUT for an coaxial cable.

These can be used to connect the following:


- an A/V receiver or an A/V amplifier with a digital multi-channel sound decoder
- a receiver with two-channel digital stereo (PCM)

Digital multi-channel sound ?

Digital multi-channel sound offers the best possible sound quality. You will need a multi-channel A/V receiver or amplifier that supports at least one of the audio formats of the DVD recorder (Dolby Digital and DTS). Consult the operating instructions for your receiver to find out which audio formats it supports.

Problem


• All I can hear from my loudspeakers is a loud distorted noise
✓ The receiver is not compatible with the digital audio format of the DVD recorder. The audio format of the DVD disc is displayed in the status window when you switch to another language. Playback in stereo digital surround sound is only possible if the receiver has a digital multi-channel sound decoder.

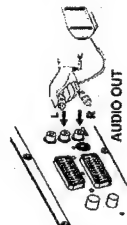

3

Installing your DVD recorder

Initial installation

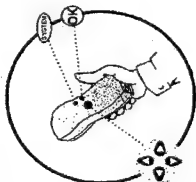

After successfully connecting your DVD recorder to the TV set and other additional devices as described in the previous chapter, this chapter will show you how to start the initial installation. The DVD recorder automatically seeks out and stores all available TV channels.

ENGLISH

Aim correctly with the remote control

In the following section, you will need the remote control for the first time. Aim the remote control at the DVD recorder and not at the TV set.

Connecting additional devices

If you have connected additional devices such as a satellite receiver to the aerial cable, switch them on. The automatic channel search will recognize it and save it.

No aerial connected

Even if you only want to use the DVD recorder to play back or have only connected a satellite receiver, you must still complete the initial installation. This is necessary so that the basic settings are stored correctly. Once initial installation is complete you can use the DVD recorder as normal.

Tip

What is an on-screen menu? The multi-language on-screen menu takes the mystery out of using your new DVD recorder. All settings and/or functions are displayed on your TV screen in the relevant language.

1 Select the desired language for the on-screen menu by pressing ▼ or ▲.

Virgin mode

Menu Language

English
Español
Français
Italiano
Deutsch

Press OK to continue

2 Confirm with OK.

3 Select the desired audio language using ▼ or ▲.

Virgin mode

Audio Language

English
Español
Français
Italiano
Português

Press OK to continue

4 Confirm with OK.

5 Select the desired language for the subtitles by pressing ▼ or ▲.

Virgin mode

Subtitle Language

English
Español
Français
Italiano
Português

Press OK to continue

6 Confirm with OK.

Installing your DVD recorder

21

7 Select the desired screen format position using ▼ or ▲. These settings will only be used if you insert a DVD that contains this information.

Virgin mode

TV Shape

4:3 letterbox
4:3 pascen
16:9

Press OK to continue

Which screen format can I select?

'4:3 letterbox' for widescreen (cinema format) with black borders at the top and bottom of the screen.

4:3 pascen for a full-height picture with cropped edges.
16:9 for a wide-screen TV set (screen edge ratio 16:9)

8 Confirm with OK.

9 Select your country with ▼ or ▲.

Virgin mode

Country

Austria
Belgium
Denmark
Finland
France

Press OK to continue

If your country does not appear, select 'Other'.

Why do I have to set the country?

To call up the specific settings for the respective country, you must first install the country.

10 Confirm with OK.

11 After you connect the aerial (or cable TV, satellite receiver, etc.) to the DVD recorder, press OK.
The automatic TV channel search starts. 'Hifi!' will appear on the display.

Installation

Autom. search

Searching for TV channels

60 Channels found

Bitte warten

* The DVD recorder cannot find any TV stations

✓ Select channel 1 on the TV set. Can you see the stored TV channel on the TV set?
If not, check the cable connection from the aerial (aerial socket) to the DVD recorder and to the TV set.

✓ Please have patience.

The DVD recorder searches the entire frequency range in order to find and store the largest possible number of TV channels. It is possible that the TV channel in your country are broadcast in a higher frequency range. As soon as this range is reached during the search, the DVD recorder will find the TV channel.

✓ If no aerial is connected, complete the basic settings and then, if desired, start the automatic channel search (see section 'Automatic TV channel search').

Problem


12 When the automatic TV channel search is complete, 'Autom. search complete' will appear on the TV screen.
'Time', 'Year', 'Month', 'Date' will appear on the TV screen.

22

Installing your DVD recorder

Manual TV channel search

In some cases, not all of the available TV channels may have been found and stored during initial installation. In this case, you will need to search for and store the missing or coded TV channels manually.

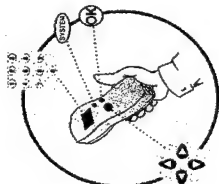

Manual search with EasyLink

With 'Easy Link', the DVD recorder will automatically download the TV channels stored on the TV set. This is why some lines have no function. To store new TV channels, they must first be stored on the TV set. The information will then be transferred to the DVD recorder automatically.

Tip

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press **SYSTEM-MENU** on the remote control. The menu bar appears.
- 4 Select **T1** using **◀** or **▶**.
- 5 Select **'Installation'** using **▼** or **▲** and confirm with **▶**.
- 6 Select **'Manual search'** using **▼** or **▲** and confirm with **▶**.

Installation	
Manual search	
Channel/freq.	CH
City/search	01
Program number	01
TV channel name	BBC1
Decoder	01
TV system	PAL-BG
TV system	01
Fine tuning	0
	To store
	Press OK

- 7 In 'Channel/freq.', select the desired display using **▶**.

What is hidden behind the settings?

- *Freq.: Display of frequencies
- *City: Display of cities
- *SOF: Display of special channels

What is a special channel?


TV signals are transmitted in certain pre-defined frequency ranges. These ranges are divided into channels. A specific frequency/channel is assigned to each TV station. Certain frequency ranges are specified as special channels (hyperband channels).

- 8 In 'Entry/search', enter the frequency or channel of the TV station using the number buttons **0-9**.

*I don't know the channel for my TV station

✓ In this case, press **▶** to start the automatic search. A changing channel number/frequency number will appear on the TV screen. Continue the automatic search until you have found the TV channel you are looking for.

Problem

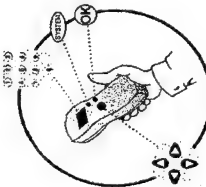

- 9 Using **◀** or **▶** in 'Programme number', select the programme number you want to use for the TV channel, e.g. '01'.

How can I change the displayed symbol of a TV channel?

- 1 In 'TV channel name', press **▶**.
- 2 Select the desired symbol position using **◀** or **▶**.
- 3 Change the symbol at the symbol position with **▼** or **▲**.
- 4 Select the next symbol position in the same way.
- 5 Keep pressing **▶** until the cursor disappears.

Tip

How can I change the TV system of the TV channel?

In 'TV system', use **◀** or **▶** to select the TV system that produces the least distortion of picture and sound.

What is NICAM?

NICAM is a digital sound transmission system. Using NICAM, you can transmit either 1 stereo channel or 2 separate mono channels. However, if you receive a poor and the sound distorted you can turn off NICAM.

In 'NICAM', select Off using **◀** or **▶**.

How can I improve the automatic process for storing channels?

To change the automatic process for storing channels (fine tuning), select 'Fine tuning'.
Using **◀** or **▶** you can try to fine-tune the TV channel manually.

Experts

- 10 Press **OK** to store the TV channel.
- 11 To search for other TV channels, begin again at **9**.
- 12 To end, press **SYSTEM-MENU**.

Sorting TV channels automatically (Follow TV)

When the automatic channel search function is activated, the TV channels are stored in a specific order. This may differ from the order in which the TV channels appear on your TV set. This function changes the order of the TV channels stored in your DVD recorder to match the order on the TV set.

This only works if the DVD recorder (**EXT 1 TO TV-IO socket**) and the TV set are connected with a scart cable.

What does EASYLINK do?

If your TV set supports 'EasyLink...', TV channels will be stored during initial installation in the same order as they appear on the TV set. To store the TV channels in a different order, you'll need to change the order on the TV set. When you start the follow TV function the information is transferred again from the TV set.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.


Automatic TV channel search

During installation, all available TV channels are searched for and stored. If the channel assignments of your cable or satellite TV provider change or if you are reinstalling the DVD recorder, e.g. after moving house, you can start this procedure again. This will replace the stored TV channels with the new ones.



What does Easy Link do?

With EasyLink, you can search for and store TV channels only on the TV set. These settings are accepted by the DVD recorder. Use this function to start the transfer of TV channels from the TV set.

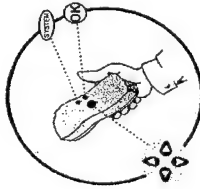

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press **SYSTEM-MENU** on the remote control. The menu bar will appear at the top of the screen.
- 4 Select **TV** using **◀** or **▶**.
- 5 Select line **'Installation'** using **▼** or **▲** and confirm with **▶**.
- 6 Select line **'Autom. search'** using **▼** or **▲**.
- 7 Press **▶**.
- 8 The automatic TV channel search starts. This allows the DVD recorder to save all available TV channels. This procedure may take several minutes.
- 9 When the automatic search is completed, **'Autom. search complete'** will appear on the TV screen.
- 10 To end, press **SYSTEM-MENU**.

Installation
Autom. search
Searching for TV channels
00 Channels found
Bitte warten

You can read about how to search for a TV channel manually in section 'Adding and clearing TV channels manually'.

Installing your DVD recorder

28

ENGLISH

- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press the **SYSTEM-MENU** button on the remote control. The menu bar appears.
- 4 Select **TV** using **◀** or **▶**.
- 5 Select **'Installation'** using **▼** or **▲** and confirm with **▶**.
- 6 Select **'Follow TV'** using **▼** or **▲** and confirm with **▶**.
- 7 Confirm the message on the screen with **OK**. **TV Q1** will appear in the DVD recorder display.
- 8 Select programme number **'1'** on the TV set.

TV Q1



Problem

*1 cannot switch my TV set to programme number '1'
✓ If you have connected additional devices to the **EXT 2 AUX I/O** socket, please disconnect these devices. Other connected devices may have switched the TV set to the programme number of the start socket.

- 9 Confirm with **OK** on the DVD recorder remote control. **'Q1 Q1'** will appear on the display. The DVD recorder compares the TV channels on the TV set and the DVD recorder. If the DVD recorder finds the same TV channel as on the TV set it stores it at 'Q1'.



Problem

*'Q1 Q1' will appear in the display. The DVD recorder is not receiving a video signal from the TV set.
✓ Check the connectors at both ends of the start cable.
✓ Check your TV's operating instructions to see which start socket is used for video signals.
✓ If the problem persists, you won't be able to use this feature. Please read 'Sorting and clearing TV channels manually'.



Tip


- 10 Wait until for example **'Q1 Q2'** appears in the display.
- 11 Select the next programme number on the TV set e.g. **'2'**.
- 12 Confirm with **OK** on the DVD recorder remote control.
- 13 **Deleting sorting**
You can delete incorrect TV channel sorting by pressing **◀**.
- 14 Repeat steps 10 to 12 until you have assigned all the TV channels.
- 15 To end, press **SYSTEM-MENU**.

TV Q2

Installing your DVD recorder

27

Sorting and clearing TV channels manually

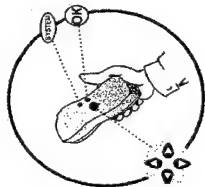

After you have performed the automatic channel search you may not agree with the sequence in which the individual TV channels have been allocated to the programme positions (programme numbers). You can use this function to rearrange the TV channels already stored or to delete TV channels you don't want or those with poor reception.

ENGLISH



The teletext clock resets automatically

If you store a TV channel which transmits TX/TP/C on programme number 'P01', the date and time will automatically be transmitted and constantly updated. As a result, the changes from summer time to winter time and back again will be made automatically.

Tip



What does Easy Link do?

With EasyLink, TV channels can only be searched for and saved on the TV set. These settings are then accepted by the DVD recorder. That is why you cannot select this function manually.

?

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Turn on the DVD recorder. Press the **SYSTEM-MENU** button on the remote control. The menu bar will appear at the top of the screen.
- 3 Select 'TV' using **▲** or **▼**.
- 4 Select line 'Installation' using **▼** or **▲** and confirm with **▶**.
- 5 Select line 'Sort TV channels' using **▼** or **▲** and confirm with **▶**.



Tip

Select the TV channel that you want to delete or whose order you want to change using **▼** or **▲**. Confirm with **▶**.

Deleting TV channels


Unwanted channels or those with poor reception can be deleted using **CLEAR**. After that you can continue at step 6.

Installation	
Sort TV channels	
• P01 BBC1	
• P02 BBC2	
• P03 ITV	
• P04	
• P05	
• P06	
...	
To sort Press :	
To exit press SYSTEM MENU	

Installing your DVD recorder

29

Setting the language/country

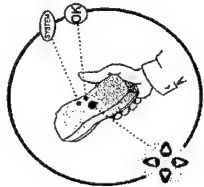

You can select the country and the subtitle language as well as the audio language for DVD playback. Please observe that with some DVDs, you can change the audio language and/or subtitle language only via the DVD disc menu. Moreover, you can set one of the displayed languages for the on-screen menu (OSD). However, the DVD recorder display will only display English text regardless of this setting.


- 8 Using **▼** or **▲**, shift the TV channel to the desired position and press the **4** button. The DVD recorder will insert the TV channel.
- 9 Repeat steps 6 to 8 until you have resorted/deleted all desired TV channels.
- 10 To save, press **OK**.
- 11 To end, press **SYSTEM-MENU**.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press **SYSTEM-MENU** on the remote control. The menu bar appears.
- 4 Select the 'TV' icon using **▲** or **▼**.
- 5 Select 'Language' using **▼** or **▲** and confirm with **▶**.



Tip

- 6 Select the appropriate line and confirm with **▶**.

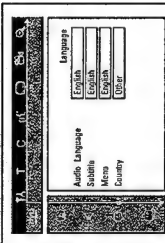

Which settings can I choose?
Audio Language: Physical language (audio language)
Subtitle: Subtitle language
Menu: Language of the OSD menu
Country: Location (country)

Select the appropriate setting using **▼** or **▲** and confirm with **OK**.

- 8 To end, press **SYSTEM-MENU**.


30

Installing your DVD recorder

4

Information on the TV screen

Setting the time and date

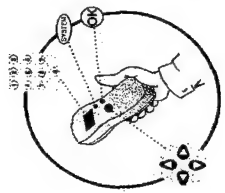

If the display shows an incorrect time or '---', the time and date must be reset manually. If a TV channel which transmits TXT/PDC (teletext/PDC) is stored under programme number '001', the time and date will automatically be taken from the TXT/PDC information.

- 1 Press **SYSTEM-MENU** on the remote control. The menu bar appears.
- 2 Select the **Time** icon using **Left** or **Right**.
- 3 Select **Installation** using **Down** or **Up** and confirm with **Enter**.
- 4 Select **Time/Date** using **Down** or **Up** and confirm with **Enter**.
- 5 Check if the time in **'Time'** is correct. If required, change the time with the number buttons 0..9 on your remote control.
- 6 Check **'Year'**, **'Month'** and **'Date'** in the same way. To move between the fields, use **Down** or **Up**.
- 7 Check the displayed settings and confirm with **OK**. **'Stored'** will appear briefly on the screen.
- 8 To end, press **SYSTEM-MENU**.

Installation

Time/date

Time

20:00

Year

2004

Month

01

Date

01

To exit press

SYSTEM MENU

You can check and change many of the features and settings on your DVD recorder using the system menu. The menu bar cannot be displayed during recording.

Icons in the menu bar

Use the **SYSTEM-MENU** button to call up and close the menu bar (main menu). You can select the appropriate feature using **Left** and **Right**. You confirm a feature using **Enter**. This takes you to a submenu or executes the feature immediately. Depending on the current disc, some features may not be available.

Menu bar 1



User preferences

Title/Track

Chapter/Index

Audio language

Subtitle language

Camera angle

Zoom

Menu bar 2



To display menu bar 2, press **Enter** while menu bar 1 is displayed.

Sound

Frame-by-frame playback

Slow motion

Fast motion

Search by time

Temporary feedback icons

Temporary feedback icons appear in the top left hand corner of the menu bar with information on the different operating modes. This information appears briefly when certain disc features are activated :

	Shuffle, Shuffle play
	Scan
	Repeat entire disc
	Repeat title
	Repeat track
	Repeat chapter
	Repeat from A to end
	Repeat from A to B
	Camera angle
	Child lock active
	Auto resume
	Action not allowed

Status box

The status box displays the current operating mode (status) of the DVD recorder and the current disc type. This display can be switched off.

Disc type icons

	DVD+RW
	DVD+R
	DVD video
	Video CD
	No disc
	Error

Operating mode icons

	Record
	Stop
	Play
	Pause play
	Record pause
	Search forwards (8x speed)
	Search backwards (8x speed)
	Slow motion

Tuner info box

This box appears in the lower left-hand corner of the screen. The aerial signal, the TV channel and name of the TV channel are shown.


	Current channel/selected input socket
	No signal TV channel is not available/additional device is not connected or is switched off
	Copy-protected signal

Timer information box

This box appears above the tuner information box. When a timer recording is set, it shows the timer icon and the start time or date of the first programme to be recorded. If no timer recording is scheduled, the current time is displayed. This box disappears during playback of a disc or after a recording starts.

	Timer starts on the day shown
	OTR recording runs until the stop time displayed
	Current time No timer event programmed

5 Playback

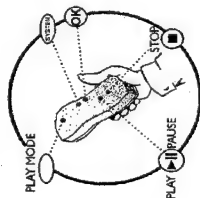


Playback hints

This DVD recorder will play the following systems:

- DVD video
- (Super)Video-CD disc
- DVD-RW disc
- DVD-R Disc
- DVD-RW (videomode, finalised)
- DVD-R
- CD-R
- CD-RW
- Audio CD
- MP3-CD

You can operate the DVD recorder using the remote control or the buttons on the front of the DVD recorder.

Inserting a disc



- 1 Press the **OPEN/CLOSE** button on the front. The disc tray opens. The dialog box shows **OPENING** and then **TRAY OPEN**.
- 2 Insert the disc carefully into the tray, with the label uppermost and press **PLAY/PAUSE** or **OPEN/CLOSE**. The dialog box shows **CLOSING** and then **READING**. The information on the disc is read.


How do I insert a double-sided DVD?

Double-sided discs are not printed on either side. The labelling is in the centre on each side of the disc. The labelling of the side you wish to play must be uppermost.

Opening/closing the tray using the remote control

You can open and close the disc tray using the remote control. Press and hold the **STOP** button on the remote control until the dialog box shows **OPENING** or **CLOSING**.

- 3 Playback begins automatically.



A menu may appear during playback of a DVD. In case titles and chapters are numbered, press a number button on the remote control. You can also select a menu item using **▲** and confirm with **OK**. For further information, read chapter 'Playing a DVD video disc'.



During the playback of a DVD-RW, the index screen overview appears. Choose the title you want to play back using **▲**, **▶**, **◀**, **▼**. Confirm with **OK**. For further information, read chapter 'Playing a DVD-RW/R disc'.



If the playback does not start automatically, press **PLAY/PAUSE** or **II**. For further information, read chapter 'Playing an audio CD'.



If the **■** symbol appears in the display, start playback by pressing **PLAY/PAUSE** or **II**. If a menu appears on the screen, use the remote control buttons indicated on the screen to select the menu option you want (**PREV**=**◀**, **NEXT**=**▶**) or with the number buttons **0..9**. For further information see 'Playing a (Super) Video CD'.

Playing a DVD video disc

PIT will appear on the display

✓ The child lock was activated for the inserted disc. Read section 'Access control' and 'Authorising a disc' and in chapter 'Access control (child lock)'.

*The menu on the screen is showing an 'X'

✓ Some DVD discs can be manufactured so that certain steps are required before the disc can be played, or so that only limited operation is possible during playback. When an 'X' appears on the screen the selected feature is not possible.

*The screen is showing regional code information

✓ Since DVD films are not normally released in all parts of the world at the same time, all DVD players have a specific regional code. Discs can be given a regional code. If the regional codes differ between the player and the disc, playback is not possible.

✓ The regional code is shown on the label on the back of the machine.

✓ The regional code does not apply to recordable DVD discs.

*The screen is prompting me to choose an option from the menu.

✓ Select the option you want using **▲**, **▼**, **◀**, **▶** or the number keys **0..9**.

In some cases you need to confirm with **OK**.

You can also access the menu using **DISC-MENU** on the remote control.



Problem



Tip

How can I access hidden information?

1 Press the **DISC-MENU** button on the remote control. A menu will appear on the screen. For some feature films this may appear after an introductory sequence.

2 Select the option you want using **▲**, **▼**, **◀**, **▶** or the number keys **0..9**. Confirm with **OK**.

Playing an audio CD

You can use your DVD recorder to play audio CDs

- 1 Insert an audio CD. Playback starts automatically.



Tip

Audio CD display

If the TV is on, the audio CD screen appears automatically. During play, the current track number and its elapsed playing time will show on the TV screen and on the recorder display.

- 2 Stop playback using **STOP**. The number of tracks and the total time are displayed.

Playing an MP3 CD

MP3 (MPEG1 Audio Layer-3) files are highly compressed music files. Using this technology the data volume can be compressed by a factor of 10. This means it is possible to record 10 hours of music in CD quality on a single CD-ROM.

When creating MP3 CDs please note the following:

Supported file system: ISO9660, Joliet

Supported formats: *mp3

File names: maximum 64 ASCII characters (jotted)

Maximum of 99 albums, 999 tracks

Supported sampling frequencies: 44.1kHz, 48kHz. Files with lesser than 44.1kHz will be skipped.

Supported bit rate: 32, 64, 96, 128, 192, 256 (kbps)

ID3 Tag: Version 1, i.e. if the version is higher, the directory name is used for the album and the filename for the track.

Important notes for playback:

In agreement with SDMI the digital audio output will not work during MP3 playback. Only the first session of a multi-session CD will play back.

- 1 Insert an MP3 CD. Playback starts automatically.



Tip

MP3 CD display


If the TV is on, the MP3 CD screen appears automatically. During playback, the current track number and its elapsed playing time will show on the TV screen and on the recorder display. During interrupted playback (**STOP**), the current track number will show on the TV screen and on the recorder display. If available in the so-called ID tag, more information will be displayed on album, track and artist.

- 2 Stop playback using **STOP**. The number of albums will be shown in the display.

ENGLISH

Playing a DVD+RW/+R disc

- 1 If playback does not start automatically, press **PLAY/PAUSE**. The display shows: title, chapter, time elapsed.
- 2 To stop the disc, press **STOP** on the remote control or **STOP** on the DVD recorder.
- 3 To eject the disc, press **OPEN/CLOSE** on the front of the DVD recorder.



- 1 If the disc is write-protected or a finalised DVD+R disc, playback starts automatically.

- 2 If playback does not start automatically, select the title you want to watch from the Index Picture Screen using **▼** or **▲**. You can also use the **◀** or **▶** buttons on the front of this set.

- 3 Press **PLAY/PAUSE**. The display shows: title number, recording quality.



Problem

* I see the message "COPYRIGHT" in the display.
✓ There are no recordings on this disc.


- 4 To stop the disc, press **STOP** on the remote control or **STOP** on the DVD recorder.

- 5 To eject the disc, press **OPEN/CLOSE** on the front of the DVD recorder.



What should I note when playing back different recording types (qualities)?
The correct recording quality (HQ(D), SP+SP+), EP(E), EP+EP+) will automatically be selected during playback.

For more information, please read section "Selecting the recording type (Quality)" in chapter "Manual recording".



Additional playback features

Select the previous or next title with **◀** or **▶**.

Choose the previous or the next album using **▲** or **▼**.

Choose the previous or next title with **◀** or **▶**.

You can also use the number buttons 0-9 on the remote control to enter the number of the album/track.

You can also use **TIC** to select titles and albums.

1 Press **TIC** and then select symbol **T** for album or **C** for title with **▶** or **◀**.

2 Select the number of the album/track with **▼**, **▲** or with the number buttons 0-9 on the remote control.

You can also use repeat functions (Button **PLAY MODE**).

Tip

Changing to another title/chapter

If there is more than one title or chapter on the disc, follow the instructions to change to another title or chapter. If there are several chapters within the title, these will be shown. It is possible to select these titles using the menu bar.

- 1 During playback, use the **▶▶** button to move to the next title/chapter. Pressing **◀◀** takes you to the start of the current title or chapter. Pressing **◀◀** twice takes you to the start of the previous title or chapter.

Using TIC (title/chapter)

- 1 Press **TIC** (title/chapter) and select the appropriate title using **▲** or **▼**. Ensure that the **T** (Title) icon is selected in the menu bar.
- 2 Using **TIC** you can select chapters within the title. Press **TIC** and select the **C** (Chapter) icon using **▶**. Select the appropriate chapter using **▲** or **▼**.

Tip

Searching a disc

You can search the disc for a recording at 4x or 12x playback speed. Additional playback speeds are available via menu bar (**▶▶▶**).

- 1 During playback, press and hold **◀◀** (reverse) or **▶▶** (forward) to switch to the search feature. You can switch between the playback speeds using **◀◀** / **▶▶**.
- 2 To continue playback, press **PLAY/PAUSE** **▶▶** II twice at your chosen location.

* No sound

✓ The sound is switched off in search mode. This is not a fault in your machine.

Problem

Search function via menu bar

- 1 During playback, press **SYSTEM-MENU** on the remote control. The menu bar will appear at the top of the screen.
- 2 Select the **▶▶▶** icon using **▶** or **◀** and confirm with **▶**.
- 3 Using **◀** or **▶** you can now select different speeds forwards or backwards.
- 4 If necessary, hide the menu bar using **SYSTEM-MENU**.
- 5 To continue playback, press **PLAY/PAUSE** **▶▶** II.

Tip

Playing a (Super) Video CD

(Super) Video CDs may be equipped with PBC (Play Back Control). This means that special playback functions (menus) can be directly selected. The Video CD must be PBC-compatible (see 'PBC' is turned on by default).

- 1 Insert a (Super) Video CD and press **PLAY/PAUSE** **▶▶** II. If the **■** symbol appears in the display, start playback by pressing **PLAY/PAUSE** **▶▶** II.
- 2 If a menu appears on the screen, use the remote control buttons indicated on the screen to select the menu option you want (PREV=◀◀, NEXT=▶▶) or with the number buttons 0-9. If the PBC menu contains a title list, the desired title can be chosen directly.
- 3 The **RETURN** button will take you back to the previous menu.
- 4 Stop playback using **STOP** **■**.



Problem

- 4 Confirm with OK.

✓ The time entered will flash
✓ The selected title is shorter than the time entered. Enter a new time or end the function using **SYSTEM-MENU**.

- 5 Playback starts before the time entered.

Repeat/Shuffle play

You can mark entire sections or the whole disc for endless playback. Depending on the type of disc (DVD video, DVD-RW, video CD) you can select a chapter, title or the entire disc.

- 1 Select the desired chapter, title or the entire disc and start playback.
- 2 During playback, press **PLAY MODE**. By pressing **PLAY MODE** again you can choose from the following options:
 - 1) **repeat**: repeat chapter – DVD only
 - 2) **title**: repeat title/track
 - 3) **disc**: repeat entire disc (Video CD, Audio CD only)
 - 4) **shuffle**: Shuffle play
 - 5) **display disappears**: no repeat
- 3 To switch off the repeat, press **STOP**.
You can also press **PLAY MODE** repeatedly until the icons disappear.

Repeat sequence (A-B)

You can repeat a certain sequence within a title/chapter. You have to mark the start and end of the desired sequence.

- 1 During playback, press at the start of the sequence **PLAY/PAUSE**.
You see a still picture.
- 2 Press **PLAY MODE** until the 'A-B' icon appears on the screen. This marks the start point.
Press **PLAY/PAUSE** to start playback.
- 3 At the desired end point, press OK. 'A-B' appears on the TV screen. The disc will only play between the selected points.
- 4 To switch off the repeat, press **STOP**.
You can also press **PLAY MODE** repeatedly until the icons disappear.

Still picture

- 1 During playback, press **PLAY/PAUSE** to stop the disc and display a still picture.

Frame-by-frame playback via menu bar

- 1 During the still picture press **SYSTEM-MENU** on the remote control. The menu bar will appear at the top of the screen.
- 2 Select the 'Still' icon using **▶** or **◀** and confirm with **▶** button.
- 3 Using **◀** or **▶** you can now scroll back or forwards one frame at a time.
- 4 If necessary hide the menu bar using **SYSTEM-MENU**.
- 5 To continue playback, press **PLAY/PAUSE**.

Tip

Slow motion

- 1 During playback, press **PLAY/PAUSE** on the remote control. Then hold down **◀** or **▶** to switch to slow motion.
- 2 You can choose between the various speeds using **◀** or **▶**.

Slow motion over the menu bar

- 1 During playback, press **PLAY/PAUSE** on the remote control and then press **SYSTEM-MENU**. The menu bar will appear at the top of the screen.
- 2 Select the 'Slow' symbol using **▶** or **◀** and confirm with **▶**.
- 3 Using **◀** or **▶** you can now select various slow motion speeds backwards or forwards.
- 4 If necessary hide the menu bar using **SYSTEM-MENU**.

Tip

- 3 To continue playback, press **PLAY/PAUSE** twice.

Search by time

Using this feature you can select where playback should start (select elapsed time).

- 1 During playback press **SYSTEM-MENU** on the remote control. The menu bar will appear at the top of the screen.
- 2 Select the 'Time' symbol using **▶** or **◀** and confirm with **▶**. Playback is stopped and a box appears on the screen showing the elapsed time.
- 3 Enter the start time with the digit keys 0-9 from where playback should start.

Scan feature

This feature plays back the first 10 seconds of each chapter (DVD) or track (CD).

- 1 During playback, press **PLAY MODE**. Select **Scan** using **PLAY MODE**.
- 2 After 10 seconds the DVD recorder switches to the next chapter/index. To start playback at the corresponding chapter/index, press **STOP** and then **PLAY/PAUSE**.

Zoom feature

The Zoom feature allows you to enlarge the video image and pan through the enlarged image.

- 1 During playback, press **PLAY/PAUSE**. The DVD recorder switches to **PAUSE**. You will see a still picture.
- 2 Press **SYSTEM-MENU** and select the **Q** icon using **▶**.
- 3 Select the required zoom factor using **▼** or **▲**.
- 4 When **press OK to pan** appears on the screen, the zoom process is complete.
- 5 Press **OK**. Using **▲**, **▼**, **▶**, **◀** select the part of the image you wish to view.
- 6 Confirm with **OK**.
- 7 To stop the feature, press **PLAY/PAUSE** and then **SYSTEM-MENU**.

Camera angle

If a DVD video contains sequences recorded from different camera angles you can change the camera angle for playback.

- 1 During playback, press **PLAY/PAUSE**. You will see a still picture.
- 2 Press **SYSTEM-MENU** and select the **Q** icon using **▶**.

* The **Q** icon is not visible

✓ The selected scene was not recorded from different camera angles. That is why you cannot select this feature. For more information please read the 'cover text' on your DVD video disc.



Problem

Changing the audio language

Pre-recorded DVD videos often come with multiple audio languages. Playback uses the language you selected during initial installation. You can change the audio language of the current disc at any time. You can change the audio language either using the menu of the inserted disc (**DISC-MENU** button) or the menu bar (**SYSTEM-MENU** button). The audio languages for DVD playback in the two menus may be different.

- 1 During playback, press **SYSTEM-MENU** and select the **L** icon using **▶**.
- 2 Select the required audio language using **▼** or **▲**. You can also enter the number directly using the number buttons 0-9.
- 3 Play continues in the new audio language.

Subtitles


Pre-recorded DVD videos often come with subtitles in several languages. Playback uses the language you selected during initial installation. You can change the subtitle language of the current disc at any time.

You can change the subtitle language either using the menu of the inserted disc (**DISC-MENU** button) or the menu bar (**SYSTEM-MENU** button). The subtitle languages in the menus may differ.


- 1 During playback, press **SYSTEM-MENU** and select the **S** icon using **▶**.
- 2 Select the required subtitle language using **▼** or **▲**. You can also enter the number directly using the number buttons 0-9. You can switch off subtitles again with 0 or by pressing **off**.
- 3 Playback continues in the new subtitle language.

7

Manual recording

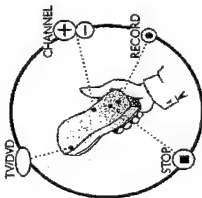

General information



Which discs can I use for recording?


DVD+RW
With this DVD recorder, you can record on two types of DVD:
This disc can be written to and then the contents deleted.

DVD+R
This type of disc can only be recorded once.
If you want to play this DVD in a DVD player it must be finalised using the 'Finalise disc' function. It is not possible to make further recordings using this disc.
If this disc is to be played in a DVD recorder it must not be finalised. Recordings can be added and deleted. The disc space (playback time) from the deleted recording cannot be recovered for further recordings.

Use the 'Manual recording' feature to spontaneously start recording (e.g. to record a TV show already in progress).

In the 'Index Picture screen' select the title to be overwritten or 'Empty title' using **▲** and **▼**.

If you want to record between existing recordings, check the length of the old recording and the length of the new recording. If the new recording is too long, the following recording (title/chapter) will be overwritten.



Tip

Insert new recordings at the end of all existing recordings (Safe Record)

To add a new recording at the end of the last recording on the disc, hold down the **RECIOTR** button until the message **SAFE RECORD** appears on the display.

For DVD+R, discs each new recording is always added at the end of all previous recordings as existing recordings cannot be overwritten.

If you want to start and stop a recording manually, read 'Recording without automatic switch-off'.

If you want to start a recording manually but stop it automatically, read 'Recording with automatic switch-off' (e.g. not to record to the end of the disc)

Read 'Automatic recording from a satellite receiver', if you want a recording to be controlled automatically by a satellite receiver.

Read 'Direct record' if you want to record a programme currently being shown.

Recording without automatic switch-off

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Insert a disc to be used for the recording. The system and content of the disc will be checked. **SYSTEM** will appear on the display.

***Index display**

✓ A DVD+RW disc was inserted that already contains recordings. Use **▲** and **▼** to select a location where the recording should be started.

***EXT1/2/3/4** appears in the display


✓ The inserted DVD disc is empty.

***A dialog box appears asking if the contents should be erased or the disc should be ejected**

✓ The inserted disc is a DVD+RW disc whose contents are not compatible with DVD Video (e.g. a data disc). This disc cannot be used for recordings until the entire disc is erased using the **RECIOTR** button.


***Too many titles** appears on the screen when a recording is attempted

✓ A disc can only contain a max. of 48 titles (including the empty titles). Erase the titles or change the disc.



Problem

- 3 If necessary, switch to the internal tuner on the DVD recorder using the **MONITOR** button on the remote control.
- 4 Select the programme number (station name) you wish to record using **CHANNEL +** or **CHANNEL -**. The following will appear on the display:



Station name

If a TV station transmits a station name it will be shown in the display.

Programme number of the external inputs

EXT1 Start socket at the back **EXT 1 TO TV-40**


EXT2 Start socket at the back **EXT 2 AUX I/O**

CH1 S-VHS/Audio front sockets **S-VIDEO / left AUDIO right**

CH2 Video/audio front sockets **AV VIDEO / left AUDIO right**

Switching between sockets **S-VIDEO** and **VIDEO** is done automatically. In case both sockets are used, the signal received at socket **S-VIDEO** is treated with priority.

CH2 Digital Video (i Link) front socket **DV**



Tip

Recording with automatic switch-off (OTR) - One Touch Recording

- 1 Insert a disc.
- 2 Use **CHANNEL +** or **CHANNEL -** to select the programme number (channel name) you want to record.
- 3 Press **REC/OTR** on the remote control.
- 4 Each time you press **REC/OTR** you will add 30 minutes to the recording time.

How can I cancel the recording time I have just set?

To cancel the entry, press the **CLEAR** button while the recording time is displayed.

Protecting the disc against accidental recording

To prevent an important recording from being accidentally erased, you can protect the entire disc. You can only protect the disc as a whole. It is not possible to protect an individual recording.

What happens with DVD-R discs?

As long as these discs are not finalised, they can be protected against accidental erasure in the same way as DVD-RW discs.

- 1 Insert the disc you wish to protect.
- 2 Press **DISC-MENU**. The Index Picture Screen appears.
- 3 While the Index Picture Screen is displayed, press the **STOP** button on the remote control. The first title is marked.
- 4 Press **▲**. This takes you to the disc info screen.
- 5 Press the **▶** button. Select 'Protection'. Confirm with **▶**.
- 6 Select 'Protected' using **▼** and confirm with **OK**.
- 7 Quit using **◀** and then **DISC-MENU**.

Manual recording

ENGLISH

- 5 To start recording, press **REC/OTR** on the remote control or **RECORD** on the DVD recorder. If you want to start the recording at the end of the existing recordings, hold down the **REC/OTR** button until the message 'SAFE RECC' appears on the display.
For DVD-R discs each new recording is always added at the end of all previous recordings as existing recordings cannot be overwritten. On the display will appear e.g.:

5 1 1454 001
TIME 00:00:00
DATE 00/00/00
CHAPTER 00
SCENE 00
PAGE 00
TOTAL 00

Tip

Inserting chapter markers
During recording it is possible to mark scenes that you want to see or hide later.
During recording press **EDIT** at the relevant location. The screen displays 'Inserting marker'. The 'CHAPTER' number is increased by one in the display box.
For more information on titles and chapters please see the section 'Changing to another title/chapter' in the chapter 'Playback'.

Problem

You can stop recording by pressing **STOP** on the remote control or **STOP** on the recorder. **PAUSE** will appear on the display. The DVD player is preparing the list of contents. Wait until this message disappears in the display, then the recording is completed.

* The display will read 'TIME ERR'
✓ The recording could not be completed correctly because of a disc error. Check and, if necessary, clean the inserted disc.

Tip

Making recordings on DVD-R discs compatible
If you want to play back the recording on a DVD player, you need to finalise the disc in the DVD recorder. You can prepare your DVD for use in a DVD player using the 'Finalising' feature. See the section 'Finalising DVD-R discs' in chapter 'Managing the disc contents'.

Interrupt recording (Pause)

- 1 During recording press **PLAY/PAUSE**, for example to avoid recording the commercials.
- 2 To continue recording press **REC/OTR**.

End recording
To end the recording, press the **STOP** button. Wait until 'PAUSE' disappears from the display.

Manual recording

Selecting the recording mode (quality)

By selecting a recording mode, you define the picture quality of recordings and the maximum recording time for a disc.
You can check the quality by switching to a recording mode and then watch the picture via the built-in tuner (MONITOR button).
For playback, the correct picture quality will automatically be selected.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 On the front of the DVD recorder select the recording quality using **REC MODE**.
You can also use the button **REC. MODE** on the remote control.

Which recording type can I choose?

1/2HQ: HighQuality offers the best picture quality and a recording time of 60 minutes.
SP-SPH: StandardPlay (pre-recorded DVD quality) offers excellent picture quality with a recording time of 150 minutes.
EP-EPH: ExtendedPlay (better than VHS quality). Recording time 240 minutes.
EP-EPH: 6 hours (VHS picture quality). Recording time 360 minutes.



Tip

Can I select the recording type via a menu as well?

- 1 Press the **SYSTEM-MENU** button.
- 2 Select the **TA** symbol with **◀** or **▶**.
- 3 Select **Record settings** using **◀** or **▶** and confirm with **▶**.
- 4 In the line **Rec Mode** select the recording type with **Y** or **▲**.
- 5 Confirm using **OK** and **SYSTEM-MENU**.
- 6 If you have selected the recording type **EP-EPH** or **EP-EPH**, you can select the settings **Standard** (Standard) or **Sport** (fast movements) in the **Filter mode** line.

Automatic recording from a satellite receiver (Sat Recording)

You can use this feature if you own a satellite receiver that can control other devices via a satellite cable and a programming feature (Timer). For more information, please see the operating instructions for the satellite receiver.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **SYSTEM-MENU** on the remote control. The menu bar appears.

ENGLISH

Lining up recordings within a title (assemble cut)

The entire disc is now protected. If you try to record onto this disc the message **Disc locked** will appear in the display and **Disc locked** on the screen.

You can add further recordings to a title already contained on a DVD-RW disc. This recording will be added to the title as a so-called 'chapter'. Existing information will be overwritten from this location onward. Depending on the length of the recording, this will also overwrite titles that follow the current title. The recording mode (quality) is automatically transferred from the current title.

To play back this recording, press **SYSTEM-MENU** and select **C** (chapter) using **▶**. You can also use **T/C**.

For more information, read section 'Changing to a different title/chapter' in chapter 'Playback'.



What happens with DVD-R discs?

New recordings on DVD-R discs can only be added after existing recordings. It is not possible to overwrite existing recordings on DVD-R discs.

- 1 Find the title in the Index Picture Screen where you want to insert the new recording.
- 2 Look at the last minute of the old recording (playback).
- 3 Press **PLAY/PAUSE** **II** on the remote control at the position where the new recording is to go. 'II' will appear on the display.
- 4 To monitor the recording you can switch to the internal tuner using **MONITOR**.
- 5 Now start recording as usual by pressing **REC/OTR** **●** on the remote control.
The new recording will be inserted.
- 6 Stop recording with **STOP** **■**.

***12/11* will appear on the display.**

✓ The DVD recorder is comparing its stored TV channels with those on the TV set. Please do not change the TV channel on the TV set while *12/11* is displayed.

***12/11* appears in the display**


✓ This TV channel could not be found in the DVD recorder's memory. Check that all the TV channels stored on the TV set are available on the DVD recorder. If necessary, store any missing channels. Please read paragraph 'Manual TV channel search' in the chapter 'Installing your DVD Recorder'.

✓ Check the connectors at both ends of the start cable.

✓ Check your TV's operating instructions to see which start socket is used for video signals.

✓ If the problem persists, you won't be able to use this feature.

Stop recording with **STOP** ■.



Problem

Switching 'Direct Record' on or off

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **SYSTEM-MENU** on the remote control. The menu bar appears.
- 3 Select **11** using **◀** or **▶**.
- 4 Select 'Record settings' using **▼** or **▲** and confirm with **▶**.
- 5 Select 'Direct Record' using **▼** or **▲**.
- 6 Select 'On' (Direct Record on) or 'Off' (Direct Record off) using **◀** or **▶**.
- 7 Confirm with **OK**.
- 8 Quit using **SYSTEM-MENU**.
- 9 Switch off with **STANDBY** ○.

- 3 Select **11** using **◀** or **▶**.
 - 4 Select line 'Record settings' using **▼** or **▲** and confirm with **▶**.
 - 5 Select 'Sat record' using **▼** or **▲**.
 - 6 Select 'EXTZ' with **◀** or **▶**.
- Tip**

Switching off 'Sat Recording'

To switch off the feature, select 'Off' using **▶** or **◀**.
- 7 Confirm with **OK**.
 - 8 Use a start cable to connect the start socket **EXT 2 AUX I/O** on the DVD recorder to the corresponding start socket on the satellite receiver.
 - 9 Quit using **SYSTEM-MENU**.
 - 10 Insert a disc that you want to use for recording.
 - 11 Programme the satellite receiver with the required information (programme number of the TV channel, start time, end time). If necessary, please see the operating instructions for your satellite receiver.
 - 12 Switch off the DVD recorder with **STANDBY** ○. '12' appears in the display to show the activated feature.
- The DVD recorder is now ready to record. The beginning and end of the recording is controlled via the start socket **EXT 2 AUX I/O**.


'Direct Record'

Can I instantly record the TV channel I want, even though the DVD recorder is switched off? No problem. If recording is started manually, the DVD recorder, when it is switched off, is set to the current TV channel on the TV set using the start cable. You will find more information on how to switch 'Direct record' on or off in the next section 'Direct Record'.

How does Direct Record work?

The DVD recorder uses the start cable to compare the TV channel selected on the TV set with its stored TV channels. If the same TV channel is found, the DVD recorder switches to the corresponding programme number and starts recording.

During this search please do not change the TV channel on the TV. This may affect the timing of the DVD recorder.




?

- 1 On the TV set, select the programme number you want make the recording from.
- 2 Press **REC/OTR** ● with the DVD recorder switched off.

8

Managing the disc contents

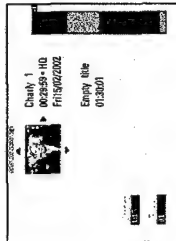

General Information

When a recording is made to disc, the following additional information is also stored at the beginning of the recording:

- Name of the recording
- If the TV station does not transmit a name, only the channel number and time will be stored as the name
- Length of the recording
- Record type (Quality)
- Date of the recording
- Index picture of the recording

A marker will be set every 5-6 minutes if the 'Auto chapters' function is activated in the 'Record settings' menu. This marker is known as a 'chapter'. These markers can be changed when the recording has finished.



Can markers be set on a DVD-R disc?
Markers can be set on these discs if they have not been finalized.

It is also possible to add 'chapters' later. This means that scenes you do not want to see during playback, such as commercials, can be hidden or skipped. During playback you can watch your recording as a continuous sequence without the hidden chapters.

Read section 'Disc settings' to change general settings of the disc.

Read 'Editing recording titles (name)' to find out how to change a name.

Read 'Playing back titles' to find out how to play back the entire recording including the hidden chapters.


Read 'Erasing a recording title' to find out how to erase titles and the accompanying recording.

Read 'Favourite scene selection' to find out how to split the title into chapters and how to manage the chapters.

Editing recording titles (name)

Some TV stations transmit the title (name) of a programme. In this case, the name will be included automatically (e.g. ROCKY). Otherwise, the channel number and time of the recording are stored as the name. The name of the recording can only be changed after the recording has been completed.


- 1 Press the **STOP** button or during playback press **DISC-MENU**.
- 2 Using **▲** or **▼** select the title whose name you want to edit and confirm with **▶**. The menu for editing names appears.
- 3 Select 'Name' using **▲** or **▼** and confirm with **▶**.
- 4 Using **▶** or **◀** select the position where the letter/number/icon is to be changed/re-entered.
- 5 Change the icon using **▲** or **▼**. You can switch between upper and lowercase using **SELECT**. You can delete the character using **CLEAR**.
- 6 Repeat 4 and 5 until you have made the changes you want.
- 7 Save the new name with **OK**. 'Storing name' appears on the TV screen for confirmation.
- 8 To end, press **◀**.

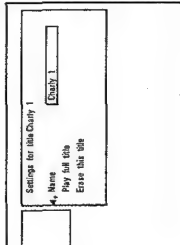

Playing back titles


If you have hidden certain chapters of a title, with this setting you can view the entire title including the hidden chapters. Proceed as follows:

- 1 Press the **STOP** button or during playback press **DISC-MENU**.
- 2 Using **▲** or **▼** select the title that you want to play back and confirm with **▶**. The menu for editing titles appears.
- 3 Select 'Play full title' using **▲** or **▼** and confirm with **OK**.
- 4 Playback begins automatically. The full title — including the hidden chapters — is played back.

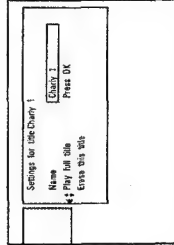

Changing the disc name

- 1 In the Disc Info screen press **▶**. The 'Settings for' menu appears on the TV screen.
- 2 Select 'Disc name' using **▲** or **▼** and confirm with **▶**.
- 3 Using **▶** or **◀** select the position where the letter/number/icon is to be changed/re-entered.
- 4 Change the icon using **▲** or **▼**. You can switch between upper and lowercase using **SELECT**. You can delete the character using **CLEAR**.
- 5 Repeat **3** and **4** until you have made the changes you want.
- 6 Save the new title with **OK**. 'Starting name' appears on the TV screen for confirmation.
- 7 To end, press **◀**.

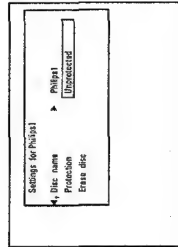

Finalising a disc

Even if one or more titles have been edited, a DVD player may still show the original title. You can prepare your disc so that a DVD player will be able to read the edited title.

- 1 In the Disc Info screen press **▶**. The 'Settings for' menu will appear on the screen.
- 2 Select 'Make edits compatible' using **▲** or **▼** and confirm with **OK**.



Problem


* 'Make edits compatible' does not appear
✓ Your disc is already compatible. No conversion is necessary.
To end, press **SYSTEM-MENU**.

- 3 The screen displays 'This will take...' to show how long the process will last.
- 4 To confirm press **OK**. The screen will show 'Working...'. A bar will move from left to right indicating the progress of the conversion.

Erasing a recording/title

You can erase individual recordings from a disc. Follow the instructions below:

- 1 Press the **STOP** button or during playback press **DISC-MENU**.
- 2 Using **▲** or **▼** select the title to be erased and confirm with **▶**. The menu for editing titles appears.
- 3 Using **▲** or **▼** select 'Erase this title' and confirm with **OK**. The screen will show 'This will completely erase this title'. Press **OK to confirm**.
- 4 If you want to erase the title press **OK**. To end, press **◀**.
- 5 The screen will show 'Erasing title'.
- 6 'Empty title' will now appear in this position in the Index Picture Screen. A new recording can now be made at this position. If the deleted title was very short (shorter than 1 minute) no 'Empty title' will be displayed.

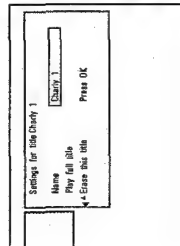

Can titles be deleted from a DVD-R disc?

Titles on DVD-R discs are only marked as deleted. 'Deleted title' will appear in the display instead of 'Empty title'. During playback the 'deleted' title is skipped. The space used for this title cannot be used again as the title has not been physically deleted. Once the disc has been finished no further changes can be made.

Disc settings


This screen appears before the first title and contains general information about the current disc.

You can:

- change the name of the disc
- activate or deactivate write protection on the disc
- Finish editing (make edits DVD compatible)
- Finalising DVD-Rs
- Erasing DVD-RWs

Follow the instructions to get to this screen:

- 1 Press the **STOP** button or during playback press **DISC-MENU**.
- 2 Select the first title using **▲** or press **STOP**.
- 3 Press the **▶** button. The Disc Info screen will appear.

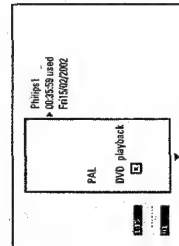

Finalising DVD+R discs

This feature is required to play back a DVD+R disc in a DVD player. Once the disc has been finalised no further recordings or changes can be made.

- 1 In the Disc Info screen press **▶**. The 'Settings for' menu appears on the TV screen.
- 2 Select 'Finalise disc' using **▲** or **▼**, and confirm with **OK**.



Problem

- * 'Finalise disc' does not appear
✓ Either there is no DVD+R disc inserted or the disc is already finalised.
To end, press **SYSTEM-MENU**.
- * 'Settings for' does not appear
✓ If the disc has been recorded on another DVD recorder, the menu may not appear. In this case, use the 'Finalise disc' feature in the **TV** menu, under 'Features'.


- 3 The screen displays 'This will take' to show how long the process will last.
- 4 To confirm press **OK**. 'Working' appears on the TV screen. A bar will move from left to right indicating progress.

Erasing DVD+RW disks

- 1 In the Disc Info screen press **▶**. The 'Settings for' menu will appear on the screen.

- 2 Select 'Erase disc' using the menu buttons **▲** or **▼**. Confirm with the menu button **OK**. The screen will show 'This will erase all titles Press OK to confirm'.

- 3 If you want to erase all titles press **OK**. Otherwise press **◀** to end.
- 4 The screen will show 'Erasing disc'.
- 5 Once the disc has been successfully erased the Index Picture Screen will show the empty area of the disc.

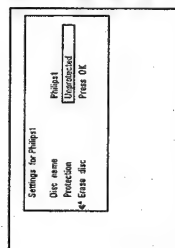

Favourite Scene Selection

In this menu, you can adjust a title to your personal preferences. You can insert/delete chapter markers, hide chapters, select a new index screen, or split the title. Display this menu during playback using **EDIT** on the remote control.

Inserting chapter markers

During playback you can set and erase chapter markers within a title. The maximum number of chapters per disc is 124 and 99 per title. If one of these numbers are reached, the following message appears: 'Too many chapters'. Some markers must be erased before new markers can be added.


- 1 During playback press **EDIT** on the remote control at the appropriate position. The 'Favourite Scene Selection' menu will appear on the screen.



Tip

'X' will appear on the screen:
This DVD is write-protected or the disc is a finalised DVD-R. Subsequent changes cannot be made.

To stop the feature, press **EDIT**.

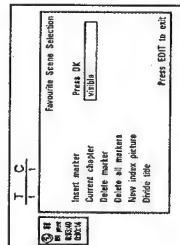

Hiding chapters

By default all chapters are visible. Chapters (such as commercials) can be hidden during playback or made visible again. In editing mode, hidden chapters are shown greyed out.


- 1 During playback of the appropriate chapter press **EDIT** on the remote control. The 'Favourite Scene Selection' menu will appear on the screen.



Tip

How do I select other chapters?
1 Press 'TIC' on the remote control. The title and chapters are shown at the top of the screen.
2 Using **▶** or **◀** select Title(T) or Chapter (C).
3 Using **▲** or **▼** select the title or chapter you wish to edit.

Select 'Current chapter' using **▼**.

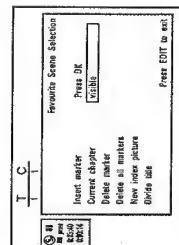

- 3 Using **▶** select 'hidden'. The picture is shown darker.



Tip

Switching quickly
You can switch between show chapters (Visible) and hide chapters (hidden) quickly and easily using SELECT.


- 4 To end, press EDIT.

During playback this chapter will be skipped.
If the chapter is not visible, select 'visible' in step 3 with **▶**.

Erasing chapter markers

You can erase all or some of the markers within a title.

- 1 During playback of the appropriate chapter press **EDIT** on the remote control. The 'Favourite Scene Selection' menu will appear on the screen

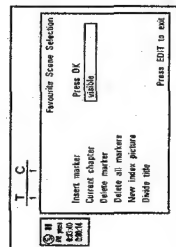

Tip

How do I select other chapters?
4 Press 'TIC' on the remote control. The title and chapters are shown at the top of the screen.
2 Using **▶** or **◀** select Title(T) or Chapter (C).
3 Using **▲** or **▼** select the title or chapter you wish to edit.

- 2 Using **▼** select 'Delete marker' for this chapter or 'Delete all markers' for all chapters within the selected title.


- 3 Confirm with **OK**.

- 4 To end, press **EDIT**.

Changing the index picture

Normally the first picture of a recording is used as the index picture. You can however choose any picture from the recording as the index picture.

- 1 During playback, search for location of the new index picture. Press the **PLAY/PAUSE-II** button.
- 2 Press the **EDIT** button. The 'Favourite Scene Selection' menu appears on the TV screen.

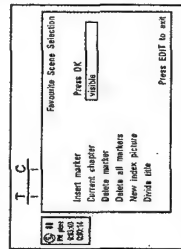

- 3 Select line 'New index picture' and confirm with **OK**.
- 4 Start the change with **OK**. 'Updating menu' appears on the TV screen.

Once the revision has been completed successfully the DVD recorder reverts to the index overview.


Dividing titles

It is possible to divide a title into several separate parts (titles). Each of these parts (titles) is indicated by a separate index picture.
Please note: This division cannot be reversed



Can I also divide titles on DVD-R disc?
As recordings on DVD-R disc cannot be overwritten, it is not possible to divide titles.


- 1 During playback of the appropriate title press **EDIT** on the remote control. The 'Favourite Scene Selection' menu will appear on the screen

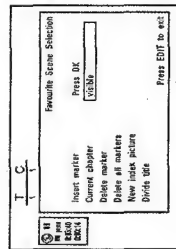

- 2 Select 'Divide title' and confirm with **OK**.
- 3 If you are sure, start the process by pressing **OK**. The screen will show 'Dividing title'.
- 4 Wait until the new title appears with an index picture in the Index Picture overview.

The title is now successfully divided.

9 Programming a recording (TIMER)

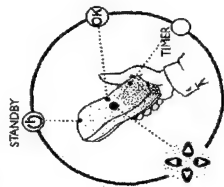

General information

Use programmed recording (TIMER) to automatically start and stop a recording at a later date. The DVD recorder will switch to the right program number and begin recording at the correct time.

With this DVD recorder, you can pre-program up to 6 recordings within a period of one month.

To make a programmed recording, your DVD recorder needs to know:

- the date you want to make the recording
- the program number of the TV channel
- the start and stop time of the recording
- VPS or PDC or on/off
- the recording mode (HQ/SP/LP/EP*)

This information is saved in a TIMER block.

What is VPS/PDC?

VPS (Video Programming System)/ PDC (Programme Delivery Control) are used to control the start and duration of TV channel recordings. If a TV programme starts earlier or ends later than was scheduled, the DVD recorder will still switch itself on and off at the correct time.

What do I need to know about VPS/PDC?

Usually the start time is the same as the VPS or PDC time. But if your TV guide gives a VPS or PDC time which is different from the programme's start time, e.g. '20.15 (VPS/PDC 20.14)', you must enter the VPS/PDC time '20.14' exact to the minutes as the start time.

If you want to programme a time that is different from the VPS or PDC time, you must switch off VPS or PDC.

Only one TV programme on a TV channel can be controlled using VPS/PDC at a time. If you want to record two or more TV programmes on a TV channel using VPS/PDC, you will need to programme these as two separate recordings.



Programming a recording (with 'ShowView')

Thanks to this programming system, you no longer need to tediously enter the date, programme number, start and end times. All the information needed by the DVD recorder for programming is contained in the ShowView® - programming number. This 9-digit ShowView® - number is found in most TV listings magazine.

SHOWVIEW®

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **TIMER** on the remote control.
The programming method last selected is marked.
- 3 Select **ShowView programming** using **▼** or **▲** and confirm with **▶**.

Enter the entire ShowView number. This number is up to 9 digits long and can be found next to the start time of the TV programme in your TV listings magazine.
e.g.: 5-312-4 or 5 312 4

Enter 53124 for the ShowView number.

If you make a mistake, you can clear it with **CLEAR**.



Tip

Selecting daily/weekly recordings

Using **SELECT**, select from the following options:

Mo-Fr: Repeated daily recordings from Monday to Friday.

Weekly: Repeated weekly recordings (every week on the same day).

- 5 Confirm with **OK**.

Timer
ShowView programming

ShowView number
.....

Mo-Fr/Weekly
Press SELECT

To stop
Press OK

* The following message appears on the screen: 'Please enter programme number'

✓ The programme number of the TV channel has not yet been assigned to the ShowView number. Using **▶** and **◀** or the number buttons 0-9 on the remote control, select the corresponding programme number (name) of the TV channel and confirm with **OK**.

* The following message appears on the screen: 'ShowView number wrong'

✓ The ShowView number entered is incorrect. Correct your entry or cancel using the **SYSTEM-MENU** button.

✓ Check the time/date (see 'Setting the time and date' in 'Installing your DVD recorder').

* The following message appears on the screen: 'Weekend programming not possible'

✓ A daily recording was entered for the wrong day. Daily programming can only be used for recordings to be made from Monday to Friday.



Problem

Programming a recording (without ShowView®)

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **TIMER** on the remote control.
The programming method last selected is marked.
- 3 Select **Timer programming** with **▼** or **▲**, and confirm with **▶**.
The current information will appear on the screen.
- 4 Select the input field with **◀** or **▶**.
- 5 Enter information with **▼** or **▲** or with the number buttons **0-9**.

Timer programming		Rec Mode
Date Prog.	Start	End
01	2015	21:30
Mo-Fri/Weekly		To store
Press SELECT		Press OK

Selecting daily/weekly recordings

In 'Date' use **SELECT** to select from the following options:
Mo-Fri: Repeated daily recordings from Monday to Friday.
Mo-Fr: Repeated weekly recordings (every week on the same day, e.g. Monday).
 You can also programme recordings from external sources via start socket **EXT 1 TO TV-IO (EXT1)** or **EXT 2 AUX IO (EXT2)**.
 Switching on 'VPS/PC' in the 'Start' input field.
 Select the 'Start' input field using **TIMER**. Using **SELECT** switch on 'VPS/PC' (* lights up). If you press **SELECT** again, you will switch 'VPS/PC' off (* disappears).
 Changing the recording quality in the 'End' input field.
 Select the 'End' input field using **TIMER**.
 Using **SELECT**, select the recording mode **HQ, SP, EP, EP+.**

Tip

6 If all the information is correct, press **OK**. The programming information is stored in a **TIMER** block.

7 To end, press **TIMER**.

8 Load a DVD (unprotected) ready for recording.
The cassette is being checked.

9 Switch off with **STANDBY**.
The programmed recording will only function properly if the DVD recorder has been switched off using the **STANDBY** button.

If any of the **TIMER** blocks are in use, **Ⓢ** will light up on the display.

6 The decoded information appears after confirmation. You can go back at any time to change the information. Select the appropriate input field using **▶** or **◀**. If required, change the information using **CHANNEL +**, **CHANNEL -** or the number buttons **0-9**.

Timer ShowView programming		Rec Mode
Date Prog.	Start	End
01	2015	21:30
Mo-Fri/Weekly		To store
Press SELECT		Press OK

Switching on 'VPS/PC' in the 'Start' input field.
 Select the 'Start' input field using **▶**. Using **SELECT** switch on 'VPS/PC' (* lights up). If you press **SELECT** again, you will switch 'VPS/PC' off (* disappears).
 Changing the recording quality in the 'End' input field.
 Select the 'End' input field using **▶**. Using **SELECT**, select the recording mode **HQ, SP, EP, EP+.**

7 If all the information is correct, press the **OK** button. The programming information is stored in a **TIMER** block.

8 To end, press **TIMER**.

9 Load a DVD (unprotected) ready for recording.
The current disc is checked.

10 Switch off with **STANDBY**.
The programmed recording will only function properly if the DVD recorder has been switched off using the **STANDBY** button.

If any of the **TIMER** blocks are in use, **Ⓢ** will light up on the display.

How to check, change or delete a programmed recording (TIMER)

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **TIMER** on the remote control.
The programming mode last selected is marked.
- 3 Select 'Timer List' with **▼** or **▲**, and confirm with **▶**.
- 4 Select the programmed recording (TIMER) you want to check, change or delete with **▼** or **▲**.


Timer List

Date Prog.	Start	End	Rec Mode
01	20:15	21:30	SP

Total record time 00:20

To change Press **▶**

To exit Press **TIMER**



Tip

Delete programmed recording

- 1 Press the **CLEAR** button.
- 2 Confirm with **OK**. 'Timer Cleared' will briefly appear on the TV screen.
- 3 '---' appears rather than the displayed values
- 4 To end, press **TIMER**.

- 5 Press **▶**.
Select the input field with **◀** or **▶**.
If required, change the information with **CHANNEL -** or the number buttons 0-9.
- 6 Confirm with **OK**.
- 7 To end, press **TIMER**.
- 8 Switch off with **STANDBY ○**.

'NexTVView Link'

This DVD recorder is equipped with the 'NexTVView Link' function. If your television is also equipped with this feature, you can mark TV programmes on the television for programming. These TV programmes will automatically be transmitted to a TIMER block on the DVD recorder. If you clear this marking on the television, the corresponding TIMER block on the DVD recorder will also be cleared.


For more information, read the instruction manual for your TV set.

Problem solving for programmed recordings

PROBLEM	SOLUTION
DVD recorder is not responding	✓ While a programmed recording is being made, you cannot operate your recorder manually. If you want to cancel the programmed recording, press STANDBY ○ .
'Switch off, timer recording' flashes on the TV screen.	✓ The DVD recorder was switched on several minutes before the start of a programmed recording. Switch off the DVD recorder with STANDBY ○ . A programmed recording (timer) will only function if the DVD recorder is switched off (button STANDBY ○).
Error message: 'Insert recordable disc'	✓ Either no disc has been inserted or you cannot record to this disc. Insert a disc that you can record onto. Switch off the DVD recorder using STANDBY ○ .
The error message 'Disc locked' appears briefly on the screen.	✓ A write-protected disc has been inserted. Cancel the protection (see 'Preventing accidental erasing of discs' in 'Manual Recording') or insert a different disc.
Error message: 'Memory full'	✓ If this error message appears after pressing TIMER , then all the TIMER blocks are already programmed. No more recordings can be programmed. Press the ▶ button. If you want to clear or check a programmed recording (TIMER block), select it with CHANNEL + or CHANNEL - .
The 'Data error' message appears on the screen.	✓ The data for the recording could not be transferred. Please check the date start time and end time of the programmed recording.
'Collision' appears on the screen.	✓ The information for two programmed recordings overlaps. ✓ If you ignore this error message the TV programme with the earlier start time will be recorded first. You will miss the start of the second programme. ✓ Change the information for one of the recordings. ✓ Delete one of the recordings.

10 User preferences


In this section you will learn how to set your user preferences on the DVD recorder. The symbols have the following meanings:

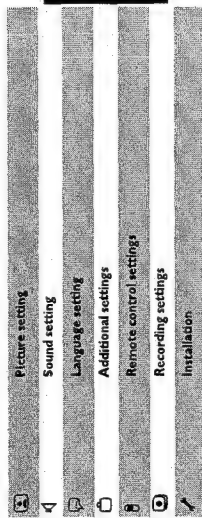

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Press **SYSTEM-MENU** on the remote control. The menu bar appears.
- 3 Select the **TV** icon using **◀** or **▶** and confirm with **▶**.
- 4 Select the appropriate feature using **▼** or **▲** and confirm with **▶**.
- 5 Select the corresponding line using **▼** or **▲** and confirm with **▶**.
- 6 Select the appropriate feature using **▼** or **▲** or the setting using **◀** or **▶**.
- 7 Confirm the setting with **OK**.
- 8 Quit the menu item using **◀**.

Picture settings

You can choose the following features in this menu:

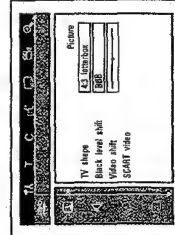

'TV shape'

The picture signal from your DVD Recorder can be set to match your TV screen:

- '4:3 letterbox': for a 'wide-screen' picture with black bars at the top and bottom
- '4:3 pariscan': for a full-height picture with the sides trimmed
- '16:9': for a wide-screen TV set (screen edge ratio 16:9)

'Black level shift'

Adapte the colour dynamics for NTSC playback

'Video shift'

Use this feature to adjust the position of the picture on your TV left or right using **◀**, **▶** to suit your TV set.

'SCART video'

By default the recorder is set to 'RGB'. Select 'S-Video' if you want to connect an S-VHS recorder.

Sound settings

Depending on which audio outputs are used, you can select the settings in this menu. If you only use the analogue audio output (OUT L AUDIO R), select the settings 'Off' in the 'Digital output' menu.

'Digital output'

For devices connected to the DIGITAL AUDIO OUT socket, you can select from the following settings:

'AI': Dolby Digital and DTS signals are fed unaltered to the digital output. MPEG-2 multi-channel signals are converted to PCM (Pulse Code Modulation).
For receivers/amplifiers with digital multi-channel sound decoders.

'PCM only': Dolby Digital and MPEG-2 multi-channel signals are converted to PCM (Pulse Code Modulation).
For receivers/amplifiers without digital multi-channel sound decoders.

'Off': Digital output switched off.

For devices with analogue audio input.

'Analogue output'

For devices connected to the analogue audio output (OUT L AUDIO R), you can select from the following settings:

'Stereo': For devices without DolbySurround or TruSurround. Use this setting if the DVD recorder is only connected to a stereo TV set.

'Surround': Dolby Digital and MPEG-2 multi-channel are mixed down to a DOLBY surround-compatible two-channel output signal. For recorders with Dolby Surround Pro Logic decoder.

'3D sound': The six channels of the digital surround sound (Dolby Digital, MPEG-2) are mixed down to a two-speaker output signal. All original audio information is retained. The result is an impression of being surrounded by several loudspeakers.
For TruSurround compatible devices.

'Night mode'

Night mode optimises the sound for playback at low volume. You are therefore less likely to disturb your neighbours. This only works for Dolby Digital audio on DVD video discs.

Low power standby

To save power, you can switch off the clock display on the DVD recorder. Programmed (TIMER) recordings will still take place.

'On': If the DVD-Recorder is switched off (button **STANDBY** ) the clock display is also switched off.

'Off': If the DVD-Recorder is switched off (button **STANDBY** ) the clock display is visible.

'PBC'

This line appears only if a VCD is loaded.

This function lets you activate or deactivate the PBC menu (Playback Control) for video CDs. See 'Playing a (Super) Video CD'.

Remote Control settings

In this menu you can set the remote control type to which your DVD recorder should respond to.


'DVD player': The DVD recorder responds to a DVD player remote control.

The DVD recorder also responds to the remote control of a DVD player (remote control code RC-6). Choose this setting if your Philips TV remote supports DVD functions.

'DVD recorder': The DVD recorder only responds to the supplied remote control.

Language settings

You can choose the following settings in this menu:

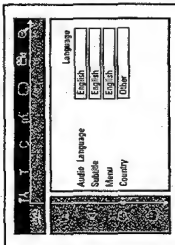

'Audio Language'

Playback audio language **Audio Language'**

'Subtitle'

Subtitle language

'Menu'


Screen menu language

'Country'

'Country'

Additional settings

You can select the following functions in this menu:

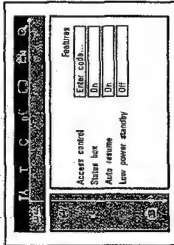

'Access control'

Please read the next chapter 'Access control (child lock)'


'Status box'

Along with the on screen menu, the OSD (On Screen Display) also displays information on the current operating status (counter, playback, recording, TV channel, etc.) on the TV screen. You can switch off the information about the operating status to avoid recording it when recording from additional devices.

'On': The OSD information appears in every selected mode for a few seconds and disappears again.

'Off': The OSD information is switched off. It is no longer displayed on the screen.


Auto resume

If playback of a pre-recorded DVD video disc or video CD is interrupted (button **STOP**  or **OPEN/CLOSE**) when the disc is reloaded (disc is started) playback starts at the precise location where it stopped. This applies not only to the current disc but to the last 20 discs played.

This feature can be switched off if not required.



Access control (Child Lock)

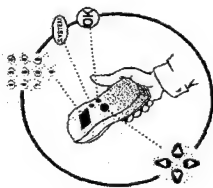

Child lock (DVD and VCD)

This feature enables discs to be locked for children. When Child Lock is on, a 4-digit code (PIN) needs to be entered before a disc can be played. You can also decide whether the inserted disc should always be played or should be played only once, despite the child lock.

*)Play always:

This disc is stored in a memory with space for 50 child-safe discs. If more than 50 discs are stored, the last disc in the list is removed and the new disc is added. The screen shows 'Child safe' at the start of playback.

*)Play once:

This disc is only authorised for single playback. If the recorder is switched off, the PIN code must be re-entered.

Activating/deactivating child lock

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBYON**.
- 3 Press **SYSTEM-MENU**. The menu bar appears.
- 4 Select the **TL** icon using **◀** or **▶**.
- 5 Select 'Features' using **▼** or **▲** and confirm with **▶**.
- 6 Confirm 'Access control' using **▶**.
- 7 Enter a 4-digit code of your choice. Enter the same code again as confirmation.
- 8 Select 'Child lock' using **▲** or **▼** and confirm with **▶**.
- 9 Select the **TL** icon using **▼** or **▲**.
- 10 Confirm with **OK**.
- 11 Quit the feature using **◀** and **SYSTEM-MENU**.

Unauthorised discs can only be played by entering the four-digit PIN code. To deactivate the child lock, select the **TL** icon in **6**.

Authorising a disc

- 1 Insert a disc. The access control box will appear after a short delay.
- 2 Using **▲** or **▼** select 'Play once' or 'Play always'.
- 3 Enter your PIN code using the number buttons 0..9.

Double-sided DVDs may have a different ID for each side. For these discs, each side must be authorised. Multi-volume video CDs may have a different ID for each volume. For these CDs, each volume must be authorised.

Locking unlocked discs

To lock a disc that was formerly authorised follow the instructions below

- 1 Insert a disc. Playback starts automatically. If the playback does not start automatically, press **PLAY/PAUSE ▶ II**.
- 2 Press the **STOP ■** button while the **TL** icon is visible. The icon changes to **TL**. The disc is now locked.

Parental level control (DVD video only)

Films on pre-recorded DVD discs may contain scenes not suitable for children. Therefore, some discs may contain 'Parental Control' rating information that applies to the entire disc or to certain scenes on the disc.

If the disc is rated, scenes are rated from 1 to 8. If such a scene is detected during playback, it compares the scene with the filter value set on the DVD recorder. If the filter value is higher than the setting, an alternative scene is played back where possible.

Activating/deactivating parental level control

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBYON**.
- 3 Press **SYSTEM-MENU**. The menu bar appears.
- 4 Select the **TL** icon using **◀** or **▶**.
- 5 Select 'Features' using **▼** or **▲** and confirm with **▶**.

Changing the PIN code

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press **SYSTEM-MENU**. The menu bar appears.
- 4 Select the **TA** icon using **◀** or **▶**.
- 5 Select **'Features'** using **▼** or **▲** and confirm with **▶**.
- 6 Confirm **'Access control'** using **▶**.
- 7 Enter your four-digit PIN code.
- 8 Select **'Change code'** using **▲** or **▼** and confirm with **▶**.
- 9 Enter the new code using the number buttons 0..9. Enter the same code again as confirmation.
- 10 Quit using **◀** and **SYSTEM-MENU**.



Tip

I have forgotten my code
Press **STOP** four times, then press **OK**. Access control is now switched off. You can now enter a new code as described above.

6 Confirm **'Access control'** using **▶**.

7 Enter a 4-digit code of your choice. If the code is new, you may have to enter the code a second time as confirmation.

8 Select the **'Parental level'** using **▲** or **▼** and confirm with **▶**. A bar appears to select the parental level.

9 Select the appropriate rating using **▼**, **▲** or the number buttons 0..9.

What do the ratings mean?

Rating 0 (displayed as "-") parental control not active.

Rating 1 (suitable for children)

Rating 8 (only suitable for adults)

What happens if a DVD scene contains a higher level than the rating set?

If the recorder does not find a suitable alternative, playback will stop and you must enter the four-digit code.

10 Confirm with **OK**. Quit using **◀** and **SYSTEM-MENU**.




Tip

Changing the country

The set filter values depend on the respective country. It is therefore necessary to enter the country to which these filter values apply.

- 1 Switch on the TV set. If required, select the programme number for the DVD recorder.
- 2 Switch on the DVD recorder using **STANDBY/ON**.
- 3 Press **SYSTEM-MENU**. The menu bar appears.
- 4 Select the **TA** icon using **◀** or **▶**.
- 5 Select line **'Features'** using **▼** or **▲** and confirm with **▶**.
- 6 Confirm the line **'Access control'** using **▶**.
- 7 Enter your four-digit code.
- 8 Select **'Change country'** using **▼** or **▲** and confirm with **▶**.
- 9 Select the corresponding country using **▲** or **▼** and confirm with **OK**.
- 10 To end, press **◀** and then **SYSTEM-MENU**.

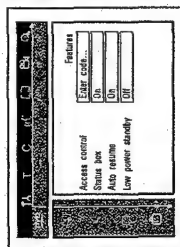

If you have any problems using this DVD recorder, the reason may be one of the following. You can also call the **customer service centre** in your country.
The telephone number can be found on the back of this instruction manual.
Have the model number (MODEL NO) and the production number (PROD.NO) of your recorder ready.
The serial number (PROD. NO.) is printed on the type plate at the back.

ENGLISH

PROBLEM	SOLUTION
Your recorder does not respond to any button being pressed and the display shows 'TV OFF'.	<p>✓Recorder in Initial Installation mode: Switch on the TV, switch over to the DVD recorder socket. Now the menu for language selection should appear. Please read paragraph 'Initial Installation' in the chapter 'Installing your DVD Recorder'.</p> <p>✓'Dealer-Mode' is switched on: All buttons on the front of the set are locked. Switch off the function: <ol style="list-style-type: none"> 1 Pull out the mains plug from the wall outlet. 2 Press and hold down ■STOP and OPEN/CLOSE and put back the mains plug into the wall outlet. 3 As soon as the time or '---' appears in the display (ca. 6 - 10 seconds), release ■STOP and OPEN/CLOSE. </p>
The device does not react when you press a button, although the remote control works:	<ol style="list-style-type: none"> 1 Pull out the mains plug from the wall outlet. 2 Press and hold down ■STOP and OPEN/CLOSE and put back the mains plug into the wall outlet. 3 As soon as the time or '---' appears in the display (ca. 6 - 10 seconds), release ■STOP and OPEN/CLOSE.
Your DVD recorder does not respond to any button being pressed:	<p>✓There is no power supply: check the power supply.</p> <p>✓A programmed recording (Timer) is currently being made. If desired, cancel the programmed recording (Timer) with STANDBY.</p> <p>✓There is a technical problem: disconnect from the mains power supply for 30 seconds, then connect again. If this doesn't help, you can reset your DVD recorder to the default factory settings.</p> <p>✓Important: All the information stored (TV channels, time and date, TIMER) will be lost.</p>
Resetting the machine to the default factory settings	<ol style="list-style-type: none"> 1 Disconnect from the mains power supply. 2 Press and hold down the STANDBY/ON button on the device and reconnect to the mains power supply. 3 Release the STANDBY/ON button when 'TV OFF' appears on the display. All the information stored (TV channels, time and date, TIMER) will be lost. <p>Please read paragraph 'Initial Installation' in the chapter 'Installing your DVD Recorder'.</p>
Remote control does not work:	<p>✓Remote control not pointed toward the DVD recorder: Point the remote control at the machine.</p> <p>✓There is a technical problem: Take out the batteries, wait for 10 seconds and put them in again.</p> <p>✓Batteries are flat: Change the batteries.</p>

PROBLEM	SOLUTION
No playback on DVD recorder:	<p>✓There is no recording on the disc: Change disc.</p> <p>✓You inserted the wrong disc type: Your recorder can play back the following disc types: DVD Video, (Super)Video CD, DVD-R(W), Audio CD, MP3 CDs.</p> <p>✓You inserted the disc the wrong way: Insert the disc with the label facing upwards.</p> <p>✓Disc is dirty: Clean the disc.</p> <p>✓Wrong region code: The region code of the DVD and the DVD recorder must match.</p> <p>✓Parental control is on: Read chapter 'Access control (child lock)'.</p> <p>✓You have selected the wrong programme number for the DVD recorder on the TV: on the TV, select the correct programme number for the DVD recorder.</p> <p>✓The cable connecting the TV set and the DVD recorder has come loose: check the cable.</p>
I cannot playback (Super) Video CDs:	<p>✓It is possible that this (Super) Video CD contains a menu and the 'PBC' is switched off. You can see this in status field 'PBC OFF'. To activate this function, proceed as follows: <ol style="list-style-type: none"> 1 Press SYSTEM-MENU while the (Super) Video-CD is inserted. 2 Select TV using ◀ or ▶. 3 Select line 'Features' using ▼ or ▲ and confirm with ▶. 4 Select 'On' in line 'PBC' using ▼ or ▲. 5 Confirm with OK and end with SYSTEM-MENU. </p>
Poor playback on DVD recorder: (distorted picture/distorted sound)	<p>✓Your TV set is not properly adjusted.</p> <p>✓Disc is dirty: Clean the disc.</p> <p>✓Sometimes the picture may be temporarily distorted. This is not a defect of your DVD recorder.</p>
No recording possible:	<p>✓The TV channel you want to record is not stored or you selected the wrong programme number. Check TV channels stored.</p> <p>✓Disc write-protected (recording protected): Remove write-protection or change the disc. For more information, please see 'Preventing accidental erasing of disc' in chapter 'Manual Recording'.</p> <p>✓An already finalised DVD-R has been inserted: Change disc.</p>
Programmed recording does not work:	<p>✓You have programmed the wrong time or date: Check time/date.</p> <p>✓You have not set the TIMER properly: Check the programmed recordings (TIMER block).</p> <p>✓Locked disc inserted: Remove disc lock.</p> <p>✓An already finalised DVD-R has been inserted: Change disc.</p> <p>✓VPS/PGC switched on but 'VPS/PGCtime' wrong: Enter 'VPS/PGCtime' exactly to the minute. Check the aerial.</p>
The wrong TV channel was decoded (entered) after you programmed a recording using ShowView.	<ol style="list-style-type: none"> 1 Enter the ShowView programming number of the TV channel you want. 2 Confirm with OK. 3 Check the programme number/channel name in the 'Prog.' input field. 4 If this does not correspond to the TV channel you want, select the input field and change the programme number/channel name. 5 Confirm with OK.
There is picture or sound interference on TV reception:	<p>✓Switch to recording mode 'HQ' with REC MODE during playback from the internal TV tuner (MONITOR button). This will help achieve the best possible picture quality.</p> <p>Before recording, select the recording mode as described in chapter 'Manual Recording', section 'Selecting the recording mode (quality)'.</p> <p>✓Have your aerial checked.</p> <p>✓You will find information on how to change the TV system in 'Manual TV channel search' in 'Installing your DVD recorder'.</p>

ENGLISH

PROBLEM	SOLUTION
Distorted sound coming from a connected hi-fi amplifier	<ul style="list-style-type: none"> ✓The DVD recorder is connected to the "Phonoinput" of your amplifier. This socket is provided only for record players without a preamplifier. Select a different audio input.
The picture is distorted or black-and-white during playback	<ul style="list-style-type: none"> ✓The TV system of the disc does not match that of your TV set (PAL/NTSC). ✓The recording can be made in colour only when the TV channels or the connected additional device send a colour signal. Black-and-white signals containing no color information (colour subcarrier) cannot be recorded.
No sound signal at the digital output	<ul style="list-style-type: none"> ✓Check whether the sound settings match the selected inputs and connected additional devices. ✓Check whether you have inserted an MP3 CD in accordance with SDMI (Secure Digital Music Initiative), the digital audio output is turned off during MP3 playback. This is not a defect of your DVD recorder.
A DVD-RW disc cannot be played on certain DVD players	<ul style="list-style-type: none"> ✓If a recording is too short, it is possible that a DVD player cannot detect it. Please observe the following "Minimum recording times": Recording mode "HQ": 5 minutes, "SP+": 15 minutes, "EP+": 20 minutes, "EP-": 30 minutes ✓Some DVD players cannot play back DVD-RW recordings. You can solve this problem by using a special function. You can solve this problem by using a special function: <ol style="list-style-type: none"> 1 Open the disc tray with OPEN/CLOSE. Insert the disc but do not close the tray. 2 Hold down the number button 2 on the remote control until the tray closes. The disc is modified. 3 If this fails to produce the desired result, repeat the procedure using the number button 3 on the remote control. 4 You can restore the disc to its original condition by pressing 1. <p>Warning! There is a risk that you can no longer play the disc on other DVD players after this procedure. Therefore, apply this function with particular care.</p> <ul style="list-style-type: none"> ✓If it is impossible to play back a disc, you can try and "repair" it for new recordings using the following function. This will only prepare the disc for erasing. It will not be erased, however, until the recording has been completed. <ol style="list-style-type: none"> 1 Clean the disc. 2 Open the disc tray with OPEN/CLOSE. Insert the disc but do not close the tray. 3 Hold down CLEAR on the remote control until the tray closes. The disc is prepared for erasing. 4 Start recording as with an empty disc.
Other disc errors	

Before you call an engineer

4. Mechanical Instructions

4.1 Service Positions

4.1.1 Front

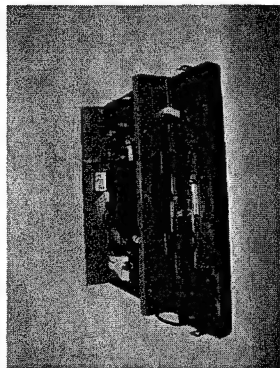


Figure 4-1

4.1.2 DVIO board

To put the DVIO board in a service position, an extender board must be used. This extender board can be ordered with codenumber 3104 128 07770.

DVIO Extender

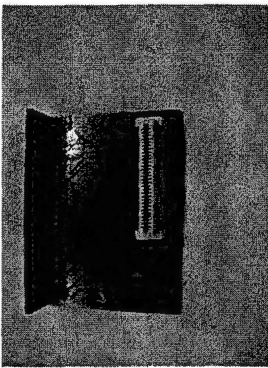


Figure 4-2

DVIO 1

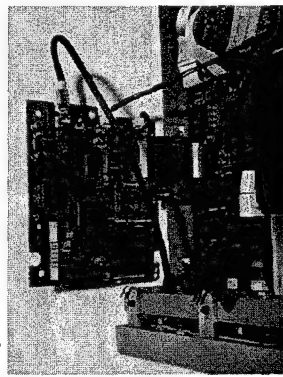


Figure 4-3

DVIO 2

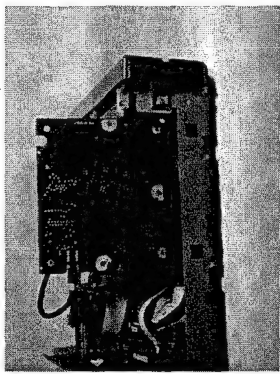


Figure 4-4

4.1.3 Digital board

After demounting of DVIO board, the top side of the digital board is in reach. To reach the bottom side of the digital board, the DVDR module must be demounted together with the digital board. Connected to each other, the assembly can be set in a service position. In this position, the bottom side of the digital board and the servo board are in reach to be serviced.

Digital 1

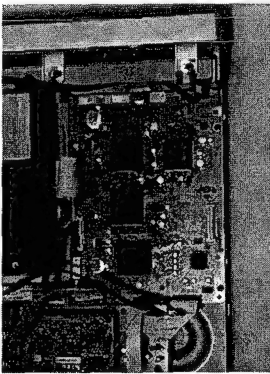


Figure 4-5

Digital 2

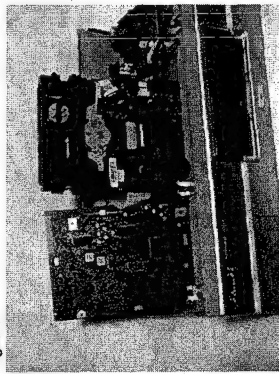


Figure 4-6

4.1.4 Analog board

To put the analog board in service position, demount the assembly of analog board and backplate as follows:

1. Remove the screw from the backplate to the mains inlet of the power supply
 2. Remove the screw safety holder
 3. Remove the 3 screws of the analog board to the frame
 4. Release the snap of the spacer of the analog board to the frame.
- Turn the assembly of the back plate and the analog board against the loader.

Analog Europe

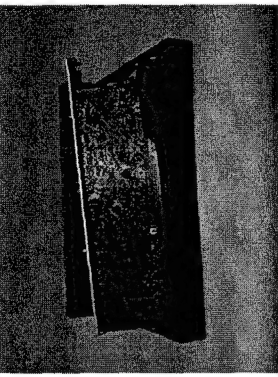


Figure 4-7

Analog NAFTA

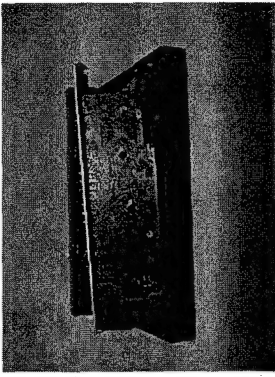


Figure 4-8

4.1.5 Cable Routing

Take care of the correct cable routing. See pictures below.

Europe

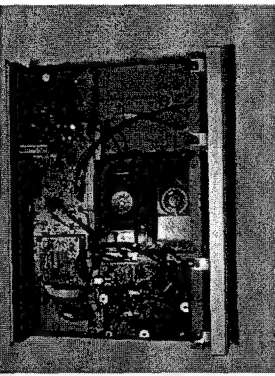


Figure 4-9

NAFTA

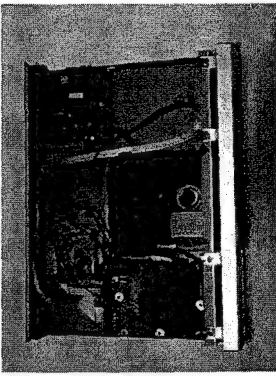


Figure 4-10

4.2 Exploded View of the Set

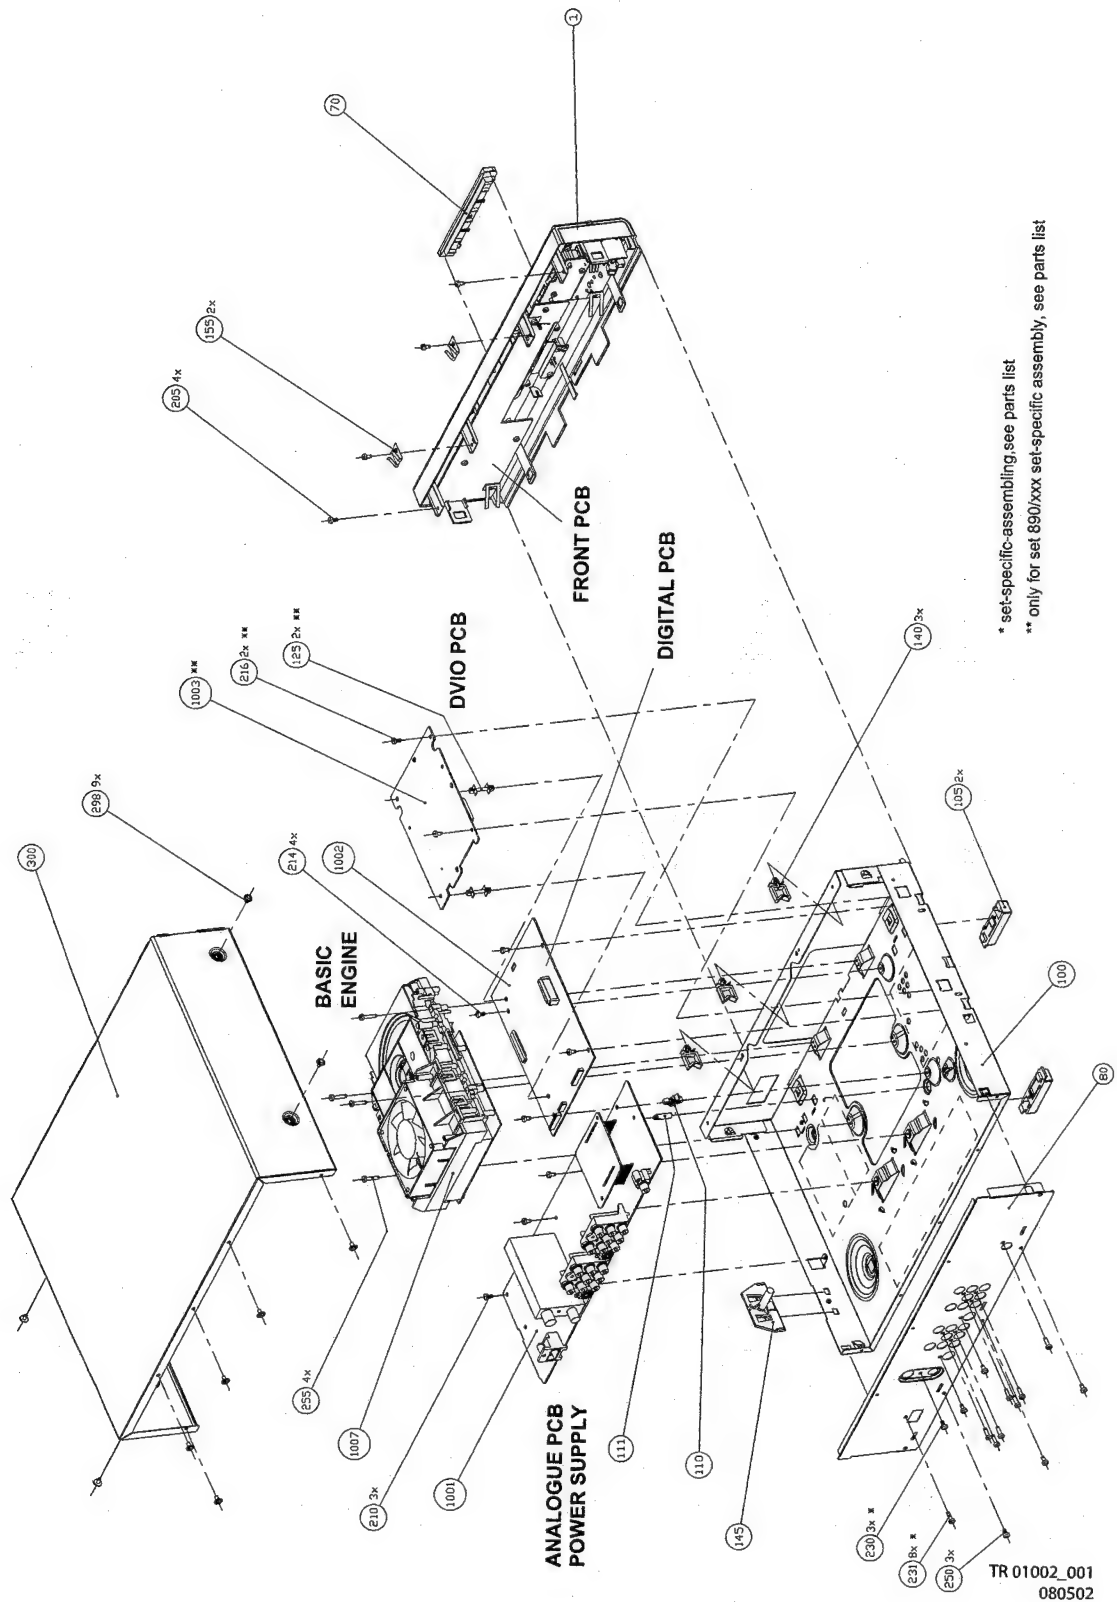


Figure 4-11

4.5 Dismantling Instructions

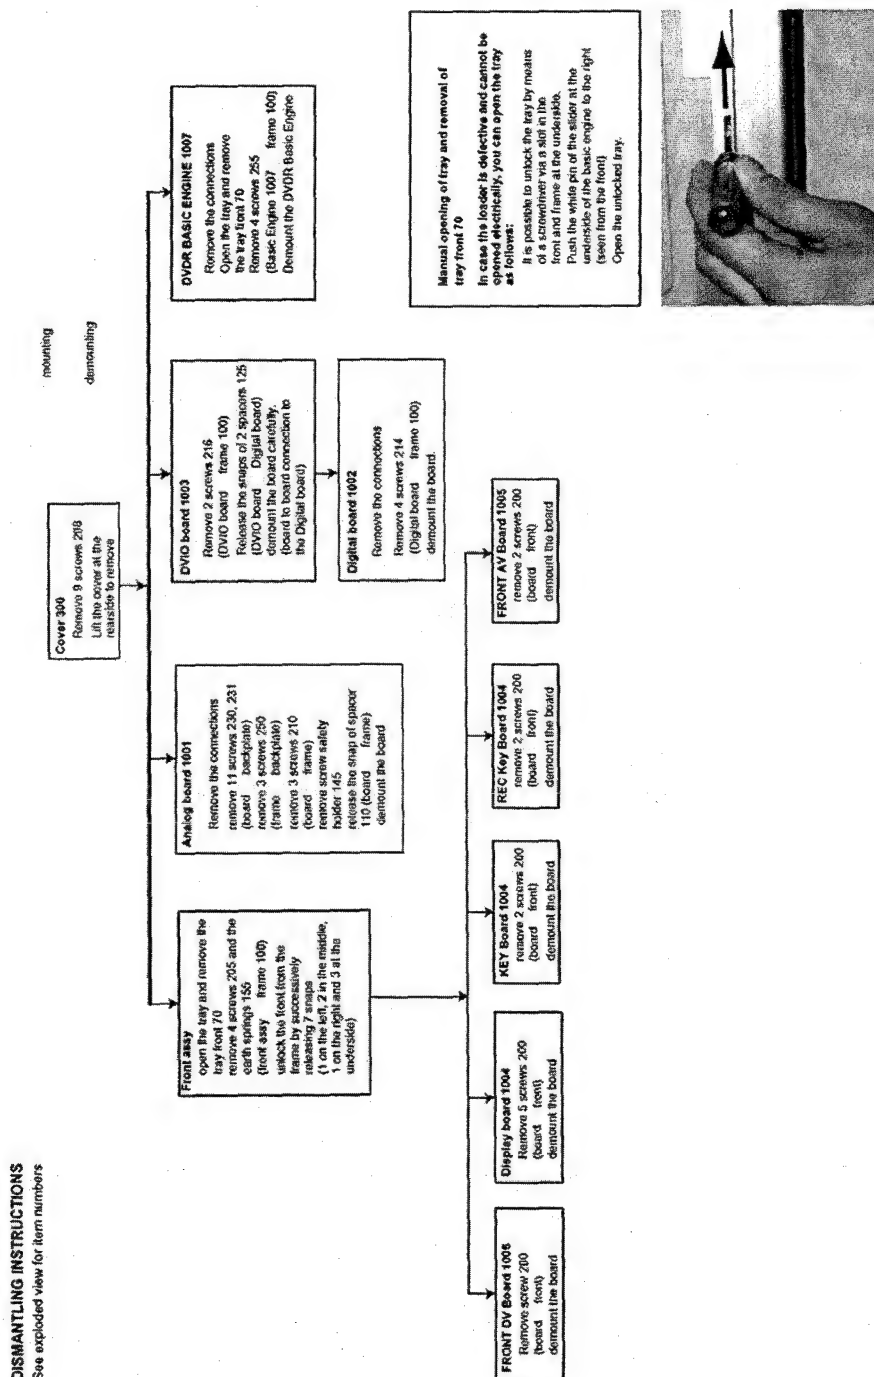


Figure 4-14

TR 01005_001
090502

5. Diagnostic Software

Due to the complexity of the DVD recorder, the time to find a defect in the recorder can become long. To reduce this time, the recorder has been equipped with Diagnostic and Service software (DS). The DS offers functionality to diagnose the DVD/R hardware and tests the following:

- Interconnections between components
 - Accessibility of components
 - Functionality of the audio and video paths
- This functionality can be accessed via several interfaces:
1. End user/Dealer script interface
 2. Player script interface
 3. Menu and command interface

5.1 End User/Dealer Script Interface

5.1.1 Description

The End user/Dealer script interface gives a diagnosis on a stand alone DVD recorder; no other equipment is needed. During this mode, a number of hardware tests (nuclei) are automatically executed to check if the recorder is faulty. The diagnosis is simply a "fail" or "pass" message. If the message "FAIL" appears on the display, there is apparently a failure in the recorder. If the message "PASS" appears, the nuclei in this mode have been executed successfully. There can be still a failure in the recorder because the nuclei in this mode don't cover the complete functionality of the recorder.

5.1.2 Contents

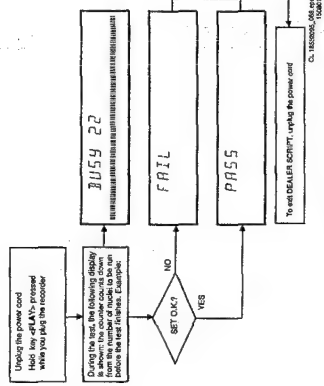


Figure 5-1

The End user/Dealer script executes all diagnostic nuclei that do not need any user interaction and are meaningful on a standalone DVD recorder. The nuclei called in the End user/Dealer script are the following:

Counter	Nucleus Name	Description
22	HostIdSramWr	checks all memory locations of the 4MB SDRAM
21	HostIdSramWr	checks all the DRAM connected to the microprocessor of the digital board
20	HostId2ANvram	checks the data line (SDA) and the clock line (SCL) of the I2C bus between the host decoder and NVRAM
19	SAAT718I2C	checks the interface between the Host I2C controller and the AVENC SAA718 Video Input Processor
18	VideoEncI2C	checks the interface between the host I2C controller and Empress SAA6752
17	AudioEncI2C	checks the I2C connection between the host decoder and Empress SAA6752
16	AudioEncSramAccess	tests the I2C interface lines between the host decoder and the audio encoder
15	AudioEncSramAccess	checks the access of the SRAM by the audio encoder (address and data lines).
14	AudioEncSramWr	tests the SRAM connected to the audio encoder
13	AudioEncInterrupt	tests the interrupt line between the host decoder and the audio encoder
12	VsmAccess	checks whether the VSM interrupt controllers and DRAM are accessible
11	VsmInterrupt	checks both interrupt lines between the VSM and the host decoder
10	VsmSramWr	tests the entire SDRAM of the VSM
9	Clock11_289MHz	switches the A_CLK of the micro clock to 11.2896 MHz
8	Clock12_288MHz	switches the A_CLK of the micro clock to 12.288 MHz
7	BS2Bengine	checks the S2B interface with the Basic Engine by sending an echo command
6	DisplayEcho	checks the interface between the host processor and the slave processor on the display board
5	AnalogueEcho	checks the interface between the host processor and the microprocessor on the analogue board
4	AnalogueNvram	checks the NVRAM on the analogue board
3	AnalogueTuner	checks whether the tuner on the analogue board is accessible
2	LoopAudioUserDealer	This nucleus tests the components on the audio signal path. The host decoder - The analogue board - The audio encoder - The VSM On the analogue board the audio is internally looped back to the digital board
1	LoopVideoUserDealer	Nucleus for testing the components on the video signal system path: - The VIP - The video encoder - The VSM - The host decoder - The analogue board On the analogue the video signal is internally routed back to the digital board.

5.2 Player Script Interface

5.2.2 Structure of the Player Script

5.2.1 Description

The Player script will give the opportunity to perform a test that will determine which of the DVD recorder's modules are faulty, to read the error log and to perform an endurance loop test. To successfully perform the tests, the DVD recorder must be connected to a TV set.

To be able to check results of certain nuclei, the player script expects some interaction of the user (i.e. to approve a test picture or a test sound). Some nuclei (e.g. nuclei that test functionality of the DVD/R module) require that a DVD-RW disc is inserted.

Only tests within the scope of the diagnostic software will be executed hence only faults within this scope can be detected.

The player script consists of a set of nuclei testing the hardware modules in the DVD recorder: the Display PWB, the Digital PWB, the Analogue In/Out PWB and the DVD/R module. Nuclei run by the player test need some user interaction; in the next table this interaction is described. The player test is done in two phases:

- Interactive tests: this part of the player test depends strongly on user interaction and input to determine nucleus results and to progress through the full test. Reading the error log information can be useful to determine any errors that occurred recently during normal operation of the DVD player.
- The loop test will perform the same nuclei as the dealer test, but it will loop through the list of nuclei indefinitely.

STEP	DESCRIPTION	NUCLEUS
1	Press OPEN/CLOSE and PLAY at the same time and POWER ON the recorder to start the playerscript	2
2	The local display shows FPSEGMENTS . Press PLAY to start the test. First the starsburst pattern is lit, then the horizontal segments are lit, followed by the vertical segments and the last test is light all segments test. After each of the 4 tests the user has to confirm that the correct pattern was lit. Press PLAY to confirm that the correct pattern was lit (four times if the FPSEGMENTS test was successful). Press STOP to skip this nucleus.	502
3	The local display shows FLABELS . Press PLAY to start the test. Press PLAY to confirm that all labels are lit. Press RECORD to indicate that not all labels are lit. Press STOP to skip this nucleus.	503
4	The local display shows FLIGHT ALL . Press PLAY to start the test. Press PLAY to confirm that everything was lit. Press RECORD to indicate that not all patterns are lit. Press STOP to skip this nucleus.	520
5	The local display shows FILED . Press PLAY to start the test. Press PLAY to confirm that the led is lit. Press RECORD to indicate that the led is not lit. Press STOP to skip this nucleus.	504
6	The local display shows FFLAP OPEN . Press PLAY to start the test. Press PLAY to confirm that the flap has opened. Press RECORD to indicate that the flap did not open. Press STOP to skip this nucleus.	522
7	The local display shows FPKEYBOARD . Press PLAY to start the test. Attention all keys have to be pressed to get a positive result. Press PLAY for more than one second to confirm that all the keys were pressed and shown on the local display. If not all the keys were pressed, a FAIL message will appear on the local display. Press RECORD for more than one second to indicate that not all keys were pressed and shown on the local display. Press STOP for more than one second to skip this nucleus.	505
8	The local display shows FPREMOTE CONTROL . Press PLAY to start the test. Press PLAY to confirm that a key on the remote control was pressed and shown on the local display. Only one key has to be pressed to get a successful result. Press RECORD to indicate that the key on the remote control was pressed but not shown on the local display. Press STOP to skip this nucleus.	506
9	The local display shows FPDIMMER . Press PLAY to start the test. Press PLAY to confirm that the text on the local display was dimmed. Press RECORD to indicate that the text on the local display was not dimmed. Press STOP to skip this nucleus.	518
10	The local display shows FPBEEPER . Press PLAY to start the test. Press PLAY to confirm that the beeper on the front panel sounded. Press RECORD to indicate that the beeper on the front panel did not sound. Press STOP to skip this nucleus.	514
11	The local display shows FFLAP CLOSE . Press PLAY to start the test. Press STOP to skip this nucleus.	523
12	The local display shows ROUTE VIDEO . Press PLAY to start the test. Press STOP to skip this nucleus.	712
13	The local display shows ROUTE AUDIO . Press PLAY to start the test. Press STOP to skip this nucleus.	713
14	The local display shows COLOUR-BAR ON . Press PLAY to start the test. Press STOP to skip this nucleus.	120

STEP	DESCRIPTION	NUCLEUS
15	The local display shows PINK NOISE ON . Press PLAY to start the test. Press STOP to skip this nucleus.	115
16	The local display shows PINK NOISE OFF . Press PLAY to start the test. Press STOP to skip this nucleus.	116
17	The local display shows SINE ON . Press PLAY to start the test. Press STOP to stop the sine. Press STOP to skip this nucleus.	117
18	The local display shows COLOUR-BAR OFF . Press PLAY to start the test. Press STOP to skip this nucleus.	121
19	The local display shows BERESET . Press PLAY to start the test. Press STOP to skip this nucleus.	603
20	The local display shows BETRAY OPEN . Press PLAY to start the test. Press STOP to skip this nucleus.	616
21	The local display shows BETRAY CLOSE . Press PLAY to start the test. Press STOP to skip this nucleus.	615
22	The local display shows BEWRITE READ . Press PLAY to start the test. Press STOP to skip this nucleus.	617
23	The local display shows BETRAY OPEN . Press PLAY to start the test. Press STOP to skip this nucleus.	616
24	The local display shows BETRAY CLOSE . Press PLAY to start the test. Press STOP to skip this nucleus.	615
25	The local display shows READ ERRORLOG . Press PLAY to start the test. Press STOP to skip this nucleus. If the player test succeeded, the user/dealer script will start in an endless loop. If the player test failed, the local display will display FAIL and the error code	633

Remark

In case of failure, the display shows "FAIL XXXXXX". The description of the shown error code can be retrieved in the survey of Nuclei Error Codes (paragraph 5.4). Once an error occurs, it is not possible to continue the player script. Unplug the set and restart the player script. By pressing the STOP key, it is possible to jump over the failure and to continue the player script.

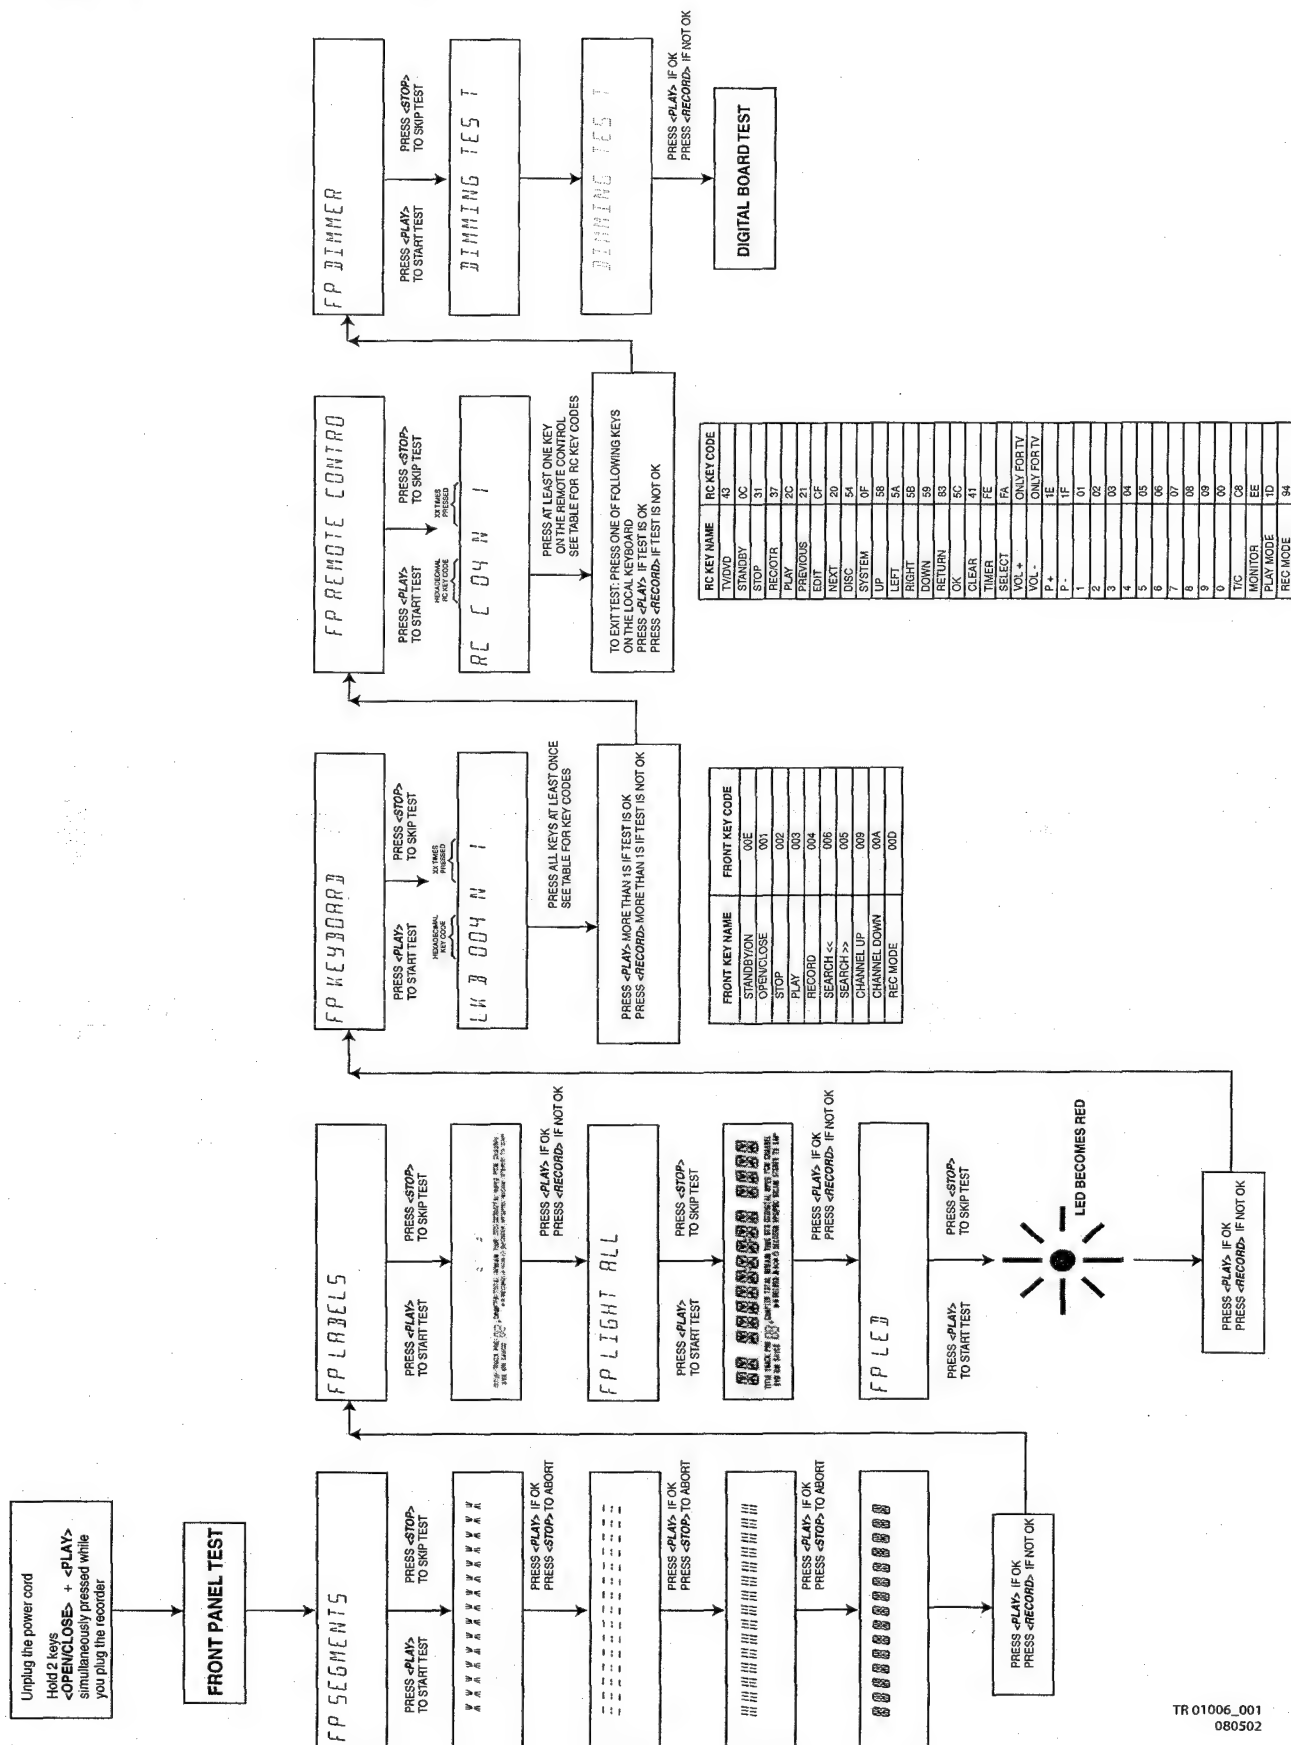
TR 01006_001
080502

Figure 5-2

5.2.4 Trade Mode

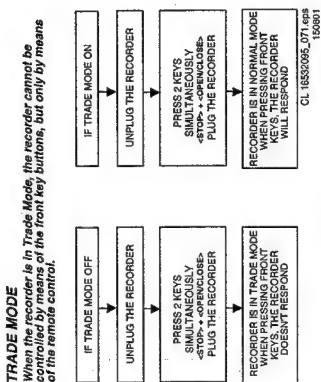


Figure 5-4

5.2.5 Virgin mode

If you want that the recorder starts up in Virgin mode, follow this procedure:

- Unplug the recorder
- plug the recorder again while you keep the STAND BY/ON key pressed
- the set starts up in Virgin mode.

5.3 Menu and Command Mode Interface

5.3.1 Nuclei Numeration

Each nucleus has a unique number of four digits. This number is the input of the command mode.

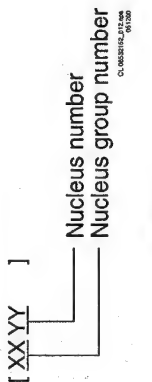


Figure 5-5

The following groups are defined:

Group number	Group name
0	Basic / Scripts
1	Host decoder (SH5505 and memory)
2	Audio / video encoder (DVDR only)
3	VSM (DVDR only)
4	NVRAM
5	Front Panel
6	Basic Engine
7	Analogue board (DVDR only)
8	DVIO (DVDR only)
9	Loop nuclei (DVDR only)
10	Library sub nuclei (I2C nuclei)
11	User interface
12	Fuore (SACD only)
13	DAC (SACD only)
14	Miscellaneous

Figure 5-3

5.2.3 Error Log

Explanation:

The application errors will be logged in the NVRAM. The maximum number of error bytes that will be visible is 19. The last reported error is shown as DND00000000, the oldest visible error as D0000000 UP and the errors in between as DN D0000000 UP. DN stands for DOWN, UP stands for UPWARDS. The shown D error codes are identical to the Nuclei Error Codes (paragraph 5.4).

5.3.2 Error Handling

Each nucleus returns an error code. This code contains six numerals, which means:

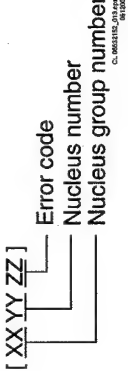


Figure 5-6

The nucleus group numbers and nucleus numbers are the same as above.

5.3.3 Command Mode Interface

Set-Up Physical Interface Components

Hardware required:

- Service PC
 - one free COM port on the Service PC
 - special cable to connect DVD recorder to Service PC
- The service PC must have a terminal emulation program (e.g. OS2 Warp Terminal or Procomm) installed and must have a free COM port (e.g. COM1). Activate the terminal emulation program and check that the port settings for the free COM port are: 19200 bps, 8 data bits, no parity, 1 stop bit and no flow control. The free COM port must be connected via a special cable to the RS232C port of the DVD recorder. This special cable will also connect the test pin, which is available on the connector, to ground (i.e. activate test pin).
- Code number of PC interface cable: 3122 785 90017**

Activation

Plug the recorder to the mains and the following text will appear on the screen of the terminal (program):




Figure 5-7

The first line indicates that the Diagnostic software has been activated and contains the version number. The next lines are the successful result of the SDRAM interconnection test and the basic SDRAM test. The last line allows the user to choose between the three possible interface forms. If pressing C has made a choice for Command interface forms, the prompt ("DD-") will appear. The diagnostic software is now ready to receive commands. The commands that can be given are the numbers of the nuclei.

Command Overview

We provide an overview of the nuclei and their numbers. This overview is preliminary and subject to modifications.

Host Decoder [01]

[xx yy] Number	Nuclei
100	Checksum Flash
101	Flash Write Access 1
102	Flash Write Access 2
103	Flash Write Read
104	SdRam Write Read
105	SdRam Write Read Fast
106	Dram Write Read
107	Dram Write Read Fast
108	Hardware Version
109	Mute On
110	Mute Off
115	Pink Noise On
116	Pink Noise Off
117	Sine On
118	Sine Burst 1KHz
119	Sine Burst 12KHz
120	Colour-bar On
121	Colour-bar Off
122	NvramWr
123	Nvram2c
130	Boot Version
131	Application Version
132	Diagnostics Version
133	Download Version
134	Write / read I2C message to / from digital board
135	Video Test Signal

OnNote: Use nucleus 712 with parameter 07 to route the signals to the analogue board output.

Input: 135 [a] [b]
a: Number of test image,
0: Horizontal colour-bar

1: White
2: Yellow
3: Light blue
4: Green
5: Magenta
6: Red
7: Blue
8: Black

9: Colour triangle (execution time is 12 seconds)
10: Test image for progressive scan (execution time is 6 seconds)

b: Video standard,
0: PAL BDGHI
1: NTSC

136 Video Test Signal Off
137 Macrovision Off

Audio Video Decoder [02]

[xx yy] Number	Nuclei
200	Video Encoder I2C
202	SAAT118 I2C
203	Audio Encoder SRAM Access
204	Audio Encoder Access
205	Audio Encoder SRAM Write Read
206	Audio Encoder Interrupts

[xx yy] Number	Nuclei
207	Audio Encoder I2C
208	SAAT118 select input
209	Empress Version

VSM [03]

[xx yy] Number	Nuclei
300	Register Access
301	SDRAM Access
302	SDRAM Write Read
303	Interrupt lines
304	VSM Interconnection
305	UART

NVRAM [04]

[xx yy] Number	Nuclei
400	Reset
401	Read
402	Modify
403	UniqueN Read
404	Read Error Log
407	Reset Error Log
409	Line2 Region-Code Reset
410	UniqueN Store

Front Panel [05]

[xx yy] Number	Nuclei
500	Echo
501	Version
502	Segment
503	Label
504	Led
505	Keyboard
506	Remote-Control
507	Segment Starburst
508	Segment Vertical
509	Segment Horizontal
514	Beeper
515	Diebar
516	Diebar Dots
517	Vu / Grid
518	Dimmer
519	Blinking
520	Light All Segments
522	Flap Open
523	Flap Close

Basic Engine [06]

[xx yy] Number	Nuclei
600	S2B Pass
601	S2B Echo
602	Version
603	Reset
604	Focus On
605	Focus Off
606	Disc Motor On
607	Disc Motor Off
608	Radial On

[xx yy] Number	Nuclei
609	Radial Off
615	Tray In
616	Tray Out
617	Write Read
618	Write Read Endless Loop
619	Selftest
620	BE Test
621	Laser Test
622	Spindle (Disc) Motor Test
623	Focus Test
624	Sledge Motor Test
625	Sledge Motor Slow
626	Tilt
627	EEPROM Read
628	EEPROM Write
629	Optimise Jitter
630	Radial ATLS Calibration
631	Get Statistics Information
632	Reset Statistics Information
633	BE Read Error Log
634	BE Reset Error Log
638	Get Self Test Result
639	Radial Initialisation
640	Get OPU info

Analog Board [07]

[xx yy] Number	Nuclei
700	Echo
703	Boot Version
704	Hardware Version
705	Clock Adjust
706	Tuner
707	Frequency Download
708	Data Slicer
709	Sound Processor
710	AV Selector
711	Nvram
712	Route Video
713	Route Audio
715	Set Slash Version
716	Application Version
717	Diagnostics Version
718	Download Version
720	Bargraph Level Adjustment
721	Clock correction
722	Clock reference
723	Re-virginise Recorder
724	Flash Checksum
725	Tuner frequency selection
727	Set virgin bit
728	Clear Virgin Bit
729	Write / read I2C message to / from analogue board

Routing Audio and Video**Route Video**

Nucleus Number: 712

Description

This nucleus routes the video signals on the analogue board to the destination determined by the input parameters

[xx yy] Number	Nuclei
730	Store external presets
731	Get slash version
732	AFC Reference Voltage Tuner

DVIO [08]

[xx yy] Number	Nuclei
800	Check DVIO board presence
801	Reset DVIO
802	DVIO Access
803	Get DVIO error codes
804	Get DVIO module Ids
805	Execute DVIO module SelfTestInput: 805 [a] [b]Parameters: a=1/0...full Ram test, b=1/0...cable connected
806	Set DVIO led on.
807	Set DVIO led off.

Loop Nuclei [09]

[xx yy] Number	Nuclei
900	Digital Audio Loop(no function in Gen. 1.5 and Lead)
901	User / Dealer Audio Loop
902	Digital Video Loop
903	Digital Video VBI Loop
904	System Video Loop
905	System Video VBI Loop
906	User / Dealer Video Loop
907	User / Dealer Video VBI Loop
908	System Audio Loop SCART
909	System Audio Loop CINCH
910	Digital DVIO Video Loop
911	System Video Vlp

Miscellaneous [14]

[xx yy] Number	Nuclei
1400	Clock 11.289 MHz
1401	Clock 12.288 MHz
1412	Progressive Scan I2C
1413	Progressive Scan test Image on
1414	Progressive Scan test Image off
1415	Progressive Scan Route Enable
1416	Progressive Scan Route Disable

Scripts [00]

[xx yy] Number	Nuclei
1	UserDealer Script
2	Player Script

The paths that are available for video routing and their description(Europe version):

Path ID	Description
00	Input signal is VIDEO(CVBS) from digital board and will be re-routed back to the digital board.
01	Input signal is from FRONT VIDEO(CVBS) IN and will be routed to the digital board.
02	No Routing.
03	Input signal is from FRONT S-VIDEO(Y/C) and will be routed to the digital board.
04	No Routing.
05	Input signal is CVBS from SCART1 and will be routed to the digital board.
06	Input signal is CVBS from SCART2 and will be routed to the digital board.
07	Input signal is CVBS from Digital Board and it will be routed to SCART1 and SCART2.
08	Input signal is VIDEO(CVBS) from ANTENNA IN and will be routed to SCART2.
09	Input signal is VIDEO(CVBS) from SCART1 and will be routed to SCART2.
10	Input signal is VIDEO(CVBS) from SCART2 and will be routed to SCART1.
11	Signal path is routed Fast Blank from Scart2 pin16 and will be routed Scart1 pin16
12	Input Signal is Y/C from Digital Board and it will be routed to SCART1.
13	No Routing.
14	No Routing.
15	Input Signal is CVBS from TUNER and it will be routed to Digital .
16	No Routing.
17	Input Signal is routed from digital board Y/C to REAR S-VIDEO(Y/C) OUT
18	Input Signal is routed from digital board RGB to RGB SCART1 and from digital board CVBS to digital board CVBS.
19	No Routing.
20	Input RGB Signal is routed from Digital Board to SCART1(RGB) Input CVBS Signal from Digital Board to Digital Board and Fast Blanking Signal from Scart 2 to SCART1.
21	Input Y/C Signal from Digital Board is routed to Rear Y/C Connector and Input Y/c Signal from Front Y/C connector is routed to Digital Board.

The paths that are available for video routing and their description (Natlra region):

PATH ID	DESCRIPTION
00	Input signal is VIDEO(CVBS) from digital board and will be re-routed back to the digital board. A Cinch Cable need to be connected from Rear Cinch Out to Front Cinch In for this Test. (Direct routing on analogue board from YUV In to YUV Out is not Possible)
01	Input signal is from FRONT VIDEO(CVBS) IN and will be routed to the digital board. This routing is same as the above path id.
02	Input signal is from REAR VIDEO(CVBS) IN and will be routed to the digital board.
03	Input signal is from FRONT S-VIDEO(Y/C) IN and the signal received will be routed to the digital board.
04	Input signal is from REAR S-VIDEO(Y/C) IN and will be routed to the digital board.
05	No Routing.
06	No Routing.
07	No Routing.
08	Input signal is VIDEO(CVBS) from TUNER and will be routed to Y Pin of Rear Y/C Connector. This will give only black/White Picture.
09	Input signal is from YUV IN and will be routed to YUV OUT. This is possible only if Digital Board routes back YUV signal received back to the Analogue board(DENC)
10	No Routing.
11	No Routing.
12	No Routing.
13	No Routing.
14	No Routing
15	Input CVBS Signal from Tuner is routed to Digital Board..
16	No Routing
17	Input RGB Signal is routed from Digital Board to RGB Rear Out and Input CVBS Signal is routed from Rear Cinch In 1 to Digital Board(This second step is for routing Input CVBS Signal from Digital Board to Digital Board again - A Cinch cable need to be connected from Rear Cinch Out1 to Rear Cinch In 1)
18	Input Signal from CVBS Rear In is routed to Digital Board. This is same as path id 02.
19	Input Y/C signal from Digital Board is routed to Y/C Rear Out Connector and Input signal from Y/C Rear In Connector is routed to Y/C Digital Board.

23	The Video signal received from the Digital board will be outputted on Modulator channel 3. Please use command 120 for testing Video because Nuclei 120 will generate the Colour Bar signal on the digital Board.
24	The Audio signal received from the Digital board will be outputted on Modulator channel 4. Please use command 120 for testing Video because Nuclei 120 will generate the Colour Bar signal on the digital Board.

Example

DD> 712 01

71200: Video routing on the Analogue Board OK.

Test OK @

Description

This nucleus routes the audio on the analogue board to the destination determined by the input parameters
The paths that are available for audio routing and their description (Europe version)

Route Audio	Nucleus Number: 713	DESCRIPTION
00	PATH ID	No Routing.
01		Input signal is from FRONT AUDIO IN and will be routed to the digital board.
02		Input signal is from REAR AUDIO IN 2 and will be routed to the digital board.
03		Input Audio Signal is routed from FRONT Cinch In to Digital Board. (This is same as path id 01)
04		Input Signal is from Rear Cinch In1 and it will be routed to Digital Board..
05		No routing.
06		No routing.
07		No routing.
08		No Routing.
09		No routing.
10		No Routing.
11		No Routing.
12		No Routing.
13		Input Signal is from Digital Board and it will be routed to the digital board.
14		No routing.
15		Input is Audio Signal from TUNER and it will be routed to Digital Board.
16		Input signal is AUDIO from dvio board and will be routed to Digital Board.
17		No routing.
18		No routing.
19		No routing.
20		Input signal is from REAR AUDIO IN 2 and will be routed to the digital board.
21		Input signal is from REAR AUDIO IN 1 and will be routed to the digital board.
22		Input signal is from REAR AUDIO IN 1 and will be routed to the digital board.
23		The Audio signal received from the Digital board will be outputted on Modulator channel 3. Please use command 117 for testing audio because Nuclei 117 will generate the Audio signal on the digital Board.
24		The Audio signal received from the Digital board will be outputted on Modulator channel 4. Please use command 117 for testing audio because Nuclei 117 will generate the Audio signal on the digital Board.

EXAMPLE

DD> 713 00

71300: Audio routing on the Analogue Board OK.

Test OK @

5.3.4 Menu Mode Interface

Activation

Plug the recorder to the mains and the following text will appear on the screen of the terminal (program):

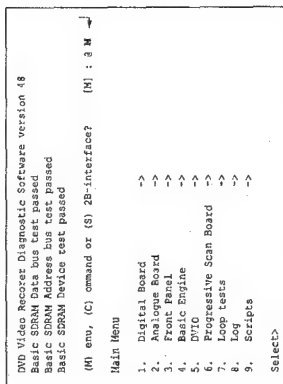


Figure 5-8

The first line indicates that the Diagnostic software has been activated and contains the version number. The next lines are the successful result of the SDRAM interconnection test and the basic SDRAM test. The last line allows the user to choose between the three possible interface forms. If pressing M has made a choice for Menu Interface, the Main Menu will appear.

AVENC Menu	
1. Empress	->
2. Video Input Processors	->
Empress Menu	
1. Version number	
Video Input Processors Menu	
1. SAA7118 I2C Access	
NVRAM Menu	
1. Read Error Log	
2. Reset Error Log	
3. Read DVI/O Unique ID	
Analogue Board Menu	
1. Echo	
2. Obsolete	
3. Route Video Input back to Digital board	
4. Route Audio Input back to Digital board	
5. Flash Checksum	
6. Versions	->
7. Components	->
8. Re-virginize Recorder	->
Analogue Board Versions Menu	
1. Hardware Version	
2. Bootcode version	
3. Application version	
4. Diagnostics version	
5. Download version	
Analogue Components Menu	
1. Tuner	
2. Data Slicer	
3. Sound Processor	
4. AV Selector	
5. NVRAM	
Analogue Board Re-virginize Menu	
1. Re-virginize Recorder	
2. Set Virgin-bit	
3. Clear Virgin-bit	
4. Store external presets	
Front Panel Menu	
1. Echo	
2. Version	
3. Flap Control	
4. Segment Test	
5. Light Labels	
6. Led test	
7. Keyboard test	
8. Remote Control	
9. Beep	
10. Disc Bar	
11. Disc Bar Dots	
12. Yu Grid	
13. Dimmer	
14. Blink	
15. Light All Segments	
Flap Control Menu	
1. Open Flap	
2. Close Flap	
Segment Test Menu	
1. Starburst	
2. Light Horizontal Segments	
3. Light Vertical Segments	
4. Light All Segments	

Basic Engine Menu

- 1.Reset
- 2.52B Pass-through
- 3.S2B Echo
- 4.Focus On
- 5.Focus Off
- 6.Version
- 7.Self Test
- 8.Get Self Test Result
- 9.Basic Engine Test
- 10.Laser Test
- 11.Focus Test
- 12.Tilt Test
- 13.Optimise Jitter
- 14.Statistics Info
- 15.Log
- 16.Spindle Motor
- 17.Radial
- 18.Sledge
- 19.Tray

->
->
->
->
->

Basic Engine Error Log

- 1.Read Error Log
- 2.Reset Error Log

Basic Engine Spindle Motor Menu

- 1.Spindle Motor On
- 2.Spindle Motor Off
- 3.Spindle Motor Test

Basic Engine Radial Menu

- 1.Radial On
- 2.Radial Off
- 3.Radial Initialisation
- 4.Radial ATLS Calibration

Basic Engine Sledge Menu

- 1.Sledge test
- 2.Sledge test slow

Basic Engine Tray Menu

- 1.Tray In
- 2.Tray Out

DVIO Menu

- 1.Check Presence
- 2.Reset
- 3.Access
- 4.Error Codes
- 5.Module Identifiers
- 6.Led

DVIO Led Menu

- 1.Led On
- 2.Led Off

Progressive Scan Board Menu

- 1.I2C Access
- 2.Test Image On
- 3.Test Image Off

Loop Tests Menu

- 1.Digital Board Loops
- 2.User/Dealer Loops
- 3.System Loops
- 4.Basic Engine Loops

Digital Board Loops Menu

- 1.Obsolete
- 2.Digital Video Loop
- 3.Digital Video Loop VBI

User/Dealer Loops Menu

- 1.User/Dealer Audio Loop
- 2.User/Dealer Video Loop
- 3.User/Dealer Video Loop VBI

System Loops Menu

- 1.System Video Loop
- 2.System Video Loop VBI
- 3.System Audio Loop SCART(EURO)
- 4.System Audio Loop CINCH (NAFTA)

Basic Engine Loops Menu

- 1.Basic Engine write read
- 2.Basic Engine write read endless loop

Log Menu

- 1.Read Error Log
- 2.Reset Error Log

Script Menu

- 1.User/Dealer Script
- 2.Player Script

5.4 Nuclei Error Codes

In the following table the error codes will be described.

Error Nr	Error String
10000	"Checksum is OK"
10001	"segment name Checksum doesn't match" or "segment name segment not found"
10100	""
10101	"FLASH 1 Write access test failed"
10200	""
10201	"FLASH 2 Write access test failed"
10300	""
10301	"FLASH write test failed"
10302	"FLASH write command failed"
10303	"FLASH write test done max. number of times"
10400	""
10401	"HostDec SDRAM Memory data bus test goes wrong."
10402	"HostDec SDRAM Memory address bus test goes wrong."
10403	"HostDec SDRAM Physical memory device test goes wrong."
10500	""
10501	"HostDec SDRAM Memory data bus test goes wrong."
10502	"HostDec SDRAM Memory address bus test goes wrong."
10503	"HostDec SDRAM Physical memory device test goes wrong."
10600	""
10601	"HostDec DRAM Memory data bus test goes wrong."
10602	"HostDec DRAM Memory address bus test goes wrong."
10603	"HostDec DRAM Physical memory device test goes wrong."
10700	""
10701	"HostDec DRAM Memory data bus test goes wrong."
10702	"HostDec DRAM Memory address bus test goes wrong."
10703	"HostDec DRAM Physical memory device test goes wrong."

Error Nr	Error String
10800	"Host Decoder version(cut) number: version number""Digital hardware version"
10801	"Can not find version in FLASH."
10900	""
10901	"Error muting audio"
11000	""
11001	"Error demuting audio"
11500	""
11501	"Init of I2C failed"
11502	"The selection of the clock source failed"
11504	"The demute of the audio failed"
11600	""
11601	"Init of I2C failed"
11602	"The mute of the audio failed"
11700	""
11701	"Init of I2C failed"
11702	"The muting of the audio failed"
11703	"The demute of the audio failed"
11704	"The selection of the clock source failed"
11707	"Setup of Front panel failed"
11708	"Setup of Front panel keyboard failed"
11800	""
11801	"Init of I2C failed"
11802	"The muting of the audio failed"
11803	"The demute of the audio failed"
11804	"The selection of the clock source failed"
11805	"Error cannot start VSM audio in port"
11900	""
11901	"Init of I2C failed"
11902	"The muting of the audio failed"
11903	"The demute of the audio failed"
11904	"The selection of the clock source failed"
11905	"Error cannot start VSM audio in port"
12000	""
12001	"Invalid input"
12100	""
12200	""
12201	"I2C bus busy before start"
12202	"NVRAM access time-out"
12203	"No NVRAM acknowledge"
12204	"NVRAM time-out"
12205	"NVRAM Write/Read back failed"
12300	""
12301	"I2C bus busy before start"
12302	"NVRAM read access time-out"
12303	"No NVRAM read acknowledge"
12304	"NVRAM read failed"
13000	"Bootcode application version : bootversion"
13001	"Can not find version in FLASH"
13100	"Recorder application version : recordversion"
13101	"Can not find version in FLASH"
13200	"Diagnostics application version : diagversion"
13201	"Can not find version in FLASH"
13300	"Download application version : downloadversion"
13301	"Can not find version in FLASH"
13700	""
13701	"Turning off MacroVision failed"
20000	""
20001	"I2C bus busy before start"
20002	"Video Encoder access time-out"
20003	"No acknowledge from Video Encoder"

Error Nr	Error String
20004	"No data send/received to or from Video Encoder"
20005	"SAA7118 VIP can not be initialised"
20200	""
20201	"I2C bus busy before start"
20202	"SAA7118 VIP access time-out"
20203	"No acknowledge from SAA7118 VIP"
20204	"No data received from SAA7118 VIP"
20300	""
20301	"Error audio encoder SRAM access cannot initialise I2C"
20302	"Error audio encoder SRAM access cannot reset DSP through I2C"
20303	"Error audio encoder SRAM access cannot download boot"
20304	"Error audio encoder cannot download test code"
20305	"Error audio encoder cannot obtain result of test"
20306	"Error audio encoder SRAM access stuck-at-zero data line"
20307	"Error audio encoder SRAM access stuck-at-one data line"
20308	"Error audio encoder SRAM access stuck-at-one address line"
20309	"Error audio encoder SRAM access address line address line x is connected to data line data line y"
20310	"Error audio encoder SRAM access address lines address line x and address line y are connected"
20311	"Error audio encoder SRAM access data lines data line x and data line y are connected"
20312	"Error audio encoder SRAM access illegal data received"
20400	""
20401	"Error audio encoder access cannot initialise I2C"
20402	"Error audio encoder access cannot reset DSP through I2C"
20403	"Error audio encoder accessing ICR register"
20404	"Error audio encoder access stuck-at-zero of data line"
20405	"Error audio encoder access stuck-at-one of data line"
20406	"Audio encoder access data lines data line x and data line y are interconnected"
20500	""
20501	"Error audio encoder SRAM WRR cannot initialise I2C"
20502	"Error audio encoder SRAM WRR cannot reset DSP through I2C"
20503	"Error audio encoder WRR cannot download boot"
20504	"Error audio encoder cannot download test code"
20505	"Error audio encoder SRAM WRR cannot obtain result of test"
20506	"Error audio encoder WRR SRAM stuck-at-zero data bit"
20507	"Error audio encoder WRR SRAM stuck-at-one data bit"
20508	"Error audio encoder WRR SRAM data lines data line x and data line y are connected"
20509	"Error audio encoder WRR SRAM illegal data received"
20600	""
20601	"Error audio encoder interrupt cannot initialise I2C"
20602	"Error audio encoder interrupt cannot reset DSP through I2C"
20603	"Error audio encoder cannot download test code"
20604	"Error occurred accessing VSM"
20605	"Audio encoder interrupt not received"

Error Nr	Error String	Error Nr	Error String
20606	"Error occurred while activating the encoder"	30203	"VSM SDRAM Bank1 Physical memory device test goes wrong."
20607	"Error audio encoder interrupt cannot initialise empress"	30204	"VSM SDRAM Bank2 Memory databus test goes wrong."
20608	"Error occurred while getting interrupt reason"	30205	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
20700	"Error occurred while getting interrupt reason"	30206	"VSM SDRAM Bank2 Physical memory device test goes wrong."
20701	"Error audio encoder I2C cannot reset DSP through I2C"	30300	"VSM interrupt register A has a -stuck at- error for value."
20702	"Error audio encoder cannot download boot"	30301	"VSM interrupt register B has a -stuck at- error for value."
20703	"Error audio encoder cannot download TEST code"	30302	"VSM interrupt register B has a -stuck at- error for value."
20704	"Error audio encoder I2C bus busy"	30303	"Interrupt A wasn't raised."
20705	"Error audio encoder I2C cannot write slave address"	30304	"Interrupt B wasn't raised."
20706	"Error audio encoder I2C no acknowledge received"	30305	"Interrupts A and B were raised."
20707	"Error audio encoder I2C cannot send/receive data"	30400	"VSM SDRAM Bank1 Memory databus test goes wrong."
20708	"Error audio encoder received data through I2C was invalid"	30401	"VSM SDRAM Bank1 Memory databus test goes wrong."
20800	"I2C access failed."	30402	"VSM SDRAM Bank1 Memory addressbus test goes wrong."
20801	"SAAT118 VIP can not be initialised."	30403	"VSM SDRAM Bank1 Physical memory device test goes wrong."
20802	"Invalid input"	30404	"VSM SDRAM Bank2 Memory databus test goes wrong."
20803	"B1 B2 B3 B4 B5 B6 B7 B8 B9 B10 B11 B12"	30405	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
20901	"Firmware download of EMPRESS failed"	30406	"VSM SDRAM Bank2 Physical memory device test goes wrong."
20902	"I2C bus busy before start"	30500	"Communication with the analogue board fails."
20903	"EMPRESS access time-out"	30501	"Echo test to analogue board returned wrong string."
20904	"No data received from the EMPRESS"	30502	"VSM SDRAM Bank1 Physical memory device test goes wrong."
20905	"No data send to the EMPRESS"	40000	"VSM SDRAM Bank2 Physical memory device test goes wrong."
30000	"No data received from the EMPRESS"	40001	"VSM SDRAM Bank1 Memory databus test goes wrong."
30001	"VSM SDRAM Bank1 Memory databus test goes wrong."	40100	"VSM SDRAM Bank1 Memory addressbus test goes wrong."
30002	"VSM SDRAM Bank1 Memory addressbus test goes wrong."	40101	"VSM SDRAM Bank2 Memory databus test goes wrong."
30003	"VSM SDRAM Bank1 Physical memory device test goes wrong."	40102	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
30004	"VSM SDRAM Bank2 Memory databus test goes wrong."	40200	"VSM SDRAM Bank1 Memory databus test goes wrong."
30005	"VSM SDRAM Bank2 Memory addressbus test goes wrong."	40201	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
30006	"VSM SDRAM Bank2 Physical memory device test goes wrong."	40202	"VSM SDRAM Bank1 Memory databus test goes wrong."
30007	"VSM SDRAM Bank1 VSM interrupt register A has a -stuck at- error for value."	40300	"VSM SDRAM Bank2 Physical memory device test goes wrong."
30008	"VSM SDRAM Bank2 VSM interrupt register A has a -stuck at- error for value."	40301	"VSM SDRAM Bank1 VSM interrupt register A has a -stuck at- error for value."
30100	"VSM SDRAM Bank1 Memory databus test goes wrong."	40400	"VSM SDRAM Bank2 VSM interrupt register A has a -stuck at- error for value."
30101	"VSM SDRAM Bank1 Memory databus test goes wrong."	40401	"VSM SDRAM Bank1 VSM interrupt register A has a -stuck at- error for value."
30102	"VSM SDRAM Bank1 Memory addressbus test goes wrong."	40402	"VSM SDRAM Bank2 VSM interrupt register A has a -stuck at- error for value."
30103	"VSM SDRAM Bank1 Physical memory device test goes wrong."	40403	"VSM SDRAM Bank1 VSM interrupt register A has a -stuck at- error for value."
30104	"VSM SDRAM Bank2 Memory databus test goes wrong."	40700	"VSM SDRAM Bank1 Memory databus test goes wrong."
30105	"VSM SDRAM Bank2 Memory addressbus test goes wrong."	40701	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
30106	"VSM SDRAM Bank2 Physical memory device test goes wrong."	40900	"VSM SDRAM Bank1 Memory databus test goes wrong."
30200	"VSM SDRAM Bank1 Memory databus test goes wrong."	40901	"VSM SDRAM Bank2 Memory addressbus test goes wrong."
30201	"VSM SDRAM Bank1 Memory addressbus test goes wrong."	41000	"VSM SDRAM Bank1 Physical memory device test goes wrong."
30202	"VSM SDRAM Bank1 Memory addressbus test goes wrong."	41001	"VSM SDRAM Bank2 Physical memory device test goes wrong."

Error Nr	Error String	Error Nr	Error String
50102	"Execution of the command on the analogue board failed."	51400	"Execution of the command on the analogue board failed."
50103	"The frontpanel could not be accessed by the analogue board."	51401	"Execution of the command on the analogue board failed."
50200	"VSM SDRAM Bank2 Memory databus test goes wrong."	51402	"The frontpanel could not be accessed by the analogue board."
50204	"VSM SDRAM Bank2 Physical memory device test goes wrong."	51403	"The beeper did not sound."
50205	"The frontpanel could not be accessed by the analogue board."	51404	"The user skipped the FP-Beep test."
50206	"The frontpanel did not show a starburst."	51405	"The user returned an unknown confirmation: confirmation"
50207	"The user skipped the FP-which pattern test."	51500	"Execution of the command on the analogue board failed."
50208	"The user returned an unknown confirmation: confirmation"	51501	"Execution of the command on the analogue board failed."
50209	"The frontpanel did not show horizontal segments."	51502	"The frontpanel could not be accessed by the analogue board."
50210	"The frontpanel did not show vertical segments."	51503	"The display did not display properly."
50300	"Execution of the command on the analogue board failed."	51504	"The user skipped the display test."
50304	"Execution of the command on the analogue board failed."	51505	"The user returned an unknown confirmation: confirmation"
50305	"The frontpanel could not be accessed by the analogue board."	51600	"Execution of the command on the analogue board failed."
50306	"The frontpanel did not light all labels."	51601	"Execution of the command on the analogue board failed."
50307	"The user skipped the rest of the FP-label test."	51602	"The frontpanel could not be accessed by the analogue board."
50308	"The user returned an unknown confirmation: confirmation"	51603	"The display did not display properly."
50400	"Execution of the command on the analogue board failed."	51604	"The user skipped the display dots test."
50404	"Execution of the command on the analogue board failed."	51605	"The user returned an unknown confirmation: confirmation"
50405	"The frontpanel could not be accessed by the analogue board."	51700	"Execution of the command on the analogue board failed."
50406	"The LED's could not be turned on."	51701	"Execution of the command on the analogue board failed."
50407	"The user skipped the rest of the FP-LED test."	51702	"The frontpanel could not be accessed by the analogue board."
50408	"The user returned an unknown confirmation: confirmation"	51703	"The VU grid did not display properly."
50500	"Front panel Keyboard: test failed"	51704	"The user skipped the VU grid test."
50502	"Front panel Keyboard: test aborted"	51705	"The user returned an unknown confirmation: confirmation"
50503	"Front panel Keyboard: not all keys were pressed"	51800	"Execution of the command on the analogue board failed."
50505	"Front panel Keyboard I2C connection failed"	51801	"Execution of the command on the analogue board failed."
50506	"Unable to get slash version"	51802	"The frontpanel could not be accessed by the analogue board."
50600	"Front panel Remote control: test failed"	51803	"The frontpanel could not be dimmed."
50602	"Front panel Remote control: test aborted"	51804	"The user skipped the FP-Dim test."
50603	"Front panel Remote control: can not access FP"	51805	"The user returned an unknown confirmation: confirmation"
50604	"Front panel remote control: no user input received"	51900	"Execution of the command on the analogue board failed."
50700	"Execution of the command on the analogue board failed."	51901	"Execution of the command on the analogue board failed."
50701	"The frontpanel could not be accessed by the analogue board."	51902	"The frontpanel could not be accessed by the analogue board."
50702	"The frontpanel did not show a starburst."	51903	"The frontpanel did not show segments blinking."
50703	"The frontpanel did not show vertical segments."	51904	"The user skipped the FP-blinking test."
50704	"The user skipped the FP-starburst test."	51905	"The user returned an unknown confirmation: confirmation"
50705	"The user returned an unknown confirmation: confirmation"	52000	"Execution of the command on the analogue board failed."
50800	"Execution of the command on the analogue board failed."		
50801	"The frontpanel could not be accessed by the analogue board."		
50802	"The frontpanel did not show vertical segments."		
50803	"The user skipped the FP-vertical segments test."		
50804	"The user returned an unknown confirmation: confirmation"		
50805	"The user returned an unknown confirmation: confirmation"		
50900	"Front panel version: FPversion"		

Error Nr	Error String	Error Nr	Error String
52001	"Execution of the command on the analogue board failed."	60803	"Communication time-out error"
52002	"The frontpanel could not be accessed by the analogue board."	60804	"Unexpected response from Basic Engine"
52003	"The frontpanel did not show all segments lit."	60805	"Radial loop could not be closed"
52004	"The user skipped the FF-light all segments test."	60900	"Basic Engine returned error number 0x0000"
52005	"The user returned an unknown confirmation: confirmation"	60902	"Parity error from Basic Engine to Serial"
52200	"Communication with Analogue Board fails."	60903	"Communication time-out error"
52201	"Frontpanel can not be accessed by the Analogue Board."	60904	"Unexpected response from Basic Engine"
52202	"Communication with Analogue Board fails."	61500	"Basic Engine returned error number 0x0000"
52300	"Communication with Analogue Board fails."	61501	"Basic Engine returned error number 0x0000"
52301	"Frontpanel can not be accessed by the Analogue Board."	61502	"Parity error from Basic Engine to Serial"
52302	"Frontpanel can not be accessed by the Analogue Board."	61503	"Communication time-out error"
60000	"Basic Engine returned error number 0x0000"	61504	"Unexpected response from Basic Engine"
60100	"Basic Engine returned error number 0x0000"	61600	"Basic Engine returned error number 0x0000"
60101	"Parity error from Basic Engine to Serial"	61601	"Communication time-out error"
60102	"Communication time-out error"	61602	"Parity error from Basic Engine to Serial"
60103	"Unexpected response from Basic Engine"	61603	"Communication time-out error"
60104	"Echo loop could not be closed"	61604	"Unexpected response from Basic Engine"
60105	"Wrong echo pattern received"	61701	"BE tray-in command failed"
60200	"Version: nr1.nr2.nr3"	61702	"BE read-TOC command failed"
60201	"Basic Engine returned error number 0x0000"	61703	"BE VSM interrupt initialisation failed"
60202	"Parity error from Basic Engine to Serial"	61704	"BE set iq command failed"
60203	"Communication time-out error"	61705	"BE no disc or wrong disc inserted"
60204	"Unexpected response from Basic Engine"	61706	"BE rec-pause command failed"
60205	"Front Panel failed."	61707	"BE VSM BE out DMA initialisation failed"
60300	"Basic Engine returned error number 0x0000"	61708	"BE VSM BE out DMA start failed"
60301	"Parity error from Basic Engine to Serial"	61710	"BE VSM BE out start failed"
60400	"Basic Engine returned error number 0x0000"	61711	"BE rec command failed"
60401	"Parity error from Basic Engine to Serial"	61712	"BE VSM out underun error occurred"
60402	"Communication time-out error"	61713	"BE record complete interrupt not raised"
60403	"Unexpected response from Basic Engine"	61714	"BE get iq command failed"
60404	"Focus loop could not be closed"	61715	"BE no interrupt was raised by BE"
60500	"Basic Engine returned error number 0x0000"	61716	"BE VSM DMA out not finished"
60501	"Parity error from Basic Engine to Serial"	61717	"BE stop command after writing failed"
60502	"Communication time-out error"	61718	"BE VSM Sector processor initialisation failed"
60503	"Unexpected response from Basic Engine"	61719	"BE VSM sector processor DMA initialisation failed"
60600	"Basic Engine returned error number 0x0000"	61720	"BE VSM sector processor DMA start failed"
60601	"Parity error from Basic Engine to Serial"	61721	"BE VSM sector processor start failed"
60602	"Communication time-out error"	61722	"BE seek command failed"
60603	"Unexpected response from Basic Engine"	61723	"BE VSM sector processor error occurred"
60700	"Basic Engine returned error number 0x0000"	61724	"BE read timeout occurred"
60701	"Parity error from Basic Engine to Serial"	61725	"BE stop command after reading failed"
60702	"Communication time-out error"	61726	"BE difference found in data at disc sector 0x00000000"
60703	"Unexpected response from Basic Engine"	61727	"This nucleus cannot be executed because the Self-Test failed"
60800	"Basic Engine returned error number 0x0000"	61800	"BE I2c initialisation failed"
60801	"Parity error from Basic Engine to Serial"	61801	"BE I2c initialisation failed"
60802	"Communication time-out error"	61802	"This nucleus cannot be executed because the Self-Test failed"

Error Nr	Error String	Error Nr	Error String
61905	"Unexpected response from Basic Engine"	62001	"Self-Test : errorstring1 Laser-Test : errorstring2 SpindleM-Test : errorstring3 Sledg-eM-Test : errorstring4 Focus-Test : errorstring5"
62100	"The forward sense level is Olevel"	62101	"Basic Engine returned error number 0x0000"
62102	"Parity error from Basic Engine to Serial"	62103	"Communication time-out error"
62104	"Unexpected response from Basic Engine"	62200	"Basic Engine returned error number 0x0000"
62201	"The BE self-diagnostic-spindle-motor-test failed"	62202	"Basic Engine returned error number 0x0000"
62203	"Parity error from Basic Engine to Serial"	62204	"Communication time-out error"
62205	"Unexpected response from Basic Engine"	62300	"Basic Engine returned error number 0x0000"
62301	"The BE focus-test failed"	62302	"Basic Engine returned error number 0x0000"
62303	"Parity error from Basic Engine to Serial"	62304	"Communication time-out error"
62305	"Unexpected response from Basic Engine"	62400	"Basic Engine returned error number 0x0000"
62401	"The BE self-diagnostic-sledge-motor-test failed"	62402	"Basic Engine returned error number 0x0000"
62403	"Parity error from Basic Engine to Serial"	62404	"Communication time-out error"
62405	"Unexpected response from Basic Engine"	62500	"Basic Engine returned error number 0x0000"
62600	"BE EEPROM address = address -> Byte value = 0x0000"	62701	"Basic Engine returned error number 0x0000"
62702	"Parity error from Basic Engine to Serial"	62703	"Communication time-out error"
62704	"Unexpected response from Basic Engine"	62705	"BE read EEPROM: invalid input"
62800	"Basic Engine returned error number 0x0000"	62801	"Parity error from Basic Engine to Serial"
62802	"Communication time-out error"	62803	"Unexpected response from Basic Engine"
62804	"BE write EEPROM: invalid input"	62900	"Basic Engine returned error number 0x0000"
62901	"Parity error from Basic Engine to Serial"	62902	"Communication time-out error"
62903	"Unexpected response from Basic Engine"	62904	"Radial loop could not be closed"
62905	"Basic Engine returned error number 0x0000"	63000	"Basic Engine returned error number 0x0000"
63001	"Parity error from Basic Engine to Serial"	63002	"Communication time-out error"
63003	"Unexpected response from Basic Engine"	63004	"Unexpected response from Basic Engine"

Error Nr	Error String	Error Nr	Error String
63100	"Number of times Tray went Open/Closed : nr1" Total hours the CD laser was on : nr2" Total hours the DVD laser was on : nr3" Total hours the write laser was on : nr4"	63101	"Basic Engine returned error number 0x0000"
63102	"Parity error from Basic Engine to Serial"	63103	"Communication time-out error"
63104	"Unexpected response from Basic Engine"	63200	"Basic Engine returned error number 0x0000"
63201	"Parity error from Basic Engine to Serial"	63202	"Communication time-out error"
63203	"Unexpected response from Basic Engine"	63204	"Communication time-out error"
63300	"Momentary errors (Byte 1 - Byte 7) : 0xb1 0xb2 0xb3 0xb4 0xb5 0xb6 0xb7 Cumulative errors (Byte 1 - Byte 7) : 0xb1 0xb2 0xb3 0xb4 0xb5 0xb6 0xb7 Fatal errors (Oldest - Youngest) : 0xb1 0xb2 0xb3 0xb4 0xb5"	63301	"Basic Engine returned error number 0x0000"
63302	"Parity error from Basic Engine to Serial"	63303	"Communication time-out error"
63304	"Unexpected response from Basic Engine"	63400	"Basic Engine returned error number 0x0000"
63401	"Parity error from Basic Engine to Serial"	63402	"Communication time-out error"
63403	"Unexpected response from Basic Engine"	63404	"Communication time-out error"
63500	"Basic Engine returned error number 0x0000"	63501	"Parity error from Basic Engine to Serial"
63502	"Communication time-out error"	63503	"Unexpected response from Basic Engine"
63505	"Errorstring 0 The basic engine will reject all player commands"	63900	"Basic Engine returned error number 0x0000"
63901	"Parity error from Basic Engine to Serial"	63902	"Communication time-out error"
63903	"Unexpected response from Basic Engine"	63904	"BE OPU number = 0x0000"
64000	"Basic Engine returned error number 0x0000"	64001	"Parity error from Basic Engine to Serial"
64002	"Communication time-out error"	64003	"Unexpected response from Basic Engine"
64004	"The data was successfully written on and read from a DVD disc"	64101	"The tray-in command failed"
64102	"The read-TOC command failed"	64103	"The VSM interrupt initialisation failed"
64104	"The set iq command failed"	64105	"No disc or wrong disc inserted"
64106	"The rec-pause command failed"	64107	"The VSM BE out DMA initialisation failed"
64108	"The VSM BE out DMA start failed"	64109	"The VSM BE out DMA start failed"
64110	"The VSM BE out start failed"	64111	"The rec command failed"

Error Nr	Error String
64112	"The VSM out overrun error occurred"
64113	"The record complete interrupt was not raised"
64114	"The get irq command failed"
64115	"There was no interrupt raised by BE"
64116	"The VSM DMA did not finished"
64117	"The stop command after writing failed"
64118	"The VSM Sector processor initialisation failed"
64119	"The VSM sector processor DMA initialisation failed"
64120	"The VSM sector processor DMA start failed"
64121	"The VSM sector processor start failed"
64122	"The seek command failed"
64123	"The VSM sector processor error occurred"
64124	"The read timeout occurred"
64125	"The stop command after reading failed"
64126	"There was a difference found in data at a specific disc sector"
64127	"The result of the self test contains errors"
64128	"An error interrupt was raised by BE"
64129	"The calibrate-record command failed"
64130	"Too many retries"
64131	"BE update RAI command after writing failed"
64132	"BE find first recordable address command failed"
64133	"DVD-R disc is full"
64200	""
64201	"BE I2c initialisation failed"
64202	"This nucleus cannot be executed because the Self-Test failed"
70000	"Echo test OK"
70001	"Echo test returned wrong string."
70002	"Communication with Analogue Board fails"
70300	"SoftwareVersion"
70301	"Can not find segment in FLASH ROM on the Analogue Board"
70302	"Communication with Analogue Board fails"
70400	"HardwareVersion"
70401	"Can not find segment in FLASH ROM on the Analogue Board"
70402	"Communication with Analogue Board fails"
70500	"Clock adjusted OK"
70501	"Can not adjust the clock on the Analogue Board."
70502	"Wrong date/time text size."
70503	"Communication with Analogue Board fails"
70600	"Tuner accessibility test OK"
70601	"Can not access tuner on the Analogue Board."
70602	"Communication with Analogue Board fails"
70700	"Frequency download OK"
70701	"Wrong frequency table size."
70702	"Can not download the frequency table into the analogue NVRAM."
70703	"Can not download the frequency table into the analogue NVRAM."
70704	"Communication with Analogue Board fails"
70800	"Data slicer test OK"
70801	"Test of the Data slicer on the Analogue Board fails."
70802	"Communication with Analogue Board fails"
70900	"Sound Processor test OK"
70901	"Test of the Sound Processor on the Analogue Board fails."
70902	"Communication with Analogue Board fails"
71000	"AV Selector test OK"

Error Nr	Error String
73102	"I2C Write error."
73103	"I2C Read error."
73104	"Communication with Analogue Board fails"
73200	""
73201	"Storing the Reference Voltage for the Tuner failed"
73202	"Invalid input."
73203	"Communication with Analogue Board fails"
80000	"The DVO module is present in the system."
80001	"The DVO module is not present in the system."
80100	"The DVO module has been reset OK."
80101	"The DVO module is not present in the system."
80102	"The DVO module could not be reset."
80103	"Could not initialise I2C before Reset."
80200	"The accessibility of the DVO module is OK."
80201	"The DVO board is not present in this DVDR."
80202	"Could not initialise I2C."
80203	"Unable to reset the DVO module."
80204	"Unable to receive the reset indication from the DVO module."
80205	"Unable to send the configuration to the DVO module."
80206	"Unable to download the chip ID to the DVO module."
80207	"Unable to set the mode of the DVO module to IDLE."
80208	"Software Error in function HandleStateWaitingReply!"
80209	"Maximal number of retries reached by HandleStateSending!"
80210	"Maximal number of retries (NACKs) reached (HandleStateSending)"
80211	"We tried to receive a reply for DVO_MAX_RETRIES_ACKREPLY times!"
80212	"We tried to receive a reply for DVO_MAX_RETRIES_REPLY times!"
80213	"We tried to receive an Ack for DVO_MAX_RETRIES_ACK times!"
80214	"VSM UART error timeout transmitting command"
80215	"VSM UART error timeout receiving reply"
80216	"VSM UART frame error occurred receiving from DVO board"
80217	"VSM UART parity error occurred receiving from DVO board"
80218	"The confirmation/indication from the DVO module is invalid."
80300	"The accessibility of the DVO module is OK."
80301	"The DVO board is not present in this DVDR."
80302	"Could not initialise I2C."
80303	"Unable to receive the reset indication from the DVO module."
80304	"Unable to send the configuration to the DVO module."
80305	"Unable to download the chip ID to the DVO module."
80306	"Unable to set the mode of the DVO module to IDLE."
80307	"Unable to set the mode of the DVO module to IDLE."
80308	"Software Error in function HandleStateWaitingReply!"
80309	"Maximal number of retries reached by HandleStateSending!"
80310	"Maximal number of retries (NACKs) reached (HandleStateSending)"

Error Nr	Error String
80311	"We tried to receive a reply for DVO_MAX_RETRIES_ACKREPLY times!"
80312	"We tried to receive a reply for DVO_MAX_RETRIES_REPLY times!"
80313	"We tried to receive an Ack for DVO_MAX_RETRIES_ACK times!"
80314	"VSM UART error timeout transmitting command"
80315	"VSM UART error timeout receiving reply"
80316	"VSM UART frame error occurred receiving from DVO board"
80317	"VSM UART parity error occurred receiving from DVO board"
80318	"The confirmation/indication from the DVO module is invalid."
80400	"The accessibility of the DVO module is OK."
80401	"The DVO board is not present in this DVDR."
80402	"Could not initialise I2C."
80403	"Unable to reset the DVO module."
80404	"Unable to receive the reset indication from the DVO module."
80405	"Unable to send the configuration to the DVO module."
80406	"Unable to download the chip ID to the DVO module."
80407	"Unable to set the mode of the DVO module to IDLE."
80408	"Software Error in function HandleStateWaitingReply!"
80409	"Maximal number of retries reached by HandleStateSending!"
80410	"Maximal number of retries (NACKs) reached (HandleStateSending)"
80411	"We tried to receive a reply for DVO_MAX_RETRIES_ACKREPLY times!"
80412	"We tried to receive a reply for DVO_MAX_RETRIES_REPLY times!"
80413	"We tried to receive an Ack for DVO_MAX_RETRIES_ACK times!"
80414	"VSM UART error timeout transmitting command"
80415	"VSM UART error timeout receiving reply"
80416	"VSM UART frame error occurred receiving from DVO board"
80417	"VSM UART parity error occurred receiving from DVO board"
80418	"The confirmation/indication from the DVO module is invalid."
80500	""
80501	"The DVO board is not present in this DVDR."
80502	"The I2C could not be initialised."
80503	"The DVO module could not be reset."
80504	"Unable to receive the reset indication from the DVO module."
80505	"Unable to send the configuration to the DVO module."
80506	"Unable to download the chip ID to the DVO module."
80507	"Unable to set the mode of the DVO module to IDLE."
80508	"Software Error in HandleStateWaitingReply function!"
80509	"Maximal number of retries reached by HandleStateSending!"
80510	"Maximal number of retries (NACKs) reached (HandleStateSending)"
80511	"We tried to receive a reply for DVO_MAX_RETRIES_ACKREPLY times!"

Error Nr	Error String
80512	"We tried to receive a reply for DVO_MAX_RETRIES_REPLY times!"
80513	"We tried to receive an Acknowledge for DVO_MAX_RETRIES_ACK times!"
80514	"VSM UART error timeout transmitting command"
80515	"VSM UART error timeout receiving reply"
80516	"VSM UART frame error occurred receiving from DVO board"
80517	"VSM UART parity error occurred receiving from DVO board"
80518	"The confirmation/indication from the DVO module is invalid."
80519	"Setting the DVO module in/out diagnostics mode failed"
80520	"Invalid input"
80521	"Getting the errors of the self-test failed"
80522	"Self-test failed"
80600	".."
80601	"The DVO board is not present in this DVR."
80602	"The DVO could not be initialised."
80603	"The DVO module could not be reset."
80604	"Unable to receive the reset indication from the DVO module."
80605	"Unable to send the configuration to the DVO module."
80606	"Unable to download the chip ID to the DVO module."
80607	"Unable to set the mode of the DVO module to IDLE."
80608	"Software Error in HandleStateAwaitingReply function!"
80609	"Maximal number of retries reached by HandleStateSending!"
80610	"Maximal number of retries (NACK's) reached (HandleStateSending)"
80611	"We tried to receive a reply for DVO_MAX_RETRIES_ACKREPLY times!"
80612	"We tried to receive a reply for DVO_MAX_RETRIES_REPLY times!"
80613	"We tried to receive an Acknowledge for DVO_MAX_RETRIES_ACK times!"
80614	"VSM UART error timeout transmitting command"
80615	"VSM UART error timeout receiving reply"
80616	"VSM UART frame error occurred receiving from DVO board"
80617	"VSM UART parity error occurred receiving from DVO board"
80618	"The confirmation/indication from the DVO module is invalid."
80619	"Setting the DVO module in/out diagnostics mode failed"
80700	".."
80701	"The DVO board is not present in this DVR."
80702	"The I2C could not be initialised."
80703	"The DVO module could not be reset."
80704	"Unable to receive the reset indication from the DVO module."
80705	"Unable to send the configuration to the DVO module."
80706	"Unable to download the chip ID to the DVO module."
80707	"Unable to set the mode of the DVO module to IDLE."
80708	"Software Error in HandleStateAwaitingReply function!"

Error Nr	Error String
90225	"The video encoder timed out in BUSY mode. (no VIP input)"
90226	"The video encoder did not return the current bitrate."
90227	"The video encoder did not switch to ENCODING mode."
90228	"The video encoder could not start from STOP/IDLE mode."
90229	"The video encoder did not switch from IDLE to STOP mode."
90300	".."
90301	"Initialisation of I2C failed"
90302	"I2C communication to VIP failed"
90303	"Initialisation of VIP failed"
90304	"Generation of Close Caption data failed"
90305	"VIP not locked to video signal"
90306	"Initialisation of VBI Extractor failed"
90307	"No CC data received"
90308	"Closed Caption data overrun"
90309	"Closed Caption data does not match"
90310	"Switch off ColourBar failed"
90400	".."
90401	"Initialisation of I2C failed"
90402	"Initialisation of VIP and EMPIRE failed"
90403	"Initialisation of PLL / Link failed."
90404	"Next descriptor address set wrong."
90405	"Turning on the colourbar failed"
90406	"No I2C communication possible to start video encoder."
90407	"The audio frame is not MPEG-1 layer II"
90408	"Transfer of data from video encoder to VSM failed."
90409	"Stopping the encoder failed."
90410	"Turning off the colourbar failed."
90411	"Cannot initialize hostdecoder parallel input"
90412	"Cannot initialise VSM AV-out DMA port"
90413	"Cannot initialise VSM AV-out port"
90414	"Cannot start VSM AV-out DMA port"
90415	"Cannot start VSM AV-out port"
90416	"Transfer of data from VSM to host decoder failed."
90417	"VSM and Hostdec memory do not match (compared after transfer)"
90418	"Decoding of the video data in the hostdecoder memory failed"
90419	"The data in the hostdecoder is not equal to a colourbar"
90420	"The video encoder did not return the Group Of Picture count."
90421	"The video encoder did not receive data from the VIP."
90422	"Execution of the command on the analogue board failed."
90423	"Initialisation of VIP and EMPRESS failed"
90424	"The video encoder did not return the current status."
90425	"The video encoder timed out in BUSY mode. (no VIP input)"
90426	"The video encoder did not return the current bitrate."
90427	"The video encoder did not switch to ENCODING mode."
90428	"The video encoder could not start from STOP/IDLE mode."

Error Nr	Error String
90429	"The video encoder did not switch from IDLE to STOP mode."
90500	".."
90501	"Initialisation of I2C failed"
90502	"I2C communication to VIP failed"
90503	"Initialisation of VIP failed"
90504	"Generation of Close Caption data failed"
90505	"VIP not locked to video signal"
90506	"Initialisation of VBI Extractor failed"
90507	"No CC data received"
90508	"Closed Caption data overrun"
90509	"Closed Caption data does not match"
90510	"Switch off ColourBar failed"
90511	"Execution of the command on the analogue board failed."
90600	".."
90601	"Initialisation of I2C failed"
90602	"Initialisation of VIP and EMPIRE failed"
90603	"Initialisation of PLL / Link failed."
90604	"Next descriptor address set wrong."
90605	"Turning on the colourbar failed"
90606	"No I2C communication possible to start video encoder."
90607	"Starting the video encoder failed."
90608	"Transfer of data from video encoder to VSM failed."
90609	"Stopping the encoder failed."
90610	"Turning off the colourbar failed."
90611	"Cannot initialize hostdecoder parallel input"
90612	"Cannot initialise VSM AV-out DMA port"
90613	"Cannot initialise VSM AV-out port"
90614	"Cannot start VSM AV-out DMA port"
90615	"Cannot start VSM AV-out port"
90616	"Transfer of data from VSM to host decoder failed."
90617	"VSM and Hostdec memory do not match (compared after transfer)"
90618	"Decoding of the video data in the hostdecoder memory failed"
90619	"The data in the hostdecoder is not equal to a colourbar"
90620	"The video encoder did not return the Group Of Picture count."
90621	"The video encoder did not receive data from the VIP."
90622	"Execution of the command on the analogue board failed."
90623	"Initialisation of VIP and EMPRESS failed"
90624	"The video encoder did not return the current status."
90625	"The video encoder timed out in BUSY mode. (no VIP input)"
90626	"The video encoder did not return the current bitrate."
90627	"The video encoder did not switch to ENCODING mode."
90628	"The video encoder could not start from STOP/IDLE mode."
90629	"The video encoder did not switch from IDLE to STOP mode."
90700	".."
90701	"Initialisation of I2C failed"
90702	"I2C communication to VIP failed"
90703	"Initialisation of VIP failed"
90704	"Generation of Close Caption data failed"

Error Nr	Error String
90705	"VIP not locked to video signal"
90706	"Initialisation of VBI Extractor failed"
90707	"No CC data received"
90708	"Closed Caption data overrun"
90709	"Closed Caption data does not match"
90710	"Switch off ColourBar failed"
90711	"Execution of the command on the analogue board failed."
90800	"
90801	"Error routing the audio back to the digital board."
90802	"Error cannot initialise I2C"
90803	"Error cannot initialise VIP"
90804	"Error cannot set ADC enable pin"
90805	"Error cannot set VSM audio clock"
90806	"Error preparing the 12kHz audio-sine"
90807	"Error cannot initialise audio encoder"
90808	"Error cannot initialise VSM audio in port"
90809	"Error cannot initialise VSM audio in DMA port"
90810	"Error cannot initialise VSM audio out DMA port"
90811	"Error cannot initialise audio VSM out port"
90812	"Error cannot initialise host decoder audio in"
90813	"Error loop audio user/dealer cannot start audio encoder"
90814	"Error cannot start VSM audio in DMA port"
90815	"Error starting the 12kHz audio-sine"
90816	"Error transfer data from audio encoder to VSM"
90817	"Error cannot start VSM AV out DMA port"
90818	"Error cannot start VSM AV out port"
90819	"Error transfer data from VSM to host decoder"
90820	"Error: audio data in host memory and VSM memory differ"
90821	"Error: audio data in host memory contains wrong frequency: frequency Hz"
90822	"Error: audio data in host memory contains silence!"
90823	"There is no correct audio frame in the buffer"
90824	"The audio frame has an illegal version bit"
90825	"The audio frame has an illegal bitrate-index"
90826	"The audio frame has an illegal sampling rate"
90827	"The CRC of the audio frame is wrong"
90828	"The audio frame is not MPEG-I layer II"
90829	"Error cannot de-mute DAC on analogue board"
90900	"
90901	"Error routing the audio back to the digital board."
90902	"Error cannot initialise I2C"
90903	"Error cannot initialise VIP"
90904	"Error cannot set ADC enable pin"
90905	"Error cannot set VSM audio clock"
90906	"Error preparing the 12kHz audio-sine"
90907	"Error cannot initialise audio encoder"
90908	"Error cannot initialise VSM audio in port"
90909	"Error cannot initialise VSM audio in DMA port"
90910	"Error cannot initialise VSM audio out DMA port"
90911	"Error cannot start VSM audio out port"
90912	"Error cannot initialise host decoder audio in"
90913	"Error loop audio user/dealer cannot start audio encoder"
90914	"Error cannot start VSM audio in DMA port"
90915	"Error starting the 12kHz audio-sine"
90916	"Error transfer data from audio encoder to VSM"
90917	"Error cannot start VSM AV out DMA port"
90918	"Error cannot start VSM AV out port"

Error Nr	Error String
90919	"Error transfer data from VSM to host decoder"
90920	"Error: audio data in host memory and VSM memory differ"
90921	"Error: audio data in host memory contains wrong frequency: frequency Hz"
90922	"Error: audio data in host memory contains silence!"
90923	"There is no correct audio frame in the buffer"
90924	"The audio frame has an illegal version bit"
90925	"The audio frame has an illegal bitrate-index"
90926	"The audio frame has an illegal sampling rate"
90927	"The CRC of the audio frame is wrong"
90928	"The audio frame is not MPEG-I layer II"
90929	"Error cannot de-mute DAC on analogue board"
140000	"
140001	"I2C to Clock failed" or "I2C initialisation failed"
140100	"
140101	"I2C to Clock failed" or "I2C initialisation failed"
141200	"
141201	"Progressive Scan Board I2C bus busy"
141211	"Progressive Scan Board I2C FLI2200 bus busy"
141212	"Progressive Scan Board I2C FLI2200 read access time-out"
141213	"Progressive Scan Board I2C FLI2200 no read access knowledge"
141214	"Progressive Scan Board I2C FLI2200 read failed"
141215	"Progressive Scan Board I2C FLI2200 write access time-out"
141216	"Progressive Scan Board I2C FLI2200 no write access knowledge"
141217	"Progressive Scan Board I2C FLI2200 write failed"
141218	"Progressive Scan Board I2C FLI2200 failed"
141221	"Progressive Scan Board I2C AD7196 bus busy"
141222	"Progressive Scan Board I2C AD7196 read access time-out"
141223	"Progressive Scan Board I2C AD7196 no read access knowledge"
141224	"Progressive Scan Board I2C AD7196 read failed"
141225	"Progressive Scan Board I2C AD7196 write access time-out"
141226	"Progressive Scan Board I2C AD7196 no write access knowledge"
141227	"Progressive Scan Board I2C AD7196 write failed"
141228	"Progressive Scan Board I2C AD7196 failed"
141300	"
141301	"Progressive Scan Route Enable failed"
141302	"Generating test image in Hostdecoder failed"
141400	"
141401	"Progressive Scan Route Disable failed"
141402	"Turning off test image in Hostdecoder failed"
141500	"
141501	"Progressive Scan Board I2C failed"
141600	"
141601	"Progressive Scan Board I2C failed"

Error Codes Nucleus 805

Error Code	Description	Bus	Components
0x00	No Error	-	-
0x11	No link register access	PA[8:0] PAD[7:0]	Link uP
0x12	No link register access or link reset failed	PA[8:0] PAD[7:0] I1394_RSTn	Link uP FPGA
0x13	No link register access or link reset failed	PA[8:0] PAD[7:0] I1394_RSTn	Link uP FPGA
0x14	No link register access	PA[8:0] PAD[7:0]	Link uP
0x15	No link register access	PA[8:0] PAD[7:0]	Link uP
0x16	No link register access	PA[8:0] PAD[7:0]	Link uP
0x17	Link reset failed	1394_RSTn	Link FPGA
0x18	Link reset failed	1394_RSTn	Link FPGA
0x19	Cycle timer in link chip does not increment	-	Link
0x1A	Interrupt from Link chip does not go low at 8051	LINK_INTn PINT1n	Link FPGA uP
0x1B	Interrupt from Link chip does not go high at 8051	LINK_INTn PINT1n	Link FPGA uP
0x1C	Submission of read request to Phy timed out	Bus_LP	Phy
0x1D	Reception of read data from Phy timed out	Bus_LP	Phy
0x1E	Improper Phy read address was received from Phy	Bus_LP	Phy
0x1F	Phy write timed out	Bus_LP	Phy
0x20	Could not read reg #2 of Phy	Bus_LP	Phy
0x21	Could not write 0xaa to reg #1 of phy	Bus_LP	Phy
0x22	Could not write 0x55 to reg #1 of phy	Bus_LP	Phy
0x23	Read incorrect default gapcount from Phy	Bus_LP	Phy
0x24	Read incorrect updated gapcount from Phy	Bus_LP	Phy
0x25	Read incorrect gapcount from Phy after reset	F117 F173	Phy OptoPR
0x26	Expecting no 1394 connectivity, while Phy.CNA indicates connection	F108 PHY_CNA Bus_PC	Phy OptoCNA FPGA
0x27	Expecting 1394 connectivity, while Phy.CNA indicates no connection	F108 PHY_CNA Bus_PC	Phy OptoCNA FPGA
0x28	Expected port1 unconnected, but found connected	Bus_PC	Phy
0x29	Phy read retry limit exceeded	-	Phy
0x2A	Expected port2 unconnected, but found connected	-	Phy
0x2B	Expected port3 unconnected, but found connected	-	Phy
0x2C	Expected 0x1 in lower nibble of Phy reg 7	-	Phy
0x2D	Expected CPS and C bit set in Phy reg 6	-	Phy
0x30	Internal ram problem in address lines	Internal in uP	P89C51RD2
0x31	Internal ram problem in data lines	Internal in uP	P89C51RD2
0x32	External ram problem in address lines	PA[15:0] PAD[7:0] PRDn PWRn	P89C51RD2/CY62256/74HC573
0x33	External ram problem in data lines	PAD[7:0]	P89C51RD2/CY62256/74HC573
0x34	Problem accessing flex scratch register	PAD[7:0]	EPF6024
0x36	INT0n stuck at '0'	PINT0n	EPF6024 / P89C51RD2
0x37	INT0n stuck at '1'	PINT1n	EPF6024 / P89C51RD2
0x38	Problem accessing NW701 registers	HAD[7:0] DV_Asn Rwn DSUn DSLn	EPF6024 / NW701
0x39	Reset line to NW701 not functioning	DV_RSTn	EPF6024 / NW701
0x3A	Checksum of codespace 0x0000-0x0bfff is not 0x00	Incorrectly programmed	P89C51RD2
0x4A	PHY chip not responding	-	Phy
0x4F5	LINK chip not responding	-	Phy


5.5 Loop tests

The following loops can be distinguished:

- Loops performed on the digital board only
- User Dealer loops performed on the digital and analogue board
- System loops performed via an external connection: outputs are looped back to the inputs.

5.5.1 Nucleus 900: Digital Audio Loop

This nucleus tests the audio path through the digital board

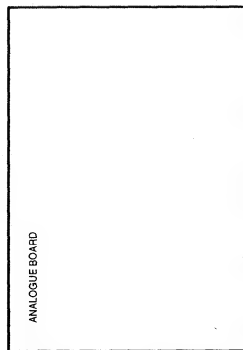

This Nucleus is only possible in NAFTA sets.

A PCM audio sine of 12kHz is generated in the Host Decoder for a while and sent to the analogue board. The signal coming from the analogue board is encoded again and sent to the memory of the host decoder for comparison. This nucleus tests the components on the audio signal path:

- Host decoder
- Fix connection between connector 1602 (digital board) and connector 1900 (analogue board)
- DAC
- Op-amp
- Start switch IC
- ADC
- Audio Encoder
- VIP
- VSM

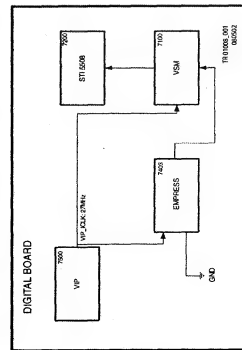



Figure 5-9

5.5.3 Nucleus 902: Digital Video Loop

A colourbar generated in the host decoder is looped through the VIP, Empire, and VSM and checked again in the host decoder. The following components are tested on the video signal path:

- VIP
- Empire
- VSM
- Host decoder

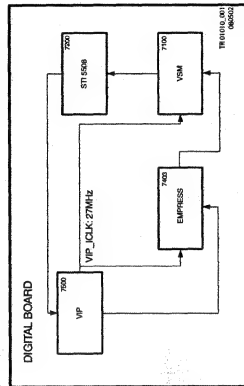
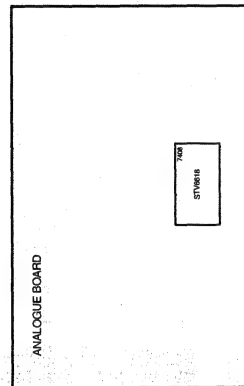



Figure 5-11

5.5.4 Nucleus 903: Digital Video VBI Loop

Nucleus for testing the components on the video VBI signal path:

- The VIP
- The VSM
- The Host Decoder

This is done by using the internal test signal source (digital board only)

Remark: this test is only successful if nucleus 121 is carried out first.

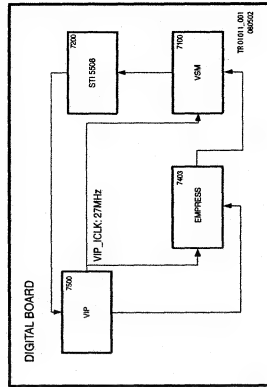
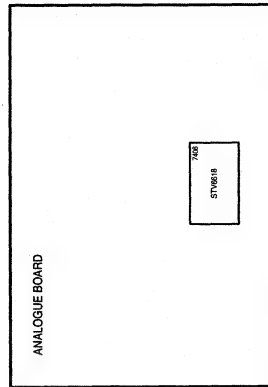


Figure 5-12

Figure 5-10

5.5.5.7 Nucleus 906: Video User Dealer Loop

5.5.8

Nucleus for testing the components on the video signal system path:

- The VIP
- The video encoder
- The VSM
- The host decoder
- The analogue board

Remark: this test is only successful if nucleus 121 is carried out first.

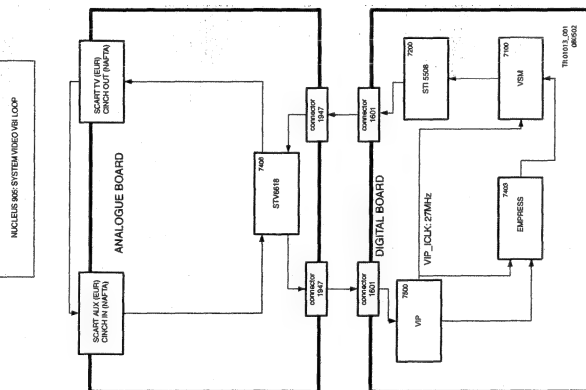


Figure 5-14

NUCLEUS 906: VIDEO USER DEALER LOOP

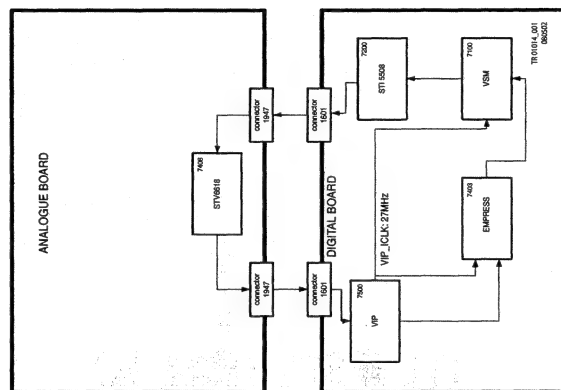


Figure 5-16

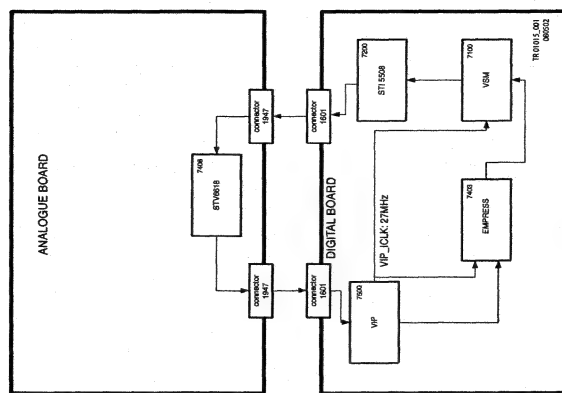


Figure 5-16

5.5.9 Nucleus 908: System Audio Loop Scart (Europe)

- Nucleus for testing the components on the audio signal path:
- The hostdecoder
 - The analogue board
 - The audio encoder
 - The VSM
- On the analogue board, audio is passed to the SCART connector, where a SCART cable needs to be used to loop back the audio signal to the digital board

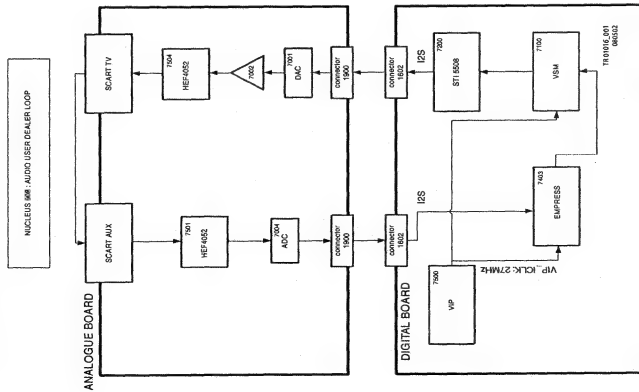


Figure 5-17

5.5.10 Nucleus 909: System Audio Loop CHNCH (Nafra)

- Nucleus for testing the components on the audio signal path:
- The hostdecoder
 - The analogue board
 - The audio encoder
 - The VSM
- A parameter has to be specified to select the appropriate output routing. This parameter is identical to nucleus 713.

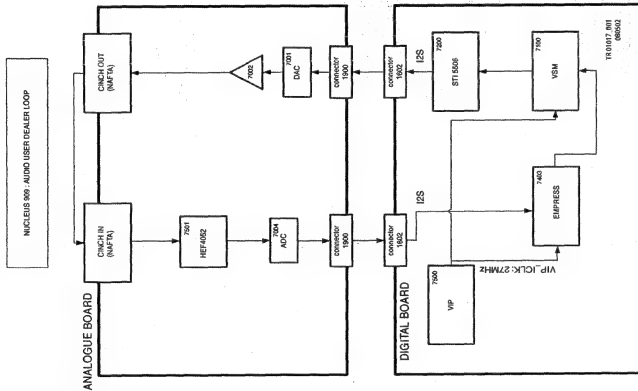


Figure 5-18

5.5.11 Nucleus 910: DVIO Video Input

- Nucleus for testing the components on the video signal path:
- The DVI/O board
 - The VIP
 - The video encoder
 - The VSM
 - The host decoder

Note :This Test is not valid for Nafra in DVDR-Lead. For Europe the sound will be available on scart 2.

5.5.12 Nucleus 911: DVIO Video VIP

- Nucleus for testing the components on the video signal system path.
- The host decoder
 - The analogue board
 - The VIP

On the analogue board the video signal will be routed according to the parameter. There it will be looped back externally by means of the proper cable.


The correct Routing path has to be selected by a parameter:

Analog board Version	Selectable parameter	Internal call to nucleus 712
01	1	712.21
11	1	712.21
31	2	712.17
31	3	721.18
31	3	712.19
41	2	712.17
41	3	712.18
41	4	712.19
41	5	712.20
71	4	712.19

Remark: Nucleus 704 gives the analog board version

6. Block Diagrams, Waveforms, Wiring Diagram.

BLOCK DIAGRAM DVDR880, DVDR890 EURO

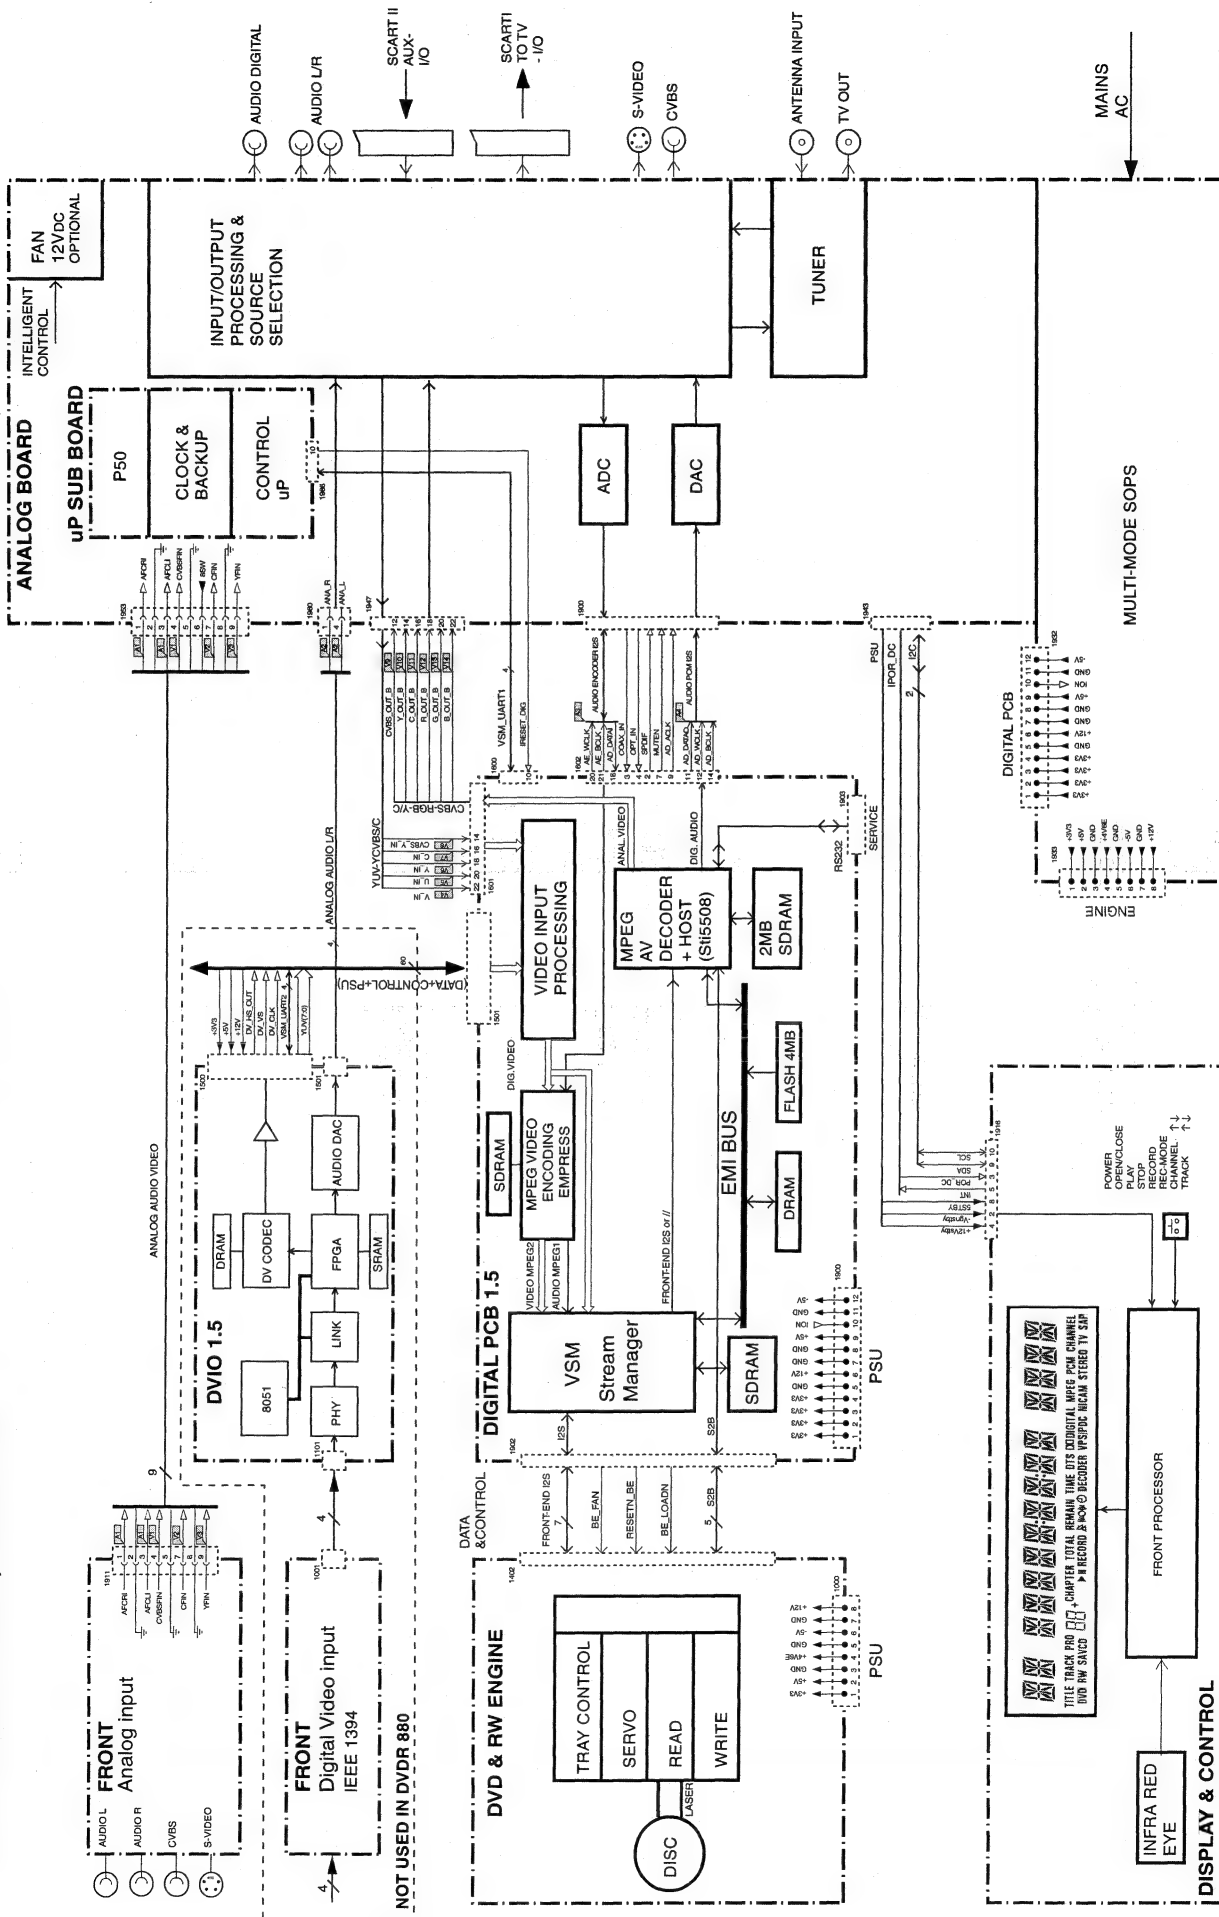


TR 01018_001
130502

Blockdiagram Control Lines and Bus Systems














Wiring Diagram







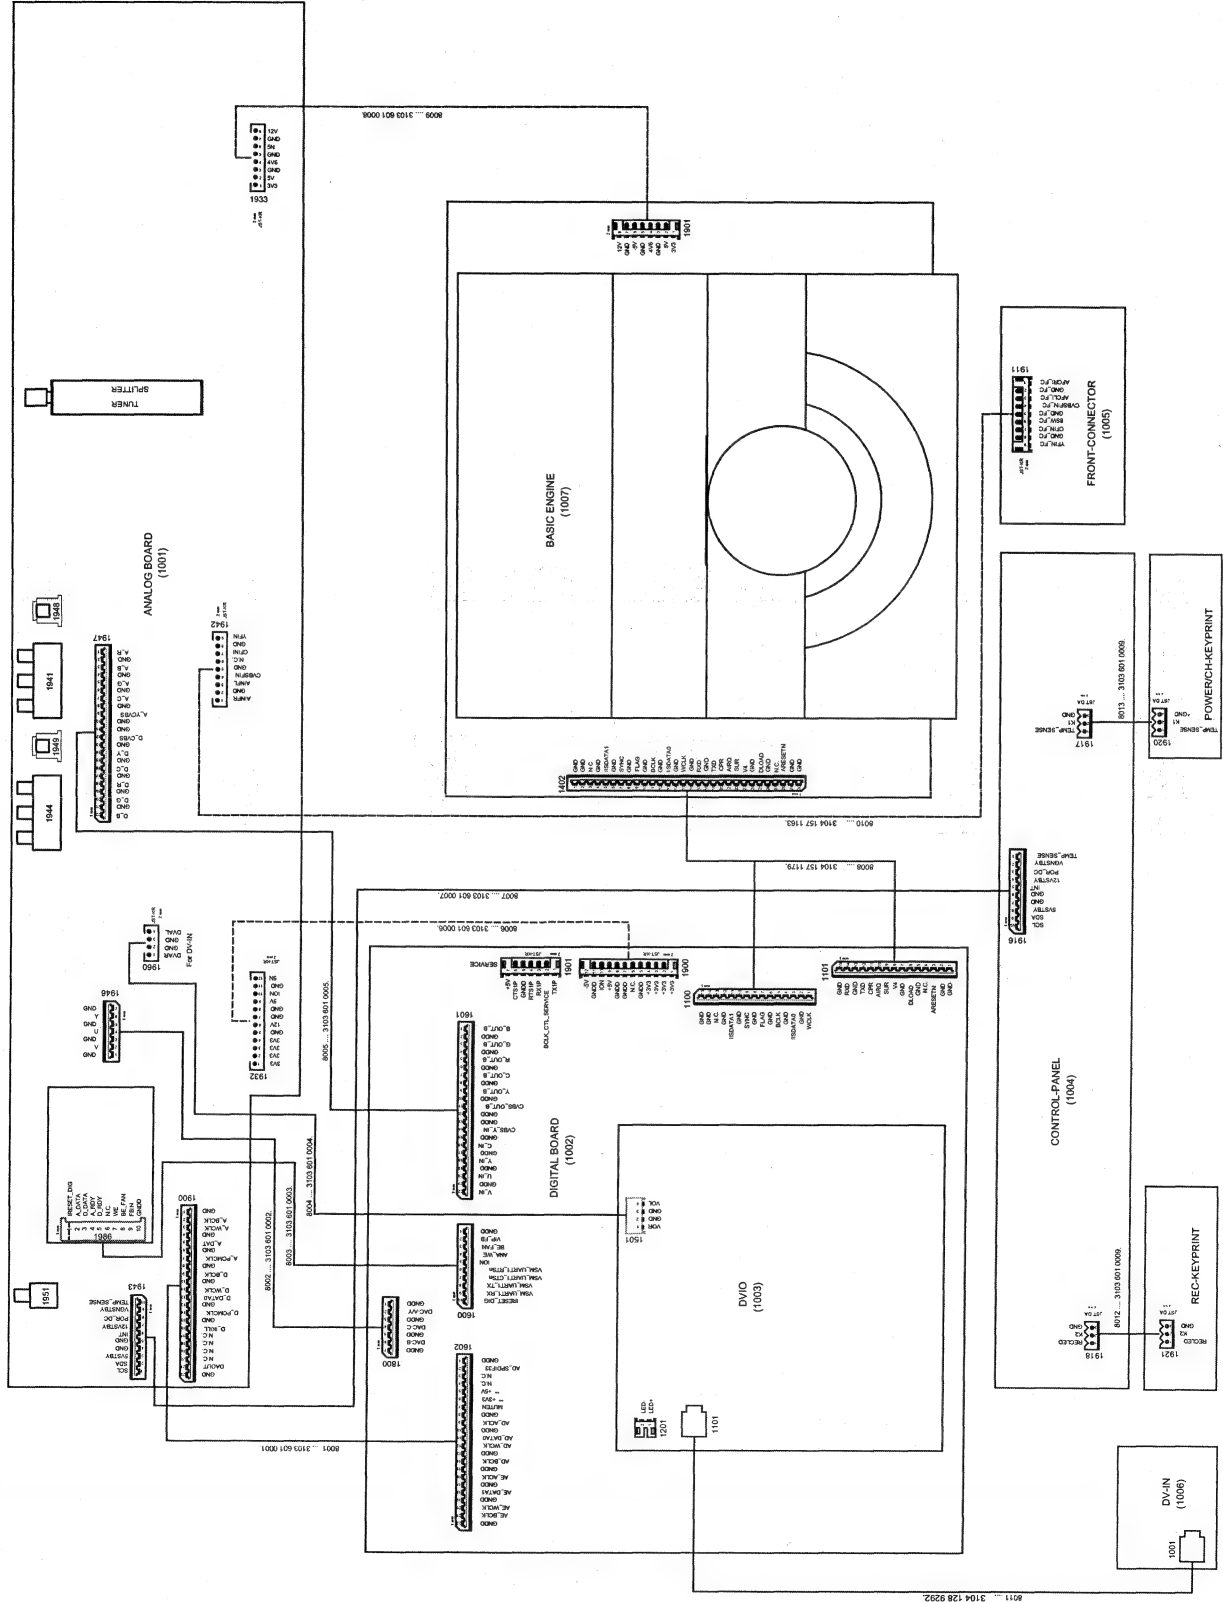


Waveforms






Waveforms Analog Board, uPC Sub PWB

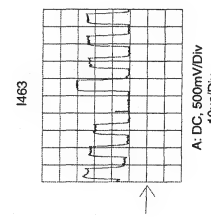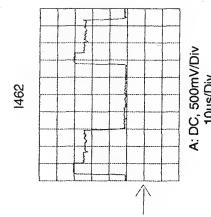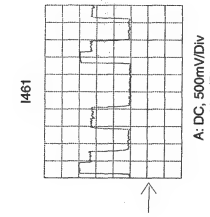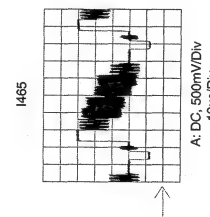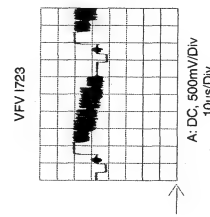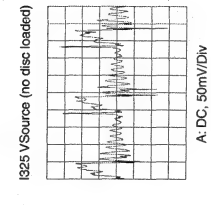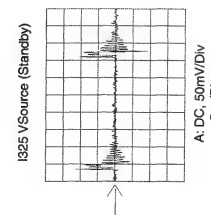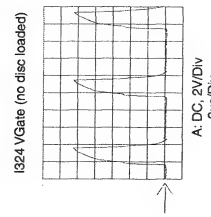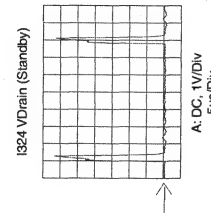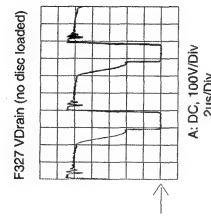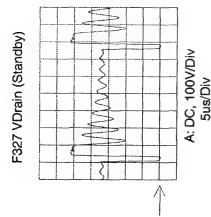





Waveforms Analog Board, uPC Sub PWB

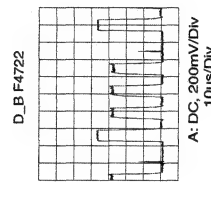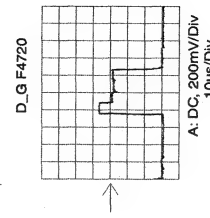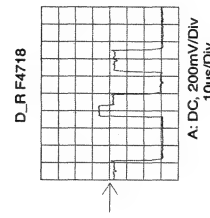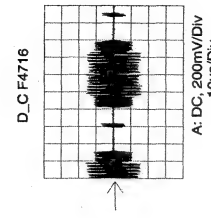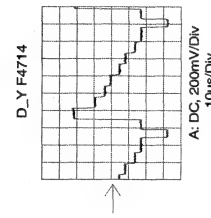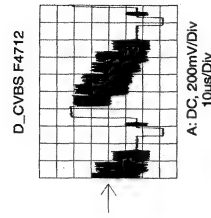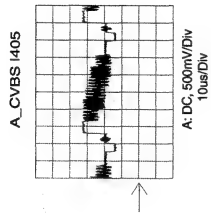


Waveforms Analog Board, uPC Sub PWB

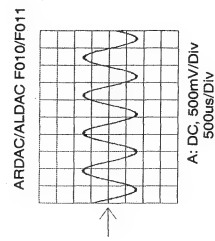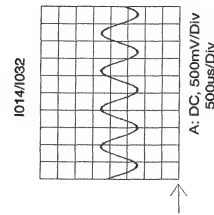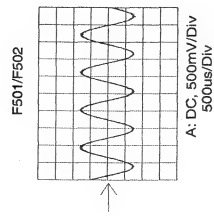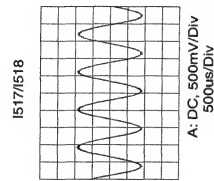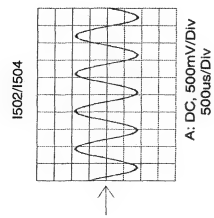

Waveforms Analog Board, uPC Sub PWB

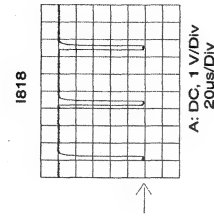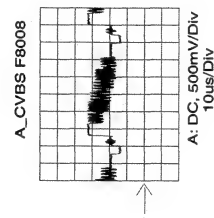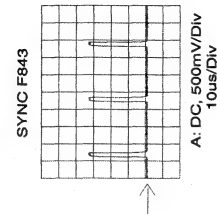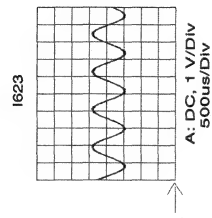


Waveforms Digital Board

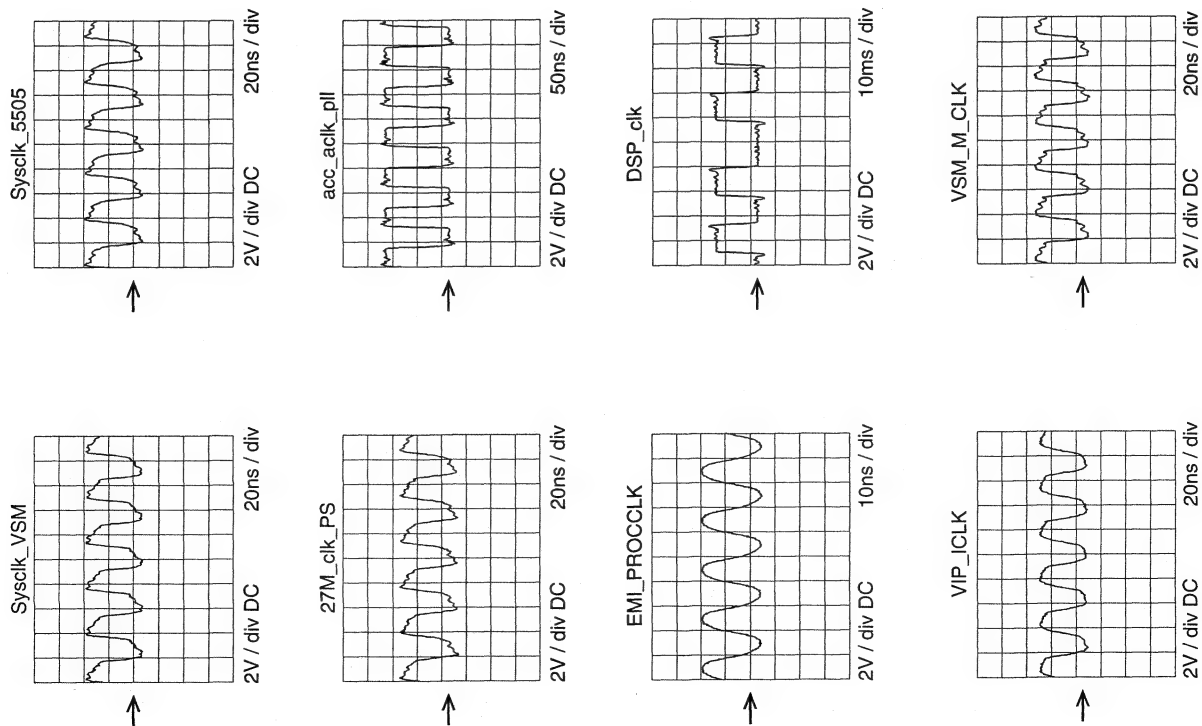

CL 16532145_063.sps
03/201

Figure 6-1

Waveforms Digital Board

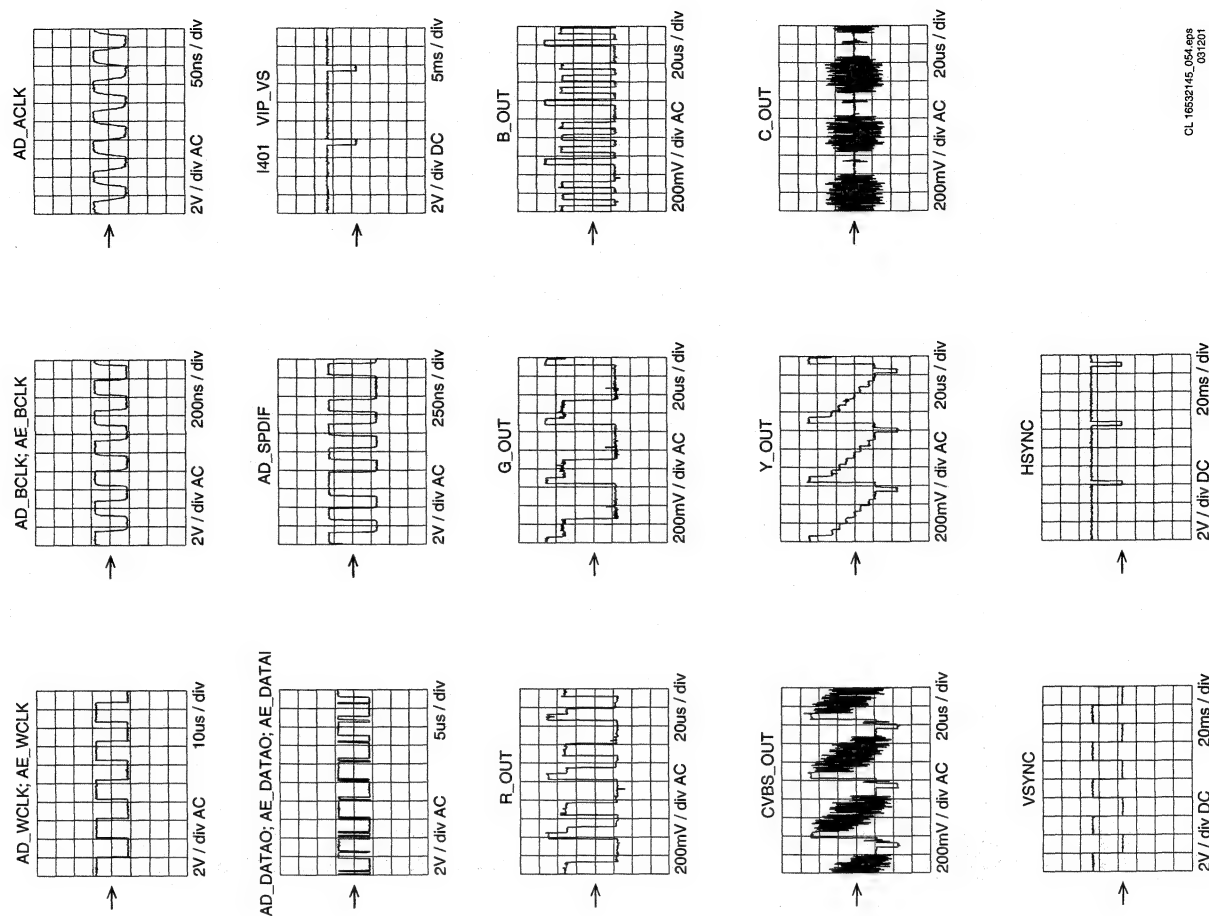

CL 16532145_064.sps
03/201

Figure 6-2

Waveforms Digital Board

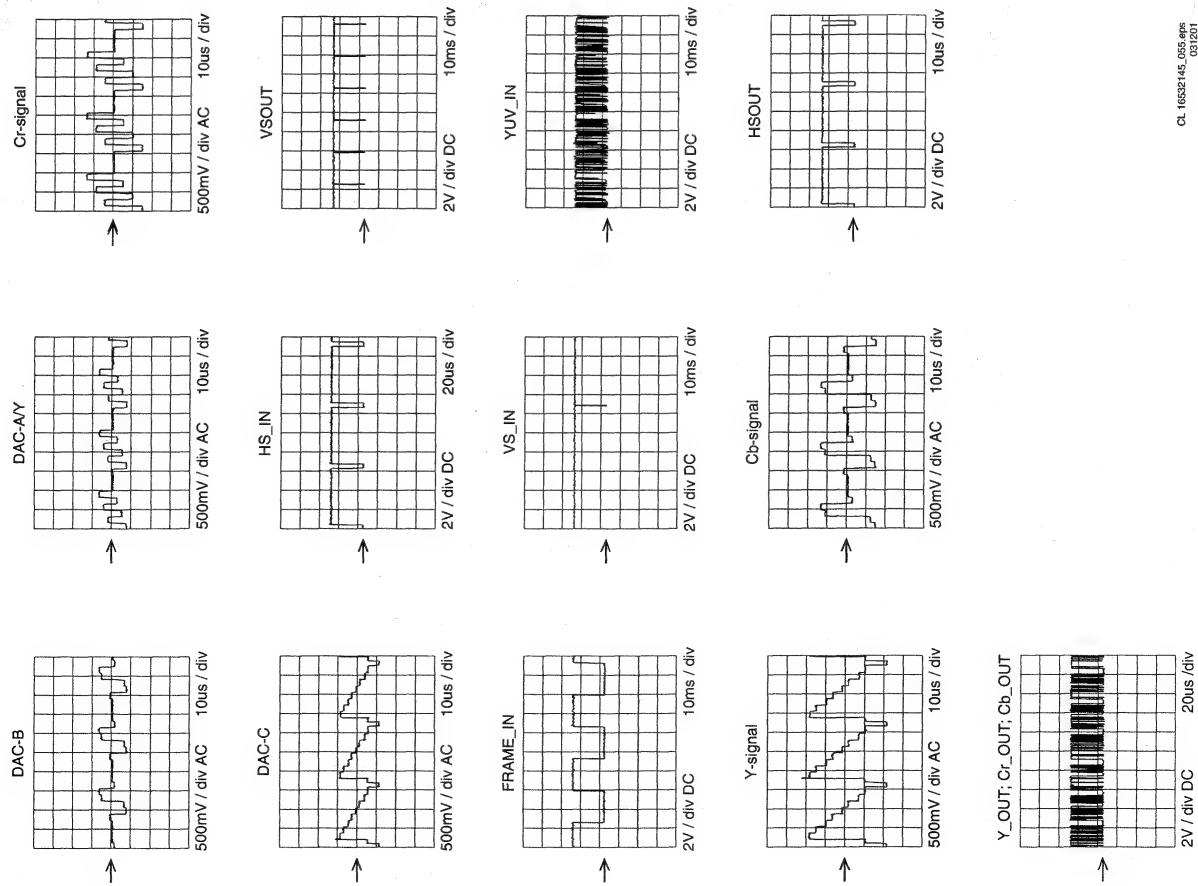



Figure 6-3

CL 16532145_0355_006
03/201


Figure 6-4

CL 16532145_0355_006
03/201


Waveforms DVIO

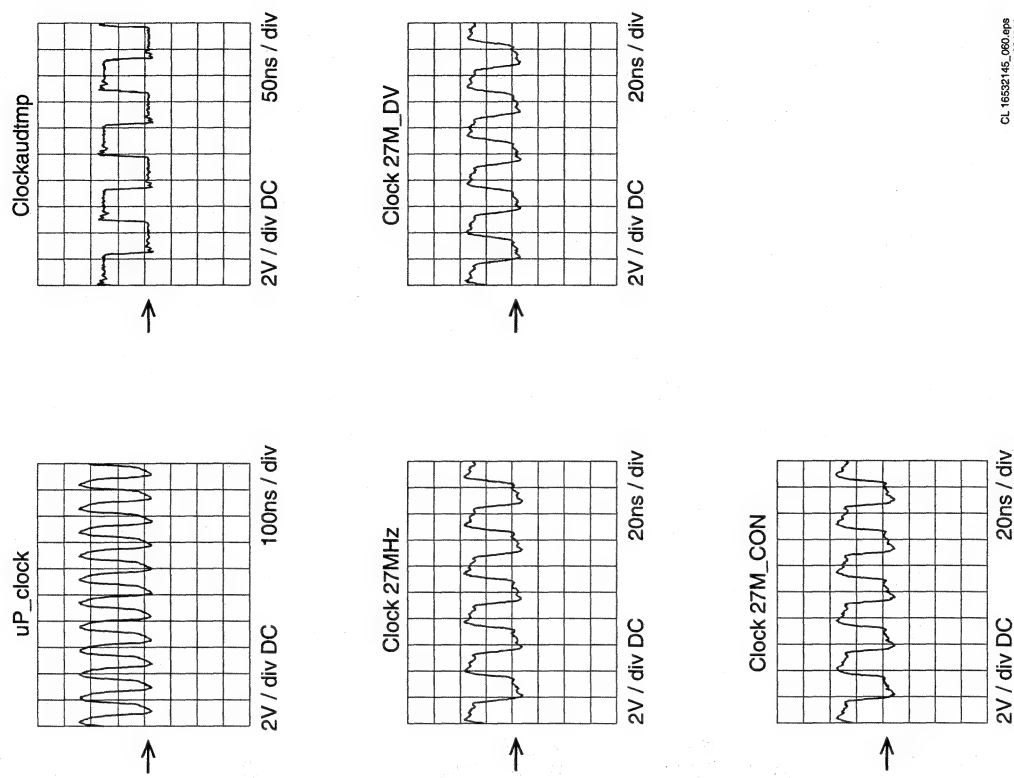

Test points overview Analog Board

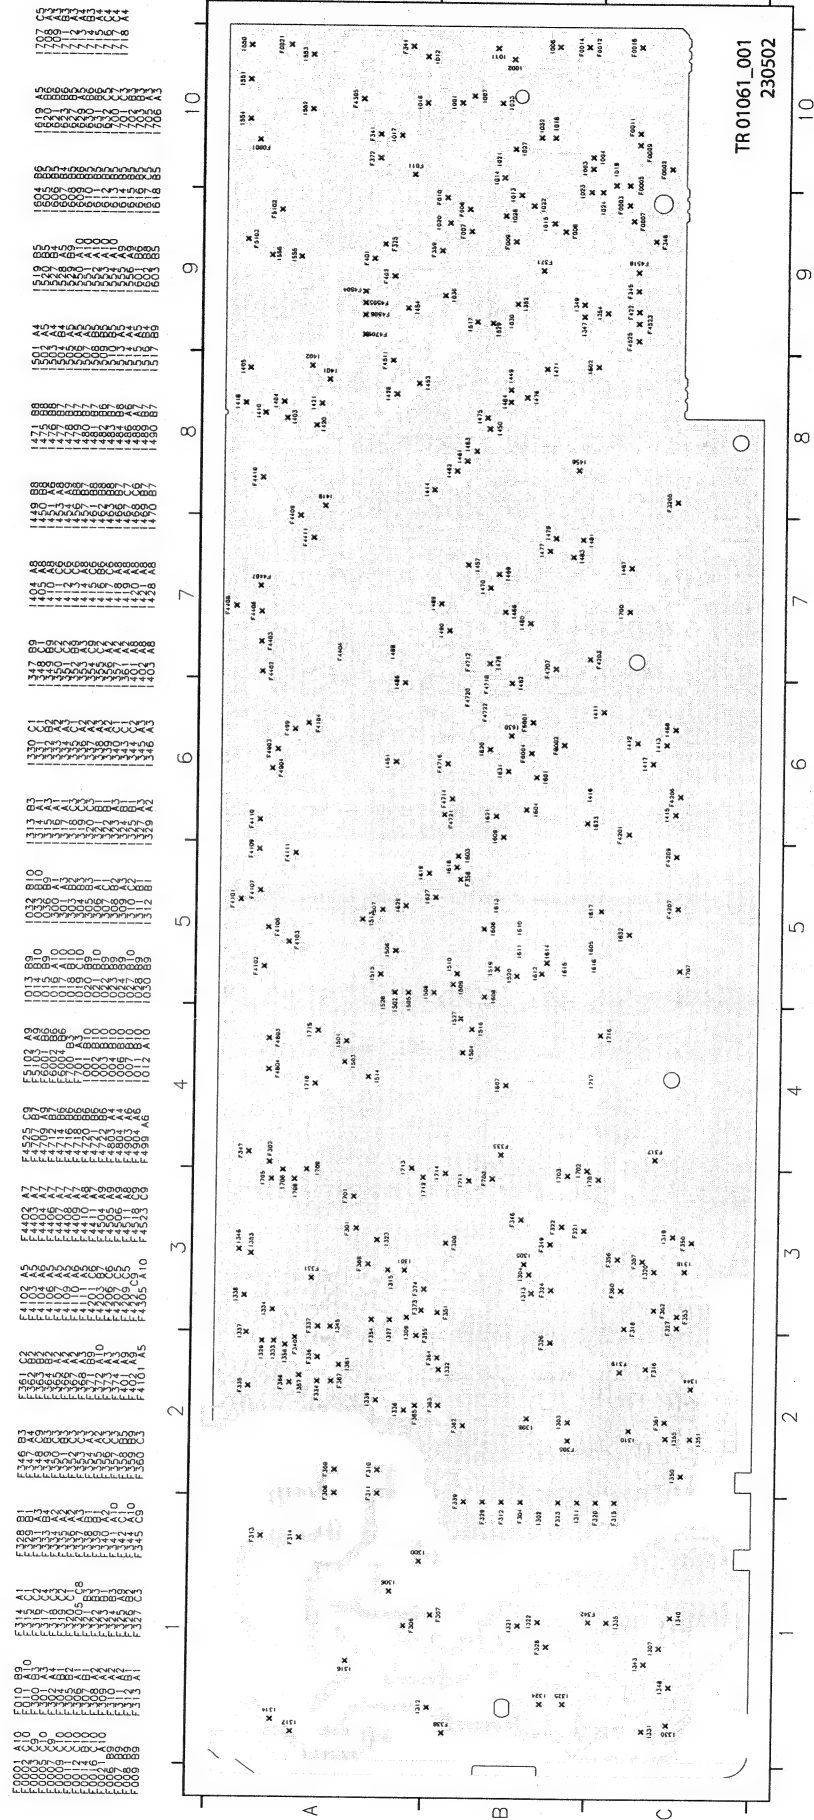


Test points overview UPC12 Sub PCB

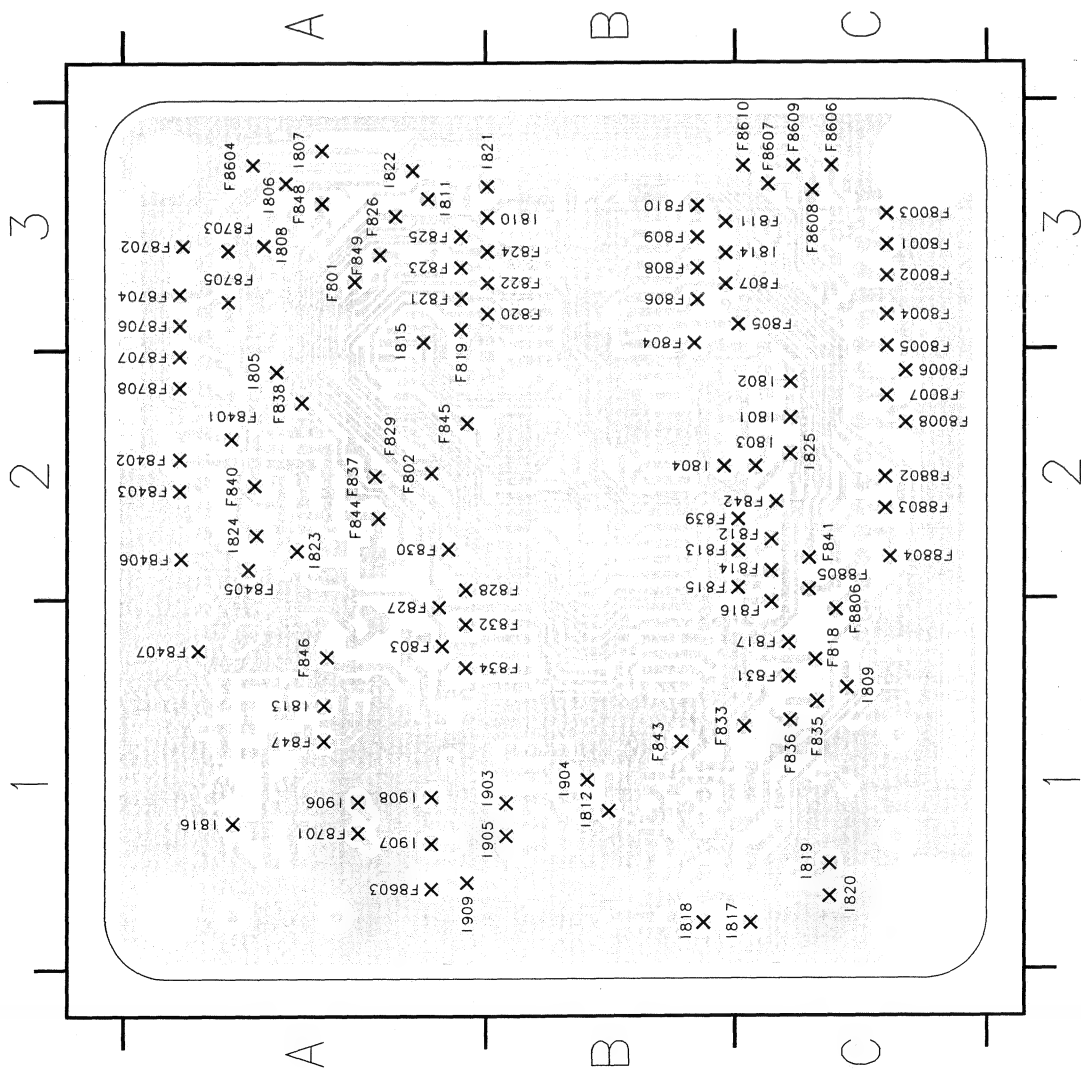[illegible][illegible]


TR 01053_001
140502

Test points overview DIVIO Board

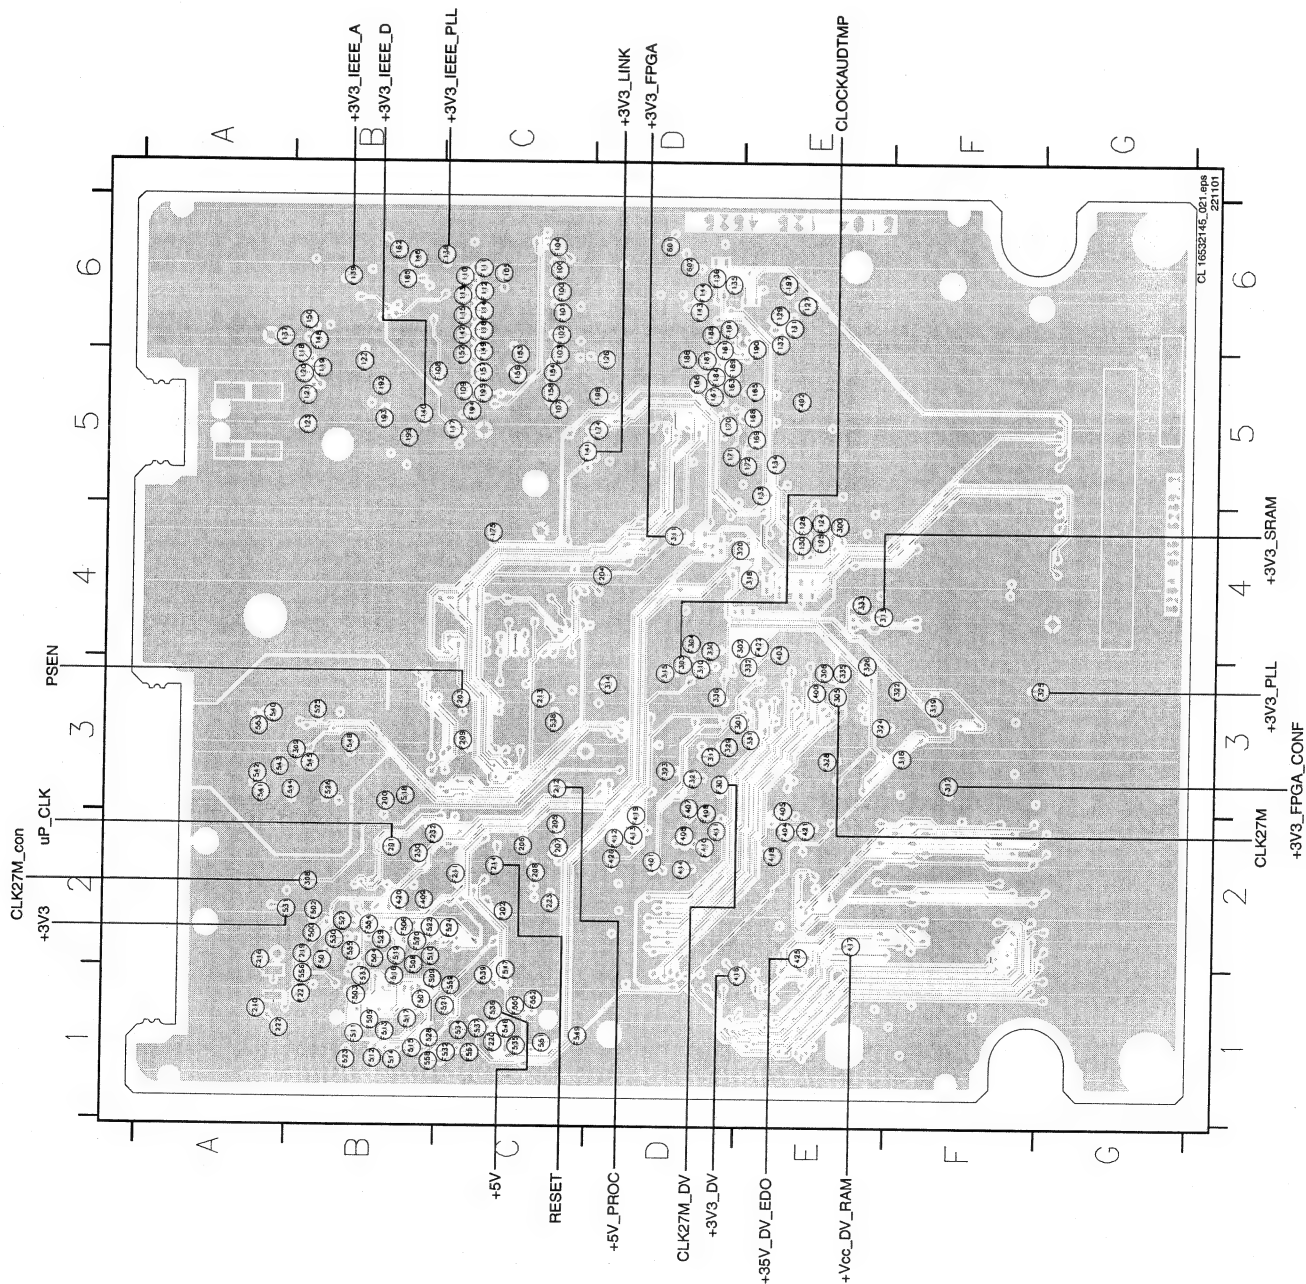

F100	C6	F104	D6	F206	C2	F328	E3	F513	B1
F101	C6	F146	B6	F207	C2	F329	D3	F514	B1
F102	C6	F148	B6	F208	C2	F330	D4	F515	B1
F103	C5	F149	C5	F209	C3	F331	E3	F516	B1
F104	C6	F150	B6	F210	A1	F332	E3	F517	B1
F105	C6	F151	B6	F211	C2	F333	E4	F518	B3
F106	C6	F152	C5	F212	C3	F334	E4	F519	B2
F107	C5	F153	C5	F213	C3	F335	E3	F520	B2
F108	B5	F154	C5	F214	C2	F336	D3	F521	C1
F109	C5	F155	C5	F215	C3	F337	E3	F522	B2
F110	C6	F156	C5	F216	A2	F338	D3	F523	B1
F111	C6	F157	C5	F217	C3	F339	D3	F524	C2
F112	C6	F158	C5	F218	B2	F340	E3	F525	B2
F113	C6	F159	C5	F219	B2	F341	E4	F526	B2
F114	C6	F160	D6	F220	C1	F342	E4	F527	B2
F115	C6	F161	D6	F221	B1	F343	D2	F528	B1
F116	C6	F162	B6	F222	A1	F344	D2	F529	B2
F117	C5	F163	D5	F223	C2	F345	E1	F530	B2
F118	B5	F164	D5	F224	A1	F346	E1	F531	A2
F119	B5	F165	D5	F225	C2	F347	E2	F532	C1
F120	B5	F166	D5	F226	B2	F348	E2	F533	B1
F121	B5	F167	D5	F227	C2	F349	E2	F534	C1
F122	B5	F168	D5	F228	B2	F350	E3	F535	C1
F123	B5	F169	D5	F229	B2	F351	E3	F536	C1
F124	E4	F170	D5	F230	B2	F352	E3	F537	C1
F125	E4	F171	D5	F231	D3	F353	E3	F538	C3
F126	D4	F172	D5	F232	B2	F354	E3	F539	C1
F127	E6	F173	D5	F233	C2	F355	E3	F540	A3
F128	E6	F174	D5	F234	C2	F356	E3	F541	A3
F129	E6	F175	D5	F235	C2	F357	E3	F542	A3
F130	E4	F176	D5	F236	B2	F358	E3	F543	A3
F131	E6	F177	D5	F237	B2	F359	E3	F544	B3
F132	E6	F178	D5	F238	B2	F360	B2	F545	B3
F133	E6	F179	D5	F239	B2	F361	B2	F546	C1
F134	E5	F180	D6	F240	B2	F362	B2	F547	C1
F135	E5	F181	D6	F241	D3	F363	B1	F548	B3
F136	D6	F182	D6	F242	D3	F364	B1	F549	C1
F137	A6	F183	D6	F243	D3	F365	B1	F550	C1
F138	C6	F184	D6	F244	D3	F366	B1	F551	C1
F139	B6	F185	D6	F245	D3	F367	B1	F552	C1
F140	B5	F186	D6	F246	D3	F368	B2	F553	A3
F141	C5	F187	D6	F247	D3	F369	B2	F554	A2
F142	C6	F188	D6	F248	D3	F370	B2	F555	B2
F143	D6	F189	D6	F249	D3	F371	B1	F556	B1
F144	D6	F190	D6	F250	D3	F372	B1	F557	C1


Test points overview Digital Board

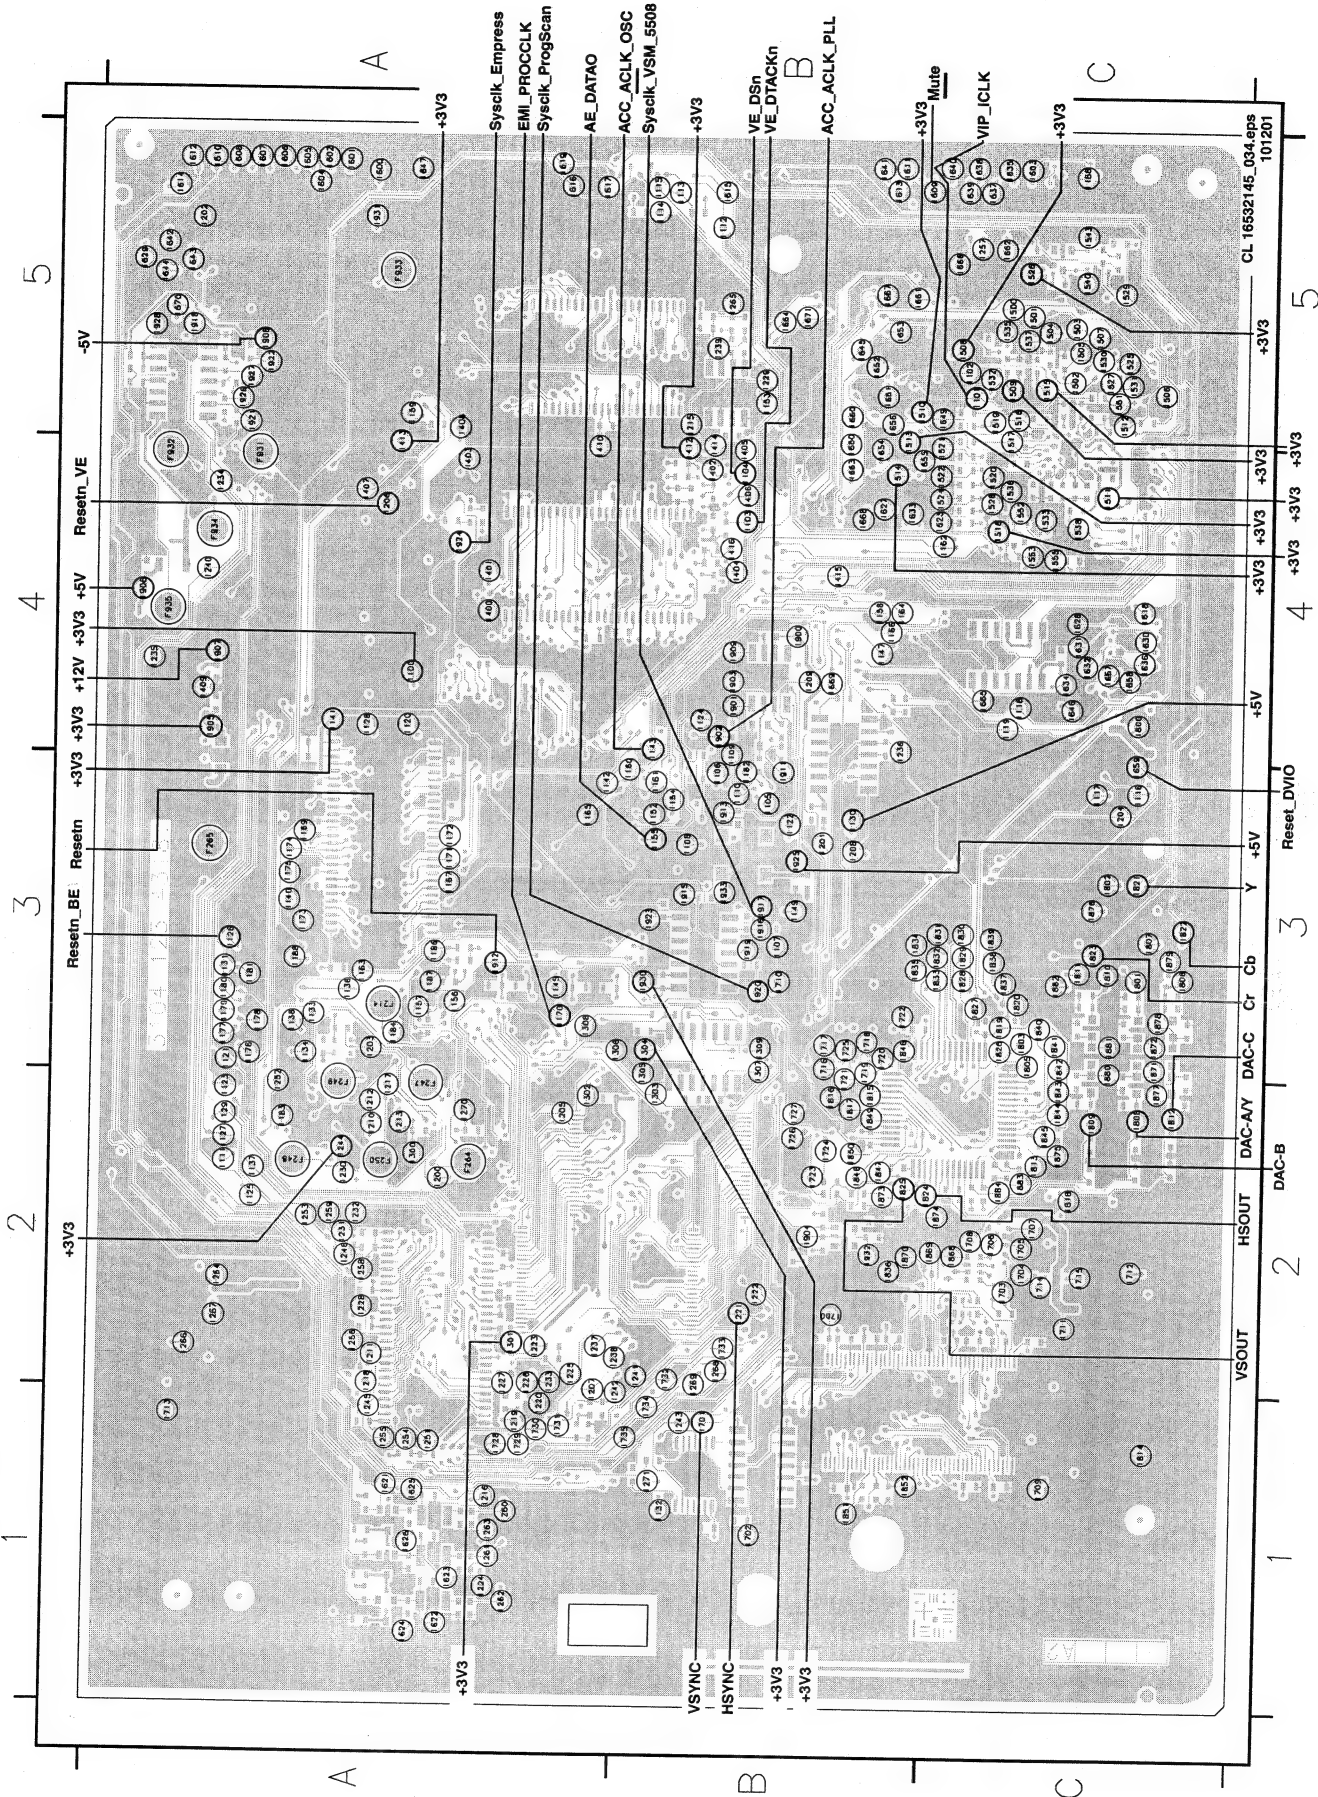

Layout Digital Board (Mapping Testlands)


F214 A3	1175 A3	I300 A2	I610 A5	I720 B3	I880 C3
F247 A2	1176 A3	I301 A2	I611 B5	I721 B2	I881 C3
F248 A2	1177 A3	I302 A2	I612 A5	I722 B3	I882 C3
F249 A2	1178 A3	I303 B2	I613 B5	I723 B2	I883 C2
F250 A2	1179 A3	I304 B3	I614 A5	I724 B2	I884 C2
F264 A2	1180 A3	I305 B3	I615 B5	I725 B3	I900 B4
F265 A3	1181 A3	I306 A3	I616 A5	I726 B2	I901 B4
F331 A4	1182 B3	I307 B3	I617 A5	I727 B2	I902 B4
F332 A4	1183 A2	I308 A3	I618 A2	I728 A1	I903 B4
F333 A5	1184 A3	I309 B3	I619 A5	I729 A1	I904 B2
F334 A4	1186 A3	I400 A4	I621 A1	I730 A1	I905 A4
F335 A4	1187 A3	I401 A4	I622 A1	I731 A1	I906 A4
I100 C4	1188 A3	I402 B4	I623 A1	I732 B2	I907 A4
I101 C5	1200 A2	I403 A4	I624 A1	I733 B2	I908 A5
I102 C5	1201 B3	I404 B4	I625 A1	I734 B1	I909 B4
I103 B4	1202 A5	I405 B4	I626 A1	I735 B1	I911 B3
I104 B4	1203 A3	I406 B4	I627 B4	I800 C4	I912 A3
I105 B3	1204 C3	I407 A4	I628 C4	I801 C3	I913 B3
I106 B3	1205 A2	I408 A5	I629 A5	I802 C3	I915 B3
I107 B3	1206 A4	I409 A4	I630 C4	I803 C3	I916 B3
I108 B3	1207 A2	I410 A4	I631 C4	I805 C3	I917 B3
I109 B4	1208 B3	I412 B4	I632 C4	I806 C3	I918 A5
I110 B3	1209 B4	I413 A4	I633 B4	I807 C3	I919 B3
I111 A2	1210 A2	I414 B4	I634 C4	I808 C2	I920 B3
I112 B5	1211 A2	I415 B4	I635 C5	I809 C2	I921 A5
I113 B5	1212 A2	I416 B4	I636 C4	I810 C3	I922 A5
I114 B5	1213 A5	I500 C5	I637 C5	I811 C3	I923 B3
I115 B5	1215 B5	I501 C5	I638 C5	I812 C2	I924 A4
I116 C3	1216 A1	I502 C5	I639 C5	I813 C2	I925 B3
I117 C3	1217 A2	I503 C5	I640 C5	I814 C1	I926 A5
I118 C4	1218 A2	I504 C5	I641 B5	I815 B2	I927 A5
I119 C4	1219 A1	I505 C5	I642 A5	I816 B2	I928 A5
I120 A4	1220 A1	I506 C5	I643 A5	I817 B2	I930 B3
I121 A3	1221 B2	I507 C5	I644 A5	I818 C2	I931 A5
I122 B3	1222 B2	I508 C5	I645 B5	I819 C3	I932 B2
I123 A2	1223 A2	I509 C5	I646 C4	I820 C3	I933 B3
I124 B4	1224 A1	I510 B5	I647 A5	I821 C3	
I125 A2	1225 A2	I511 C4	I649 C5	I822 C3	
I126 A3	1226 A2	I512 C5	I650 B4	I823 C3	
I127 A2	1227 A2	I513 B5	I651 B5	I824 B2	
I128 A4	1228 A2	I514 B4	I652 B5	I825 B2	
I129 A2	1229 B5	I515 C5	I653 B5	I826 C3	
I130 B3	1230 A3	I516 C5	I654 B4	I827 C3	
I131 A3	1231 A2	I517 C5	I655 B4	I828 C3	
I133 A3	1232 A2	I518 C4	I656 B5	I829 C3	
I134 A3	1234 A4	I520 C4	I658 C4	I831 C3	
I135 A3	1235 A3	I521 C4	I659 C3	I832 C3	
I137 A2	1236 B4	I522 C4	I660 B5	I833 C3	
I138 A3	1237 A2	I523 C4	I661 B5	I834 B3	
I140 A3	1238 A2	I524 C4	I662 C5	I835 B3	
I141 A4	1239 B5	I525 C5	I663 B4	I836 B2	
I142 A3	1240 A4	I526 C5	I664 B5	I837 C3	
I143 B4	1241 B2	I527 C5	I665 C4	I838 C3	
I145 A3	1242 B1	I528 C4	I666 C5	I839 C3	
I147 B4	1243 B1	I529 C5	I667 B5	I840 C3	
I149 B3	1244 A3	I530 C5	I668 B4	I841 C3	
I152 B3	1245 A1	I531 C5	I669 B4	I842 C3	
I153 B5	1246 A2	I532 C5	I670 A5	I843 C2	
I154 B3	1251 A1	I533 C4	I671 B5	I844 C2	
I155 B3	1252 A2	I535 C5	I700 B2	I845 C2	
I156 A3	1253 A2	I536 C4	I701 B1	I846 B3	
I157 A3	1254 A1	I537 C5	I702 B1	I847 B2	
I158 B4	1255 A1	I538 C4	I703 C2	I848 B2	
I159 A5	1256 A2	I540 C5	I704 C2	I849 B2	
I160 B3	1257 C5	I543 C5	I705 C2	I850 B2	
I161 B3	1258 A2	I551 C5	I706 C2	I851 B1	
I162 C4	1259 A2	I552 C4	I707 C2	I852 B1	
I163 A3	1260 A1	I553 C4	I708 C2	I856 C2	
I164 B4	1261 A1	I555 C4	I709 C1	I869 C2	
I165 A3	1262 A1	I600 A5	I710 B3	I870 B2	
I166 B4	1263 A1	I601 A5	I711 C2	I871 C3	
I167 A3	1264 A2	I602 A5	I712 C2	I872 C3	
I168 C5	1265 B5	I603 C5	I713 A1	I873 B2	
I169 A3	1266 A2	I604 A5	I714 C2	I874 C2	
I170 A3	1267 A2	I605 A5	I715 C2	I875 C2	
I171 A3	1268 B2	I606 A5	I716 B3	I876 C3	
I172 A3	1269 B2	I607 A5	I717 B3	I877 C2	
I173 A3	1270 A2	I608 A5	I718 B3	I878 C3	
I174 A3	1271 B1	I609 B5	I719 B3	I879 C3	

Layout Display Panel (DISP)

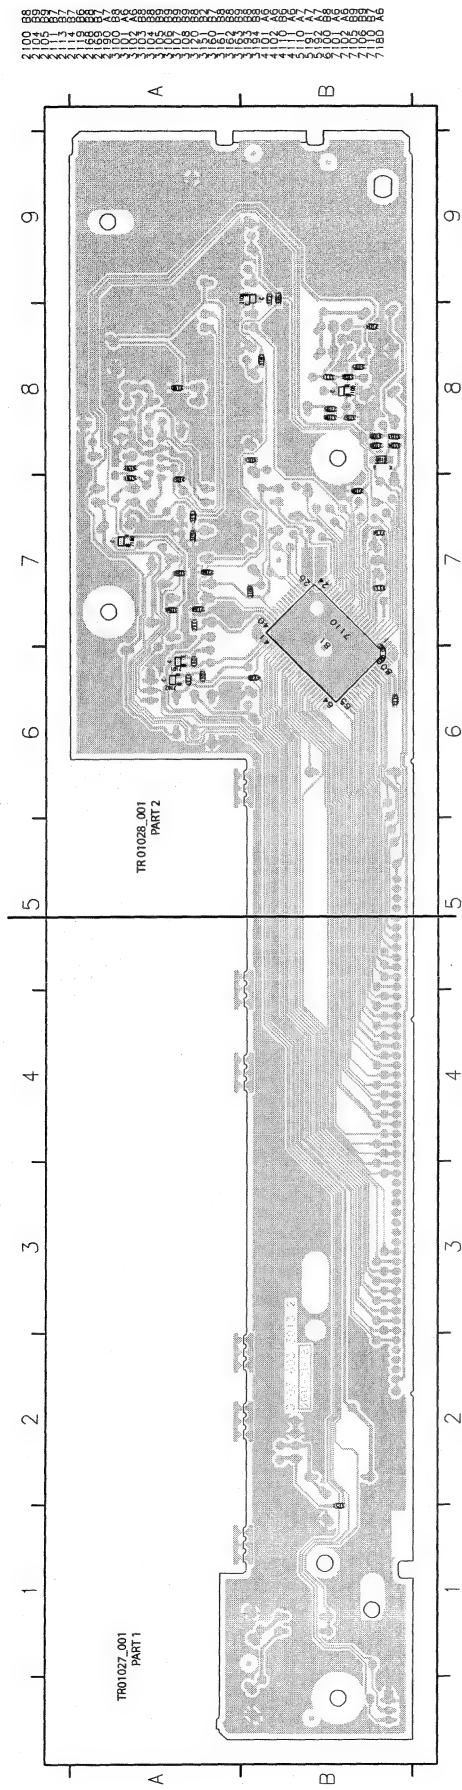


7.00
7.00
7.00

7.00
7.00
7.00

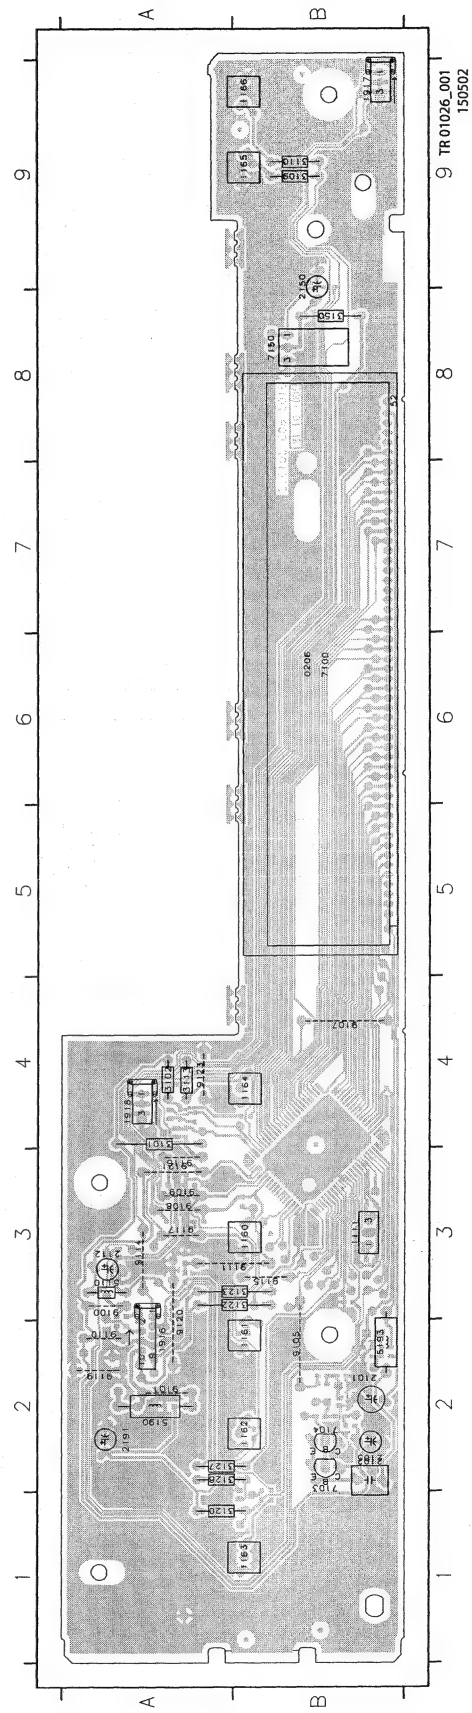

Layout Display Panel (Part 1 Bottom View)


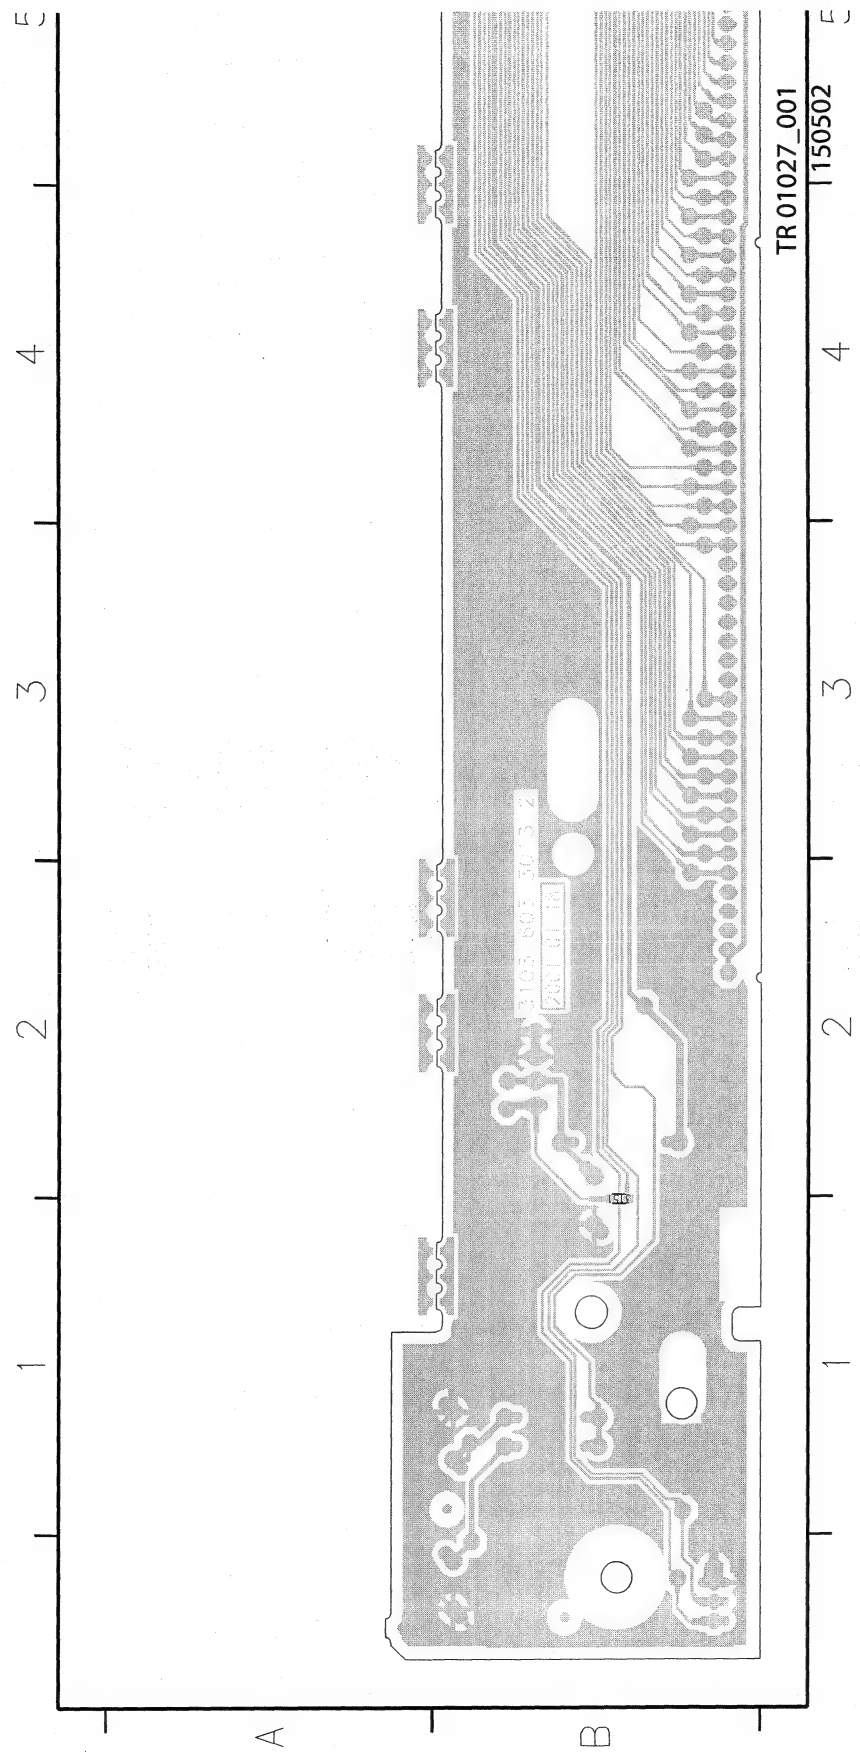


150502 |

DVDR880-890 / 0X1




Layout Front Connector Panel (FC)

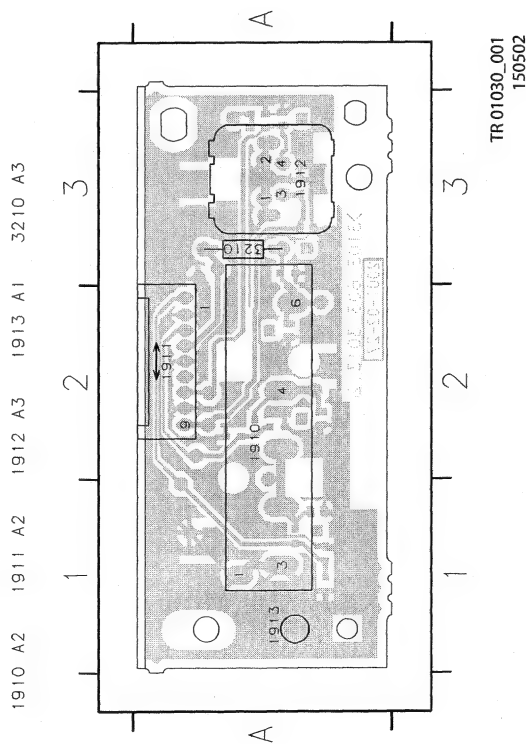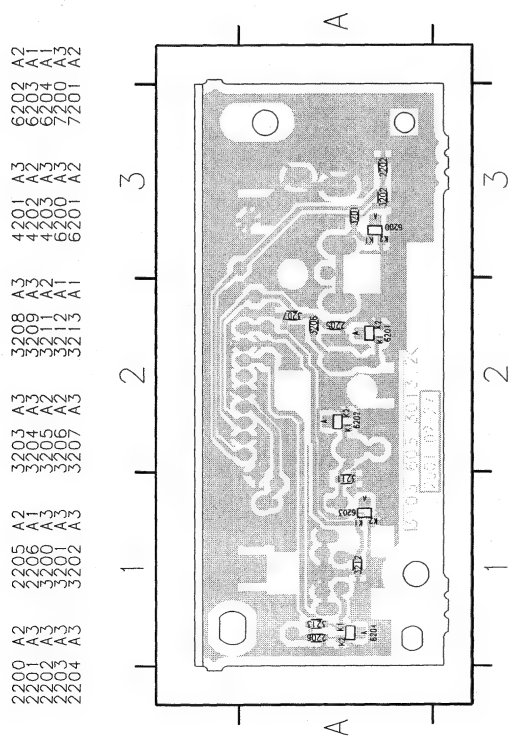

TR 01030_001
150502

Layout Key Panel (KEY)



A2
A1
A1
A1


70
71
20
72

119
31
31

Record Key Panel (REC)


Layout Record Key Panel (REC)

0280 C1 1921 A3 3181 A1 6180 B1 F2102 A3 I101 A1
1180 B1 3180 A2 3182 A1 F2101 A3 F2103 A3 I102 A1

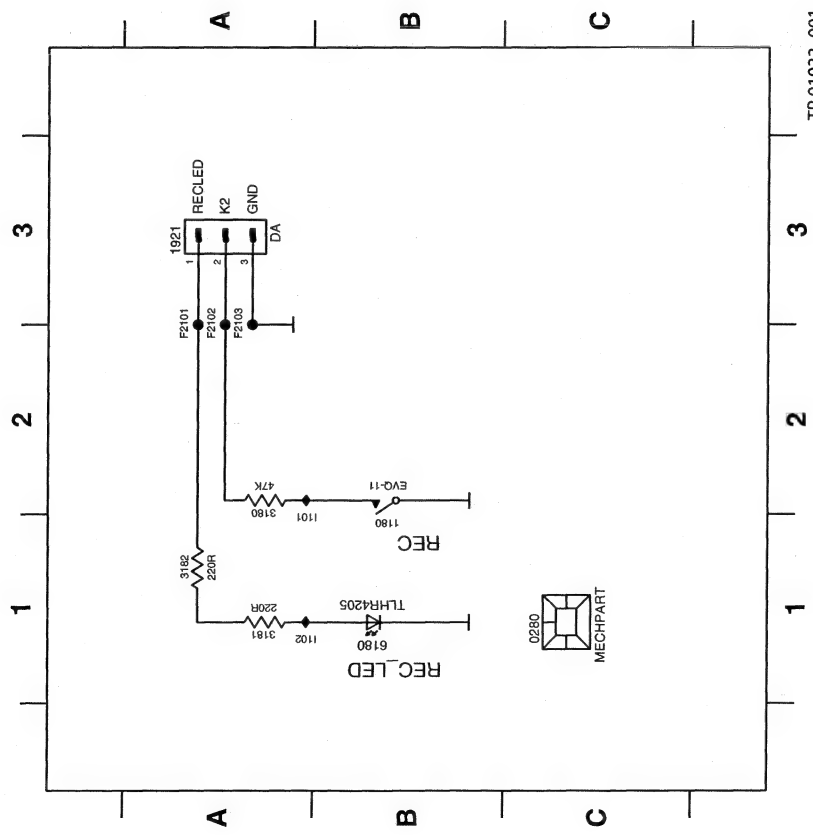


TR 01033_001
150502

3180 A1
3181 A1
3182 A2

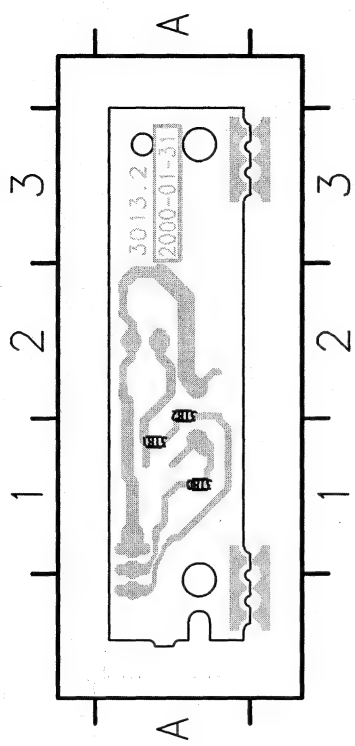


0280 A2
1180 A3
1921 A3
6180 A2

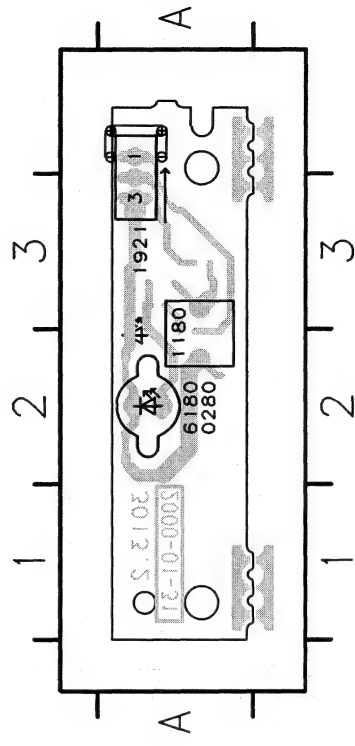


TR 01034_001
150502

Analog Board: Fronted Video (FV)




Pos.	PAL BG (/01)	PAL I (/07)	MULTISTD (/39)
1703	G3956M	K3953M	G3956M
1704	TPS 5,5 MHz	--	TPS 5,5 MHz
1706	--	TPS 6,0 MHz	--
3731	270R	330R	270R
4700	0R	0R	--
4701	0R	0R	--
7710	TDA9817	TDA9817	TDA9818

Analog Board: In/Out Video (IOV)

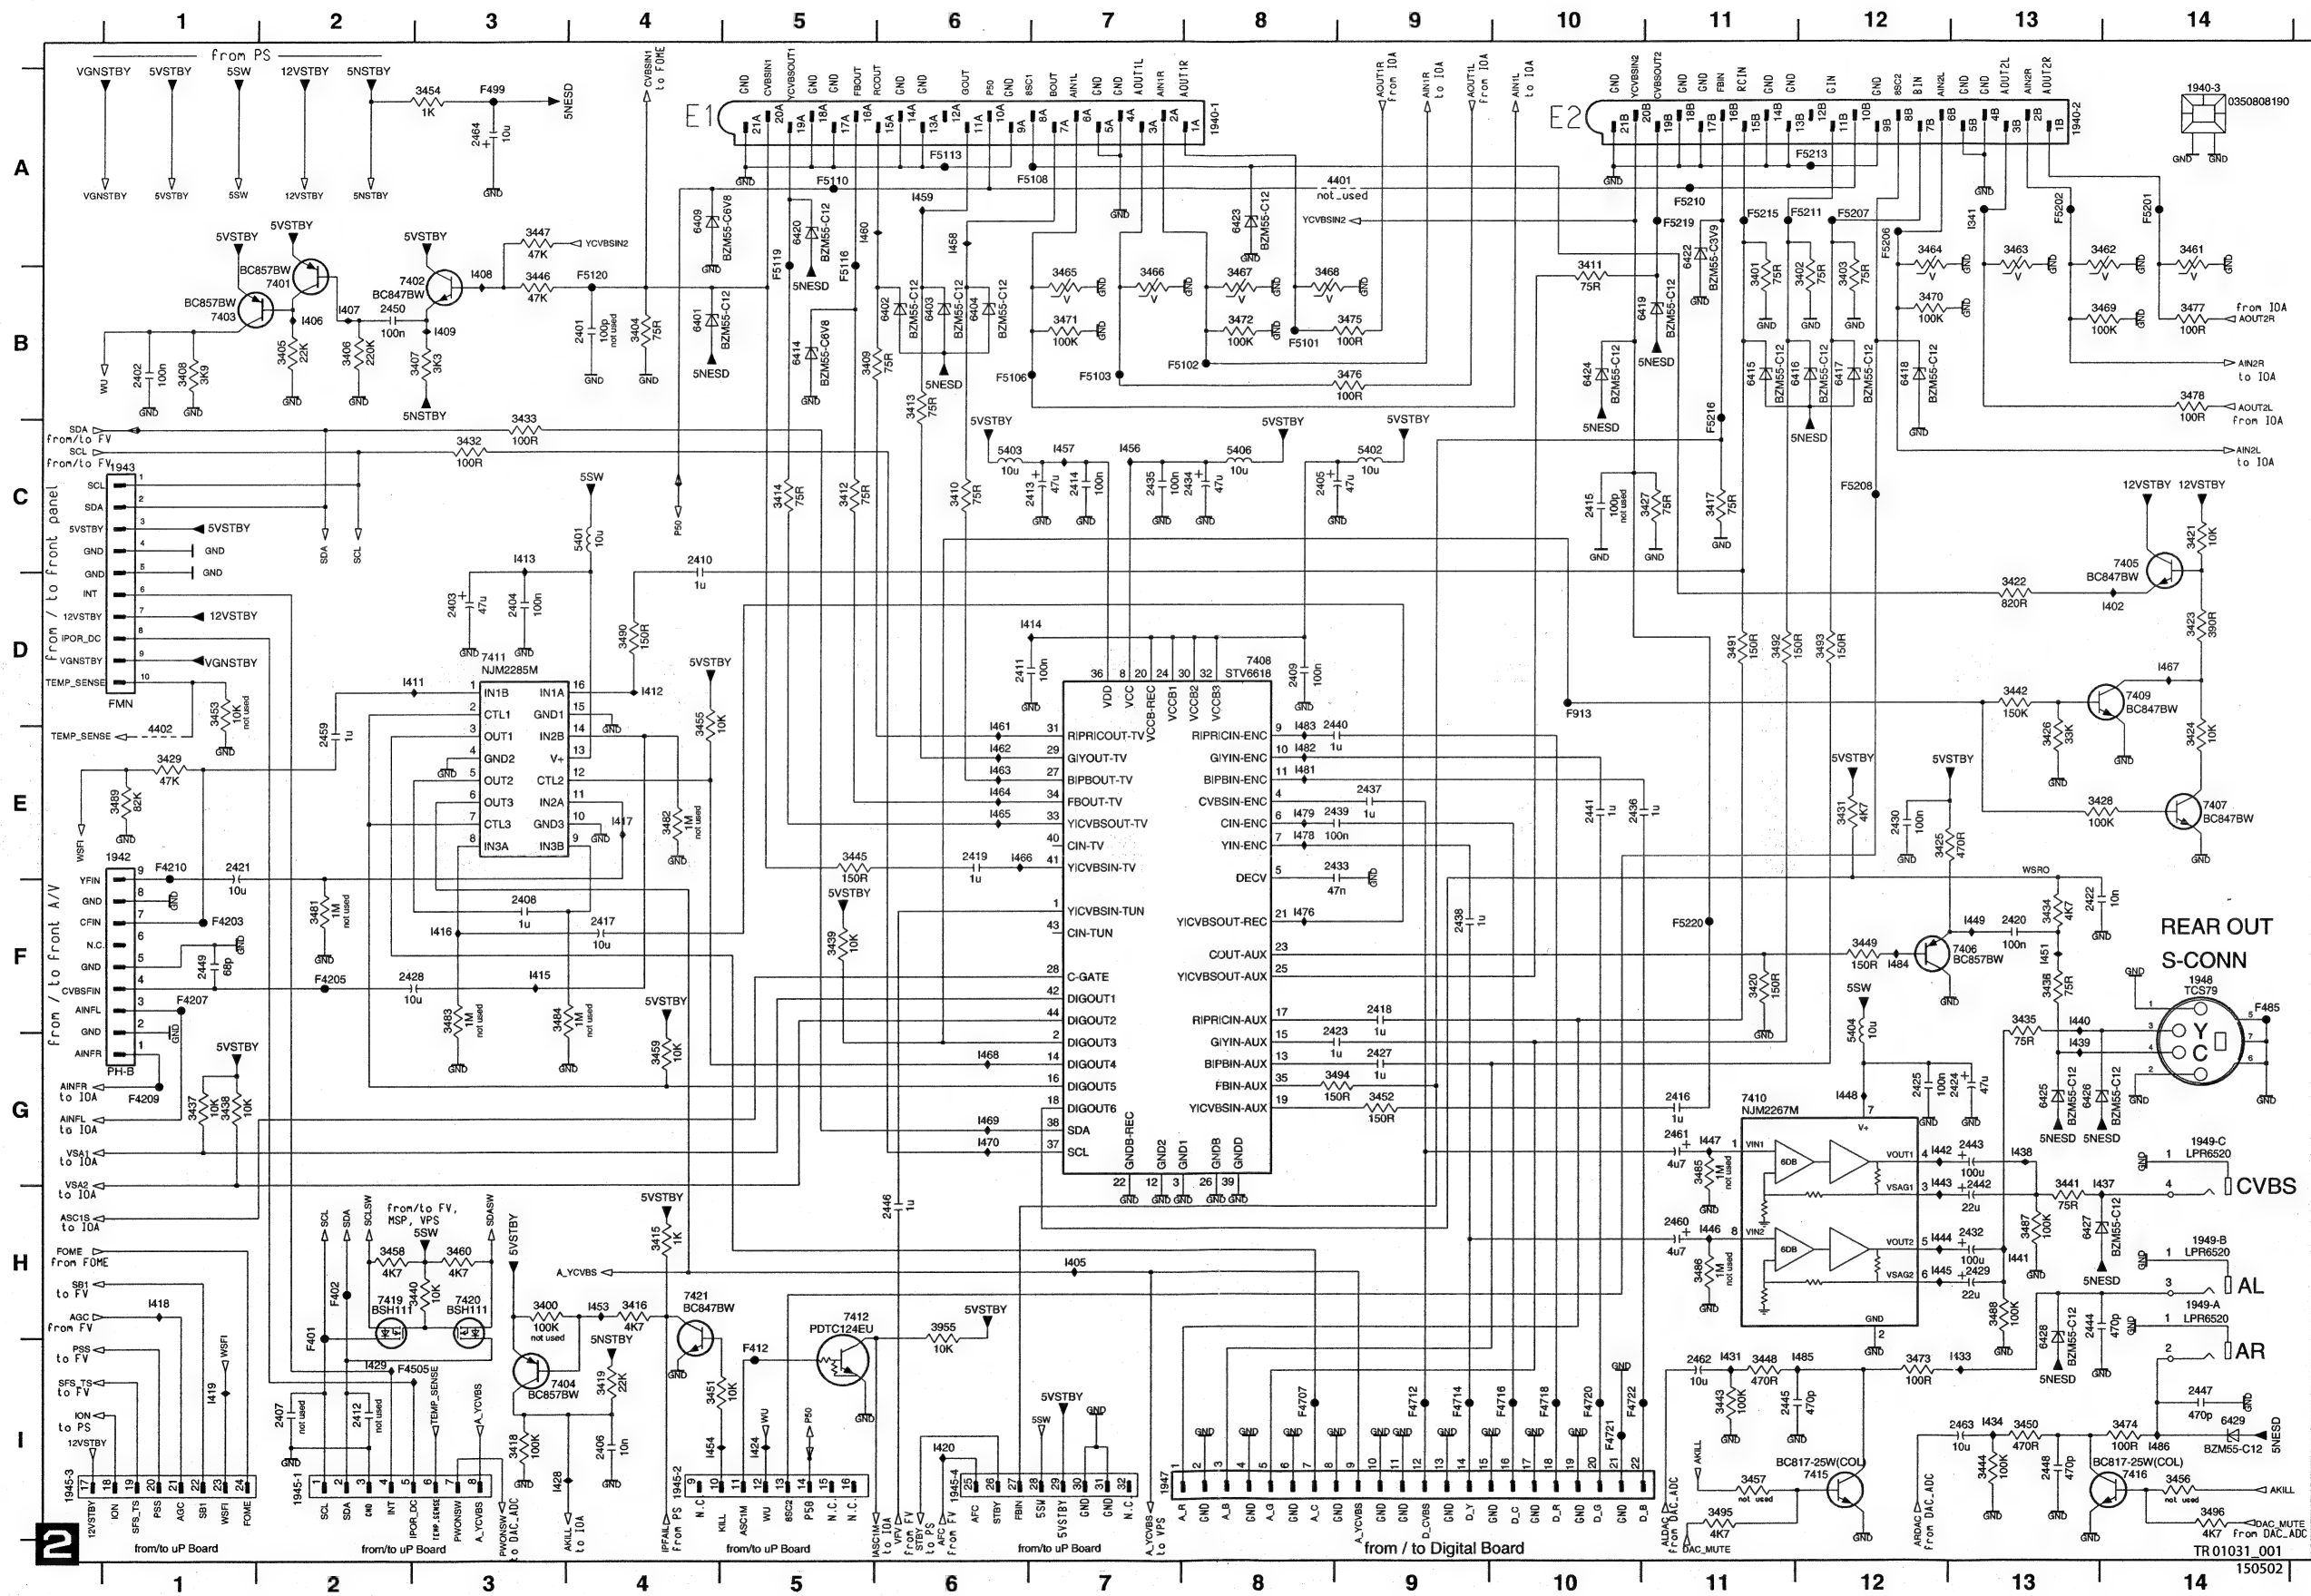[illegible]


Analog Board: IN/Out Audio (IOA)

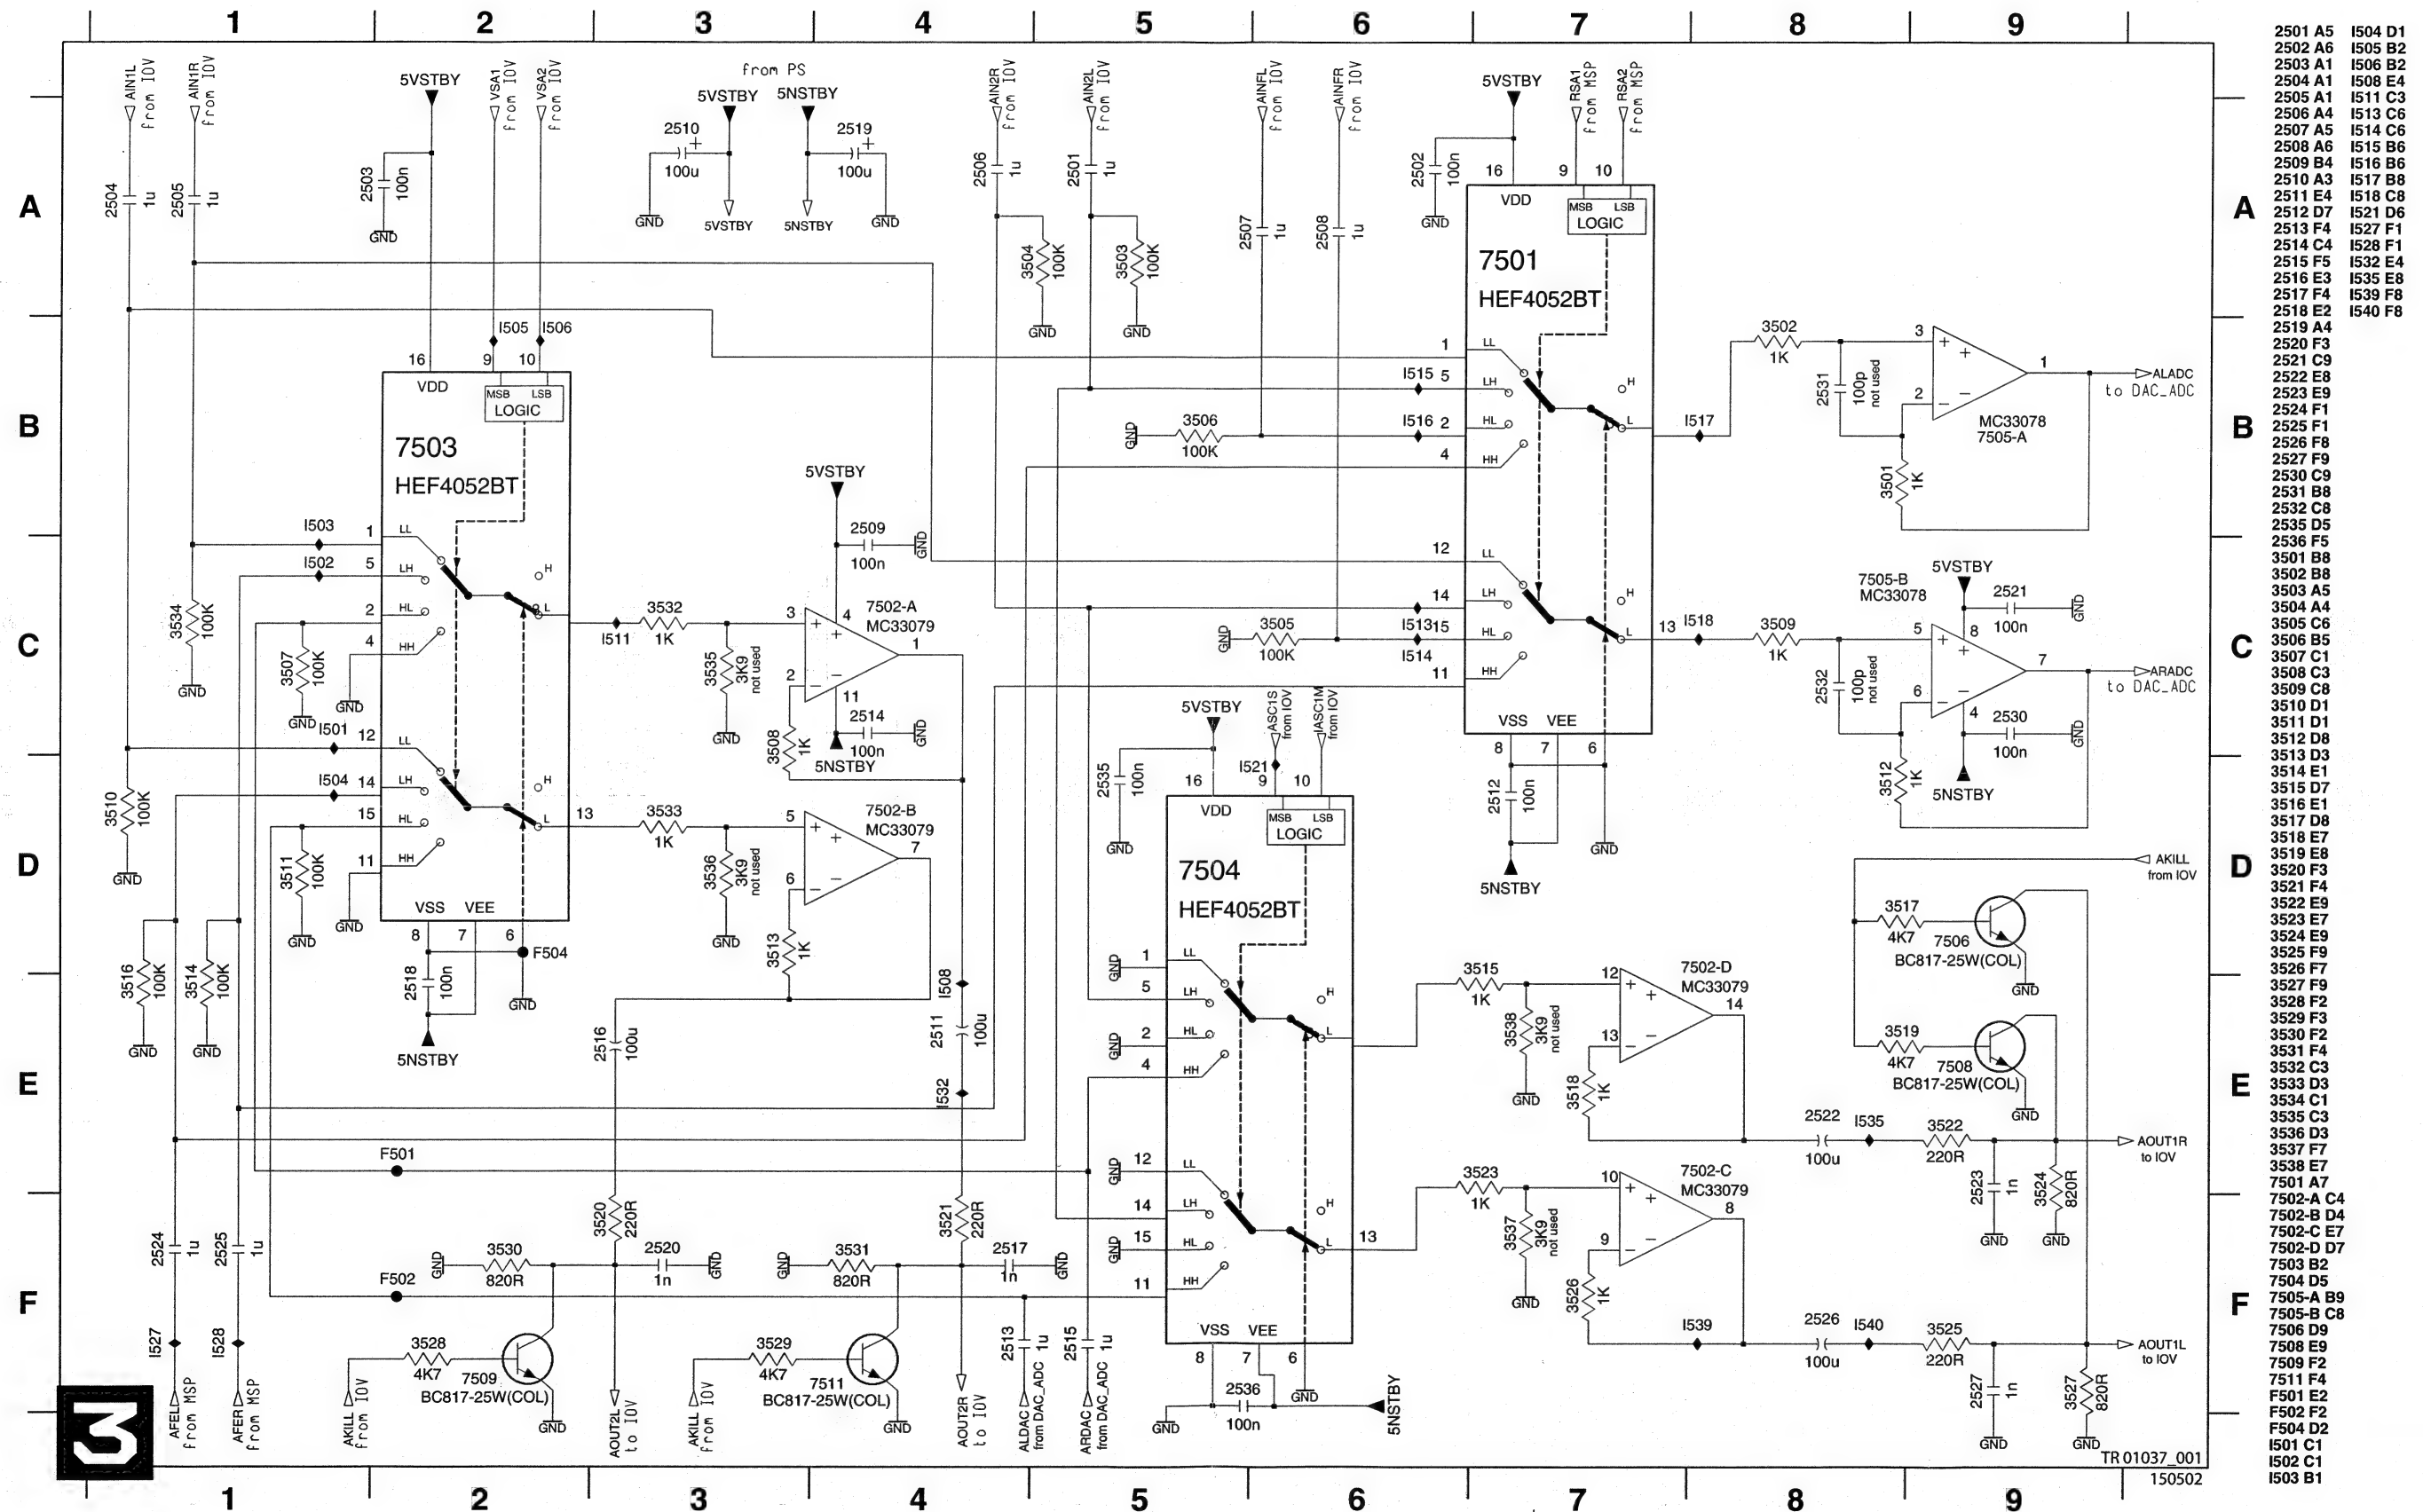

Analog Board: Power Supply (PS)




1300 A1	3365 F3	F357 H1
1301 B1	3366 G5	F358 I1
1302 A3	3367 G5	F359 I8
1303 E8	3368 D11	F360 I1
1304 C9	3371 H10	F361 I6
1306 G13	3372 H10	F362 G11
1307 A13	3373 H10	F363 G11
1308 D13	3381 G12	F364 A12
1309 A13	3382 A16	F365 E5
1931 B1	5302 B3	F367 E8
1932 E1	5304 D6	F368 E9
1933 H1	5305 G9	F369 E9
2001 A6	5306 C8	F371 G12
2002 B2	5307 E9	F372 D12
2003 B4	5308 A8	F373 A12
2004 F8	5309 D9	F374 A12
2005 B9	5310 A7	F381 F1
2006 B9	5301 B4	F382 F1
2307 C4	6302 B4	F383 G1
2308 C5	6303 B7	F384 G1
2309 D4	6304 B3	I300 A6
2310 A10	6305 C4	I301 A11
2311 B10	6306 C4	I302 A6
2312 C8	6307 C7	I303 A8
2313 A13	6308 A7	I304 A10
2314 D5	6309 D5	I305 A10
2315 E4	6310 D7	I306 A3
2316 A7	6311 E5	I307 G4
2317 E3	6312 F7	I308 G4
2318 E5	6313 E8	I309 B12
2319 D6	6314 H10	I310 B8
2320 D9	6315 E7	I311 B9
2321 H11	6316 H7	I312 B4
2322 G7	6317 F10	I313 B10
2323 F9	6318 G11	I314 B3
2324 H4	6319 G9	I315 B10
2325 H4	6320 H10	I316 B5
2326 G10	6321 G4	I317 C3
2327 G11	6322 F12	I318 C11
2328 G9	6323 H12	I319 C10
2329 B10	6324 H10	I320 C10
2330 E10	7301 A11	I321 D5
2331 I3	7302 B10	I322 D6
2332 H13	7303 C10	I323 D11
2333 A8	7304 B11	I324 E3
2334 H10	7305 C11	I325 E5
2335 D9	7306 D12	I326 E9
2336 H8	7307 E3	I327 F10
2337 H13	7308 H13	I329 F10
2338 B10	7309 D11	I330 F3
2339 A10	7310 H7	I331 F3
2340 A2	7311 H8	I332 F7
2341 F9	7312 F11	I333 F11
2342 B3	7313 G2	I334 F11
3300 A5	7314 H5	I335 F5
3301 A6	7315 I6	I336 F7
3302 F10	7317 A10	I337 F10
3303 H11	7318 H10	I338 F11
3304 F10	7319 H10	I339 G7
3305 B2	7320 H13	I340 G4
3306 A3	7321 H9	I342 I12
3307 F11	7322 G12	I343 H5
3308 C4	7301 E10	I344 H6
3309 C5	9304 F9	I345 H8
3310 C5	9305 H11	I346 H13
3311 C5	9306 H11	I347 H10
3312 C10	F300 A12	I348 I3
3313 D11	F301 A13	I349 H10
3314 C11	F302 A13	I350 I5
3315 C11	F304 A7	I351 A6
3316 C12	F305 A7	I352 I10
3317 H6	F306 B5	I353 I13
3318 E3	F307 A5	I354 H12
3319 H11	F308 B1	I355 I10
3321 E4	F309 B1	I356 H12
3322 F9	F310 B2	I357 H11
3323 E11	F311 B2	I361 H6
3324 G4	F312 B7	
3325 E10	F313 B7	
3326 G11	F314 B7	
3327 H13	F315 C7	
3328 H8	F316 C8	
3329 H13	F317 C8	
3330 I6	F318 C9	
3331 I6	F319 C7	
3332 I7	F320 C7	
3333 I6	F321 D12	
3335 A9	F323 D7	
3336 A9	F324 D12	
3337 B9	F325 D13	
3338 B10	F326 D8	
3339 A11	F327 E7	
3340 A11	F329 E7	
3341 A12	F331 F13	
3342 B11	F333 F13	
3343 B11	F334 F9	
3344 F11	F335 F9	
3345 I7	F336 G9	
3346 F7	F337 G9	
3347 I3	F338 G6	
3348 H10	F339 H6	
3349 H10	F340 G11	
3350 F10	F341 G13	
3351 G3	F342 G3	
3352 E4	F343 G12	
3353 H11	F344 G13	
3354 H11	F346 I3	
3355 I9	F347 E13	
3356 G4	F348 H1	
3357 H7	F349 H1	
3358 H8	F350 H1	
3359 H9	F351 H1	
3360 G4	F352 H1	
3361 F11	F353 H1	
3362 H10	F354 I1	
3363 G7	F355 I1	
3364 G8	F356 C9	

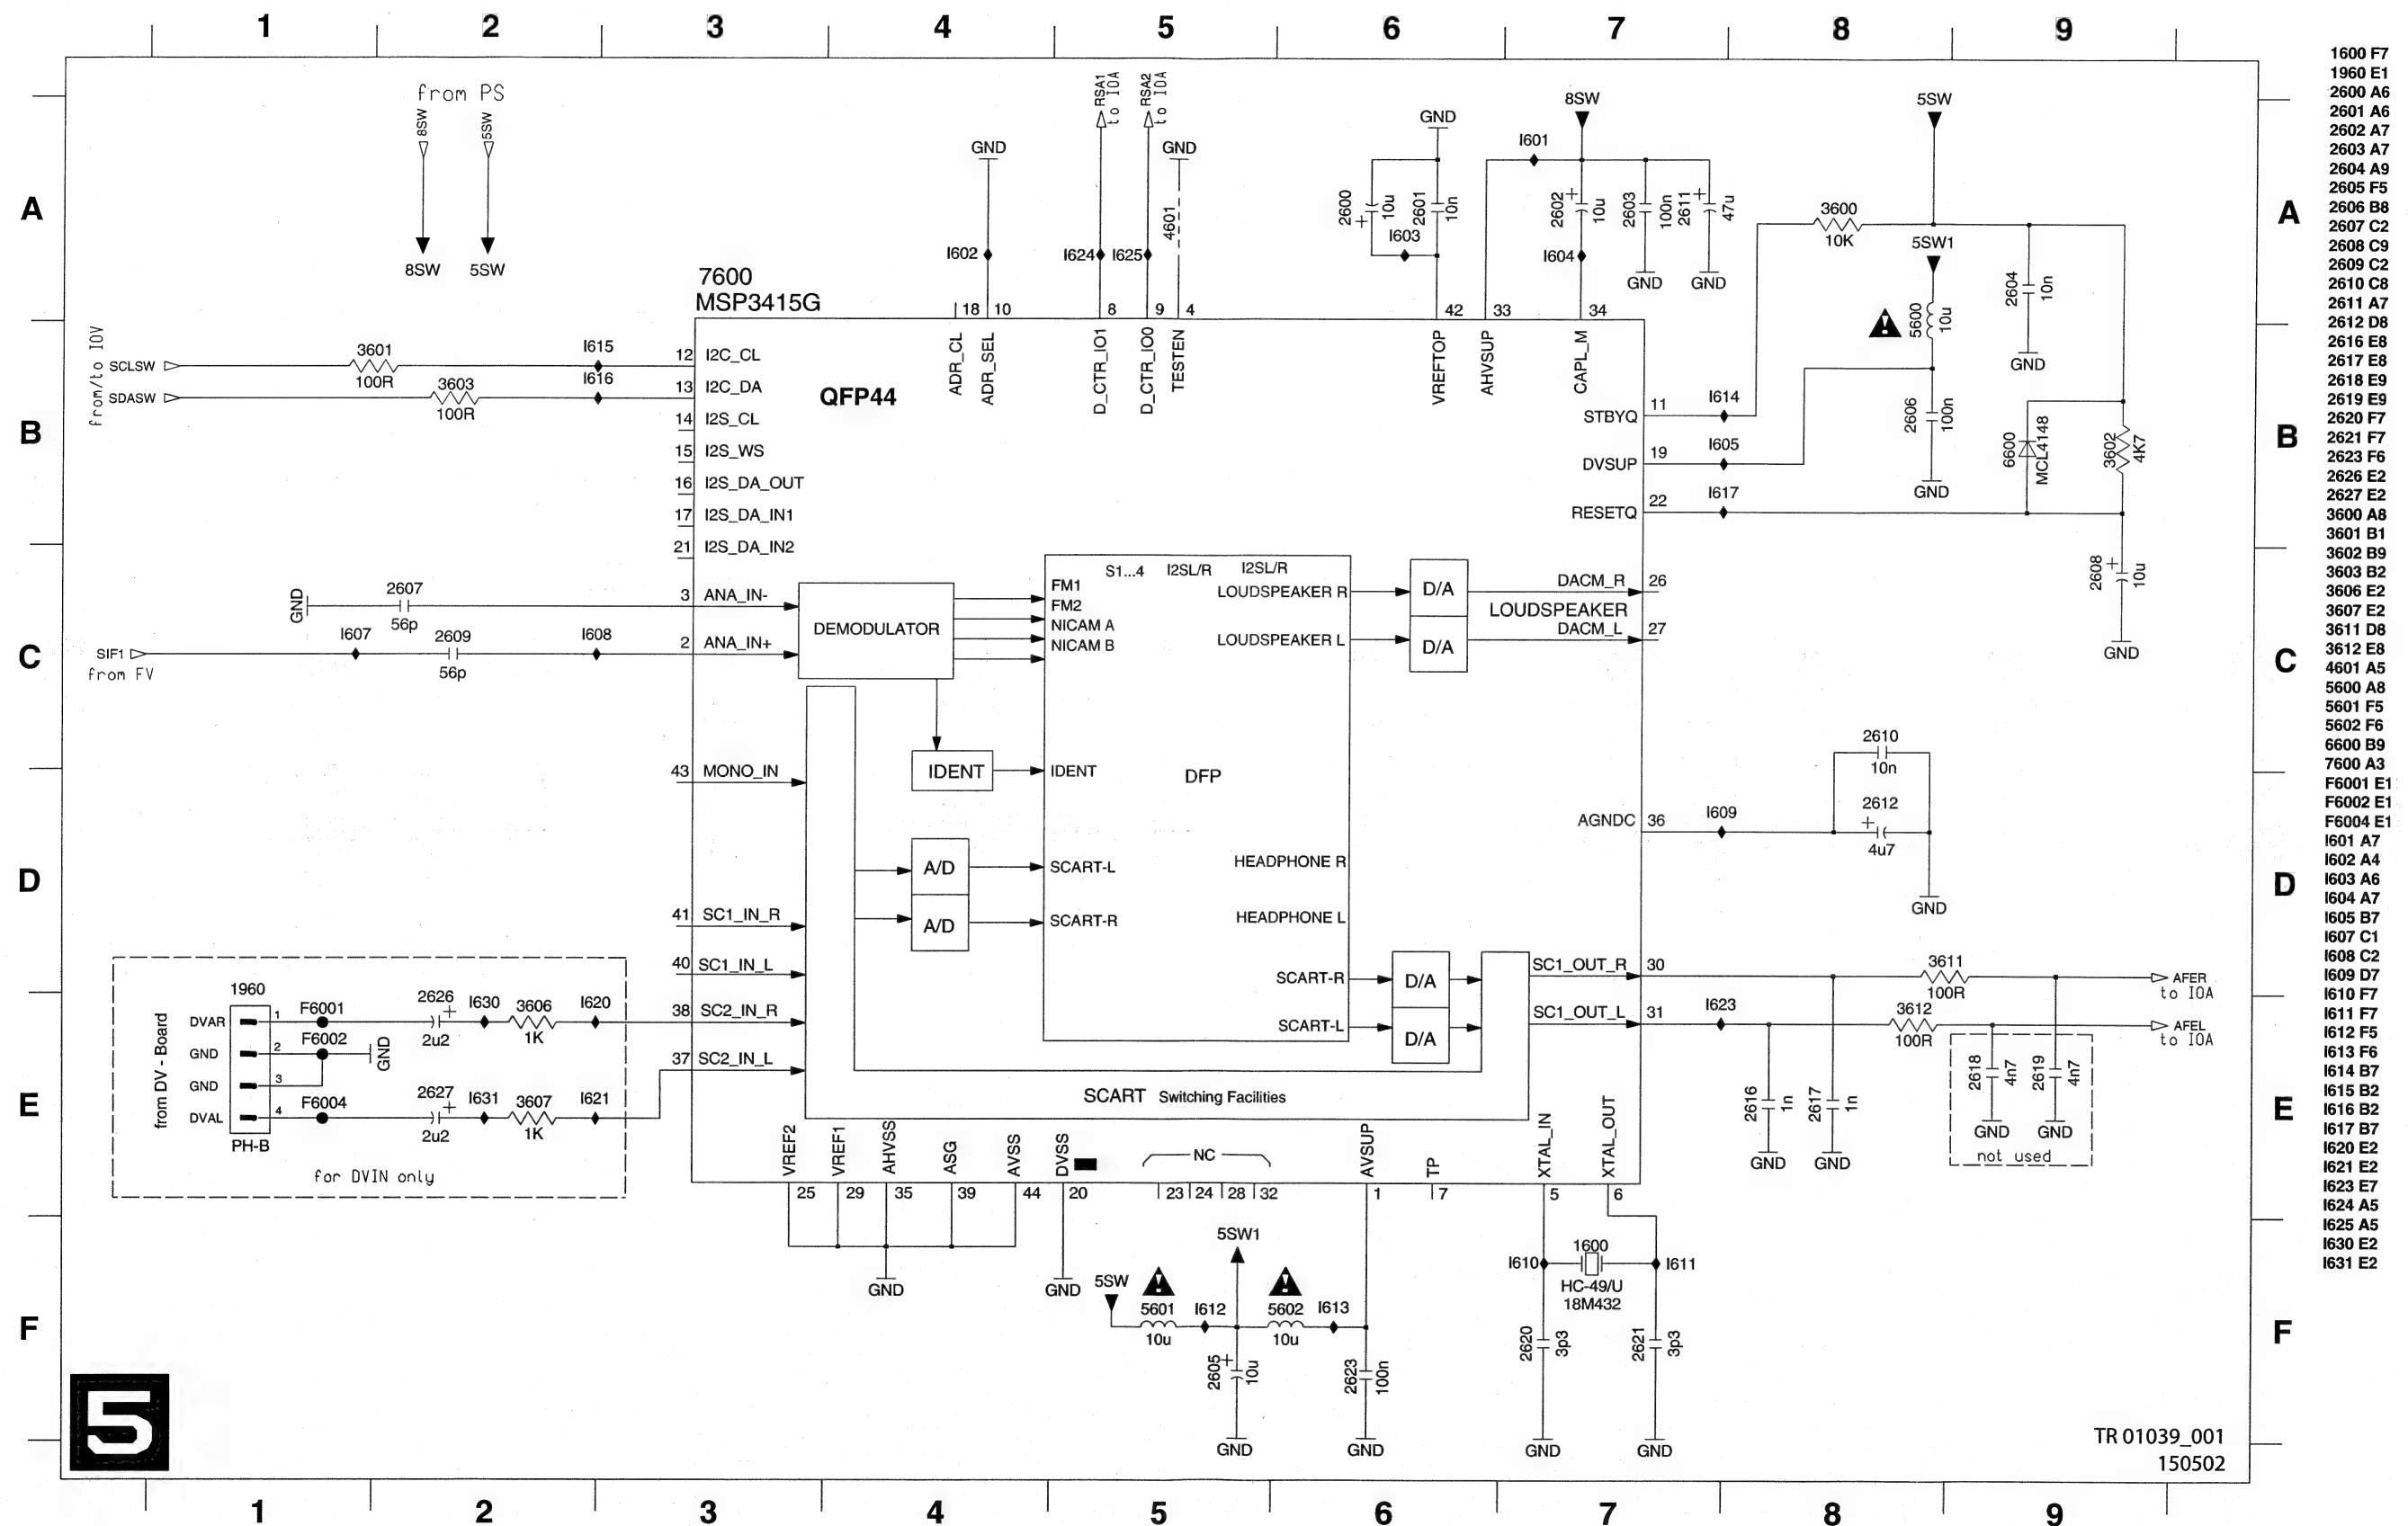Analog Board: Multi Sound Processing (MSP)


Analog Board: VPS (VPS)

1990 D1 2934 B1 2937 D1 3932 C4 3935 E1 5932 A3 1988 B2 1991 C1 1994 D1 1997 E1
 2932 B4 2935 C1 2938 B3 3933 C4 3936 E3 7931 B2 1989 C1 1992 C4 1995 D1 1998 E1
 2933 B4 2936 D1 3931 B2 3934 E1 5931 A4 1987 B4 1990 C4 1993 C1 1996 D1 1999 E3

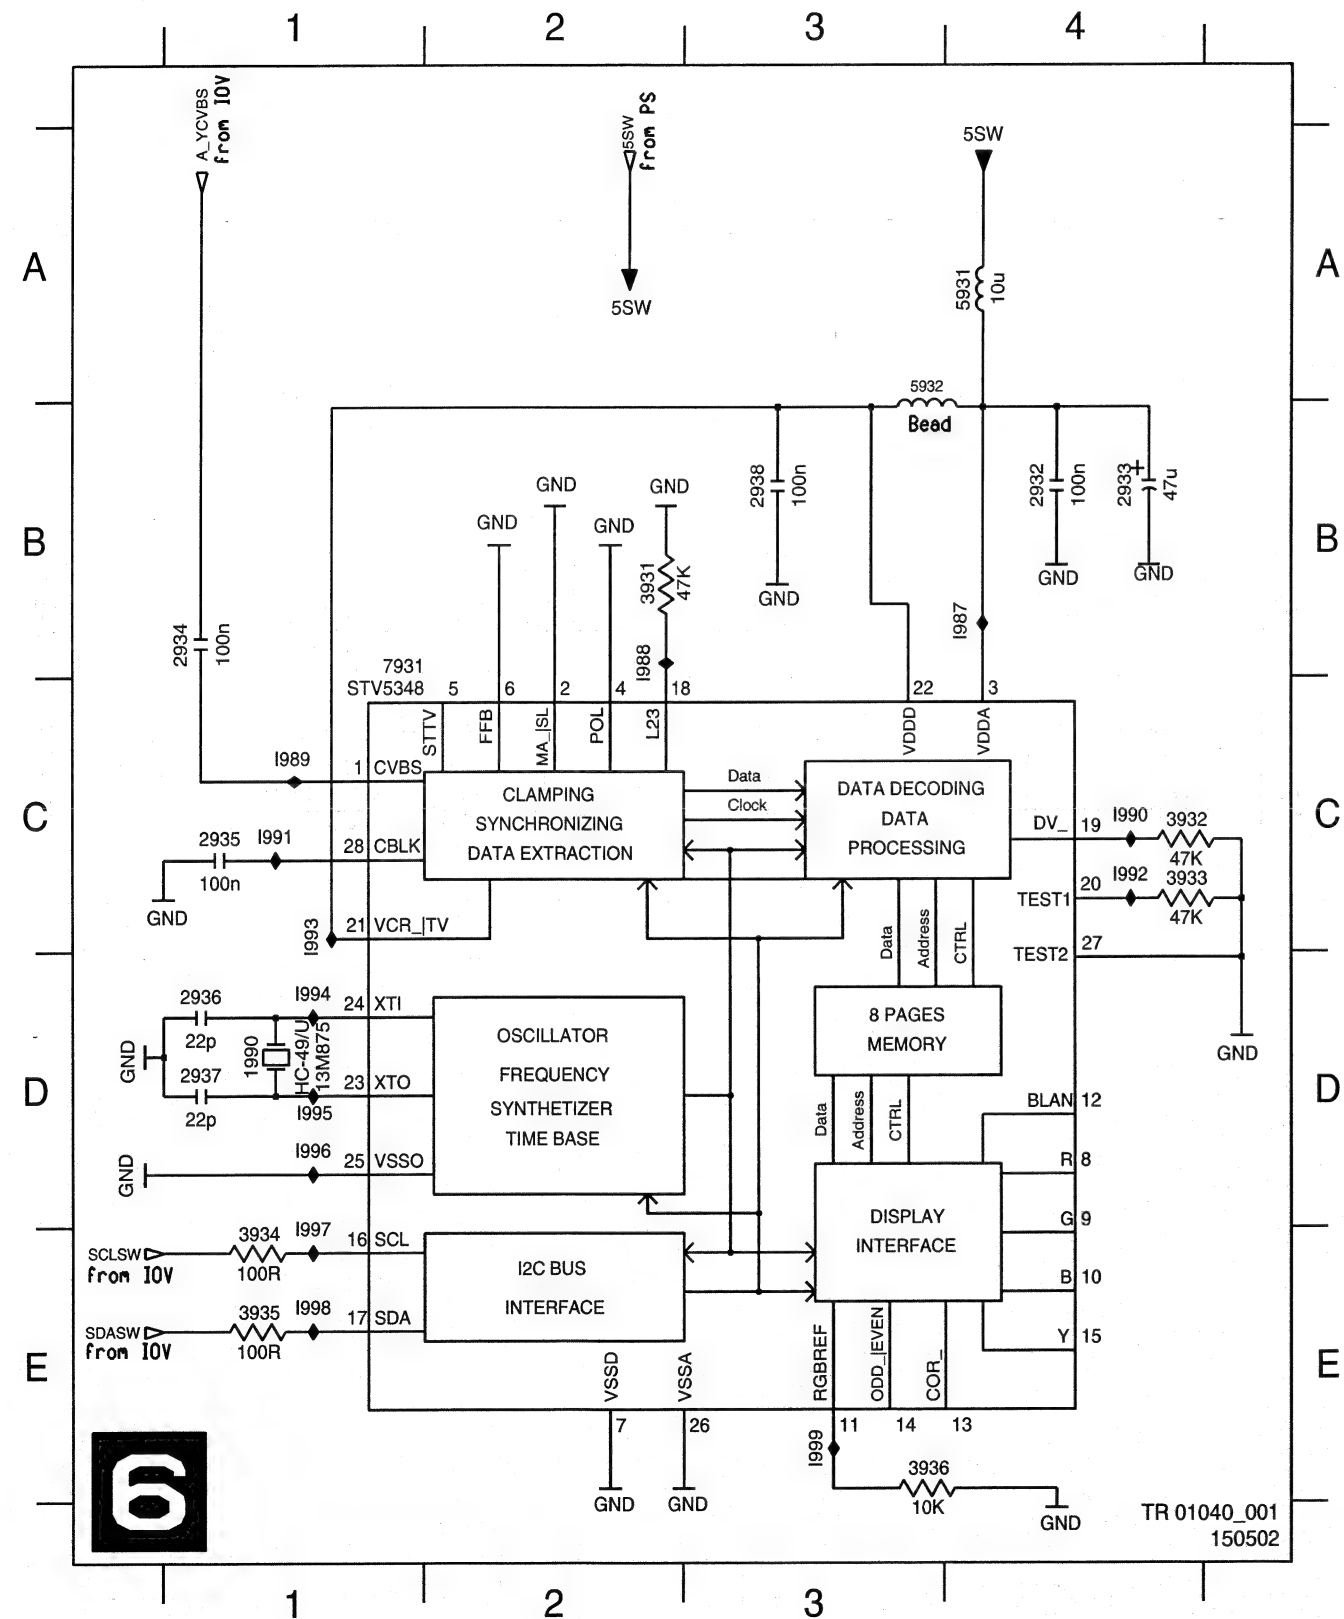


Analog Board: Follow Me (FOME)

2940 A2 2944 D4 3937 C1 3941 D3 3945 E3 3950 A3 7934-B B4 1951 B3 1956 D2
 2941 B3 2945 D2 3938 C1 3942 E1 3946 E2 3951 B2 7934-C C2 1952 B3 1957 D2
 2942 D2 2946 E1 3939 C3 3943 E2 3947 E4 3952 B3 7934-D D3 1953 C3 1958 D3
 2943 D4 2947 E3 3940 D1 3944 E3 3948 A1 3953 B2 7934-A A2 F950 A2 1955 C1 1959 D3

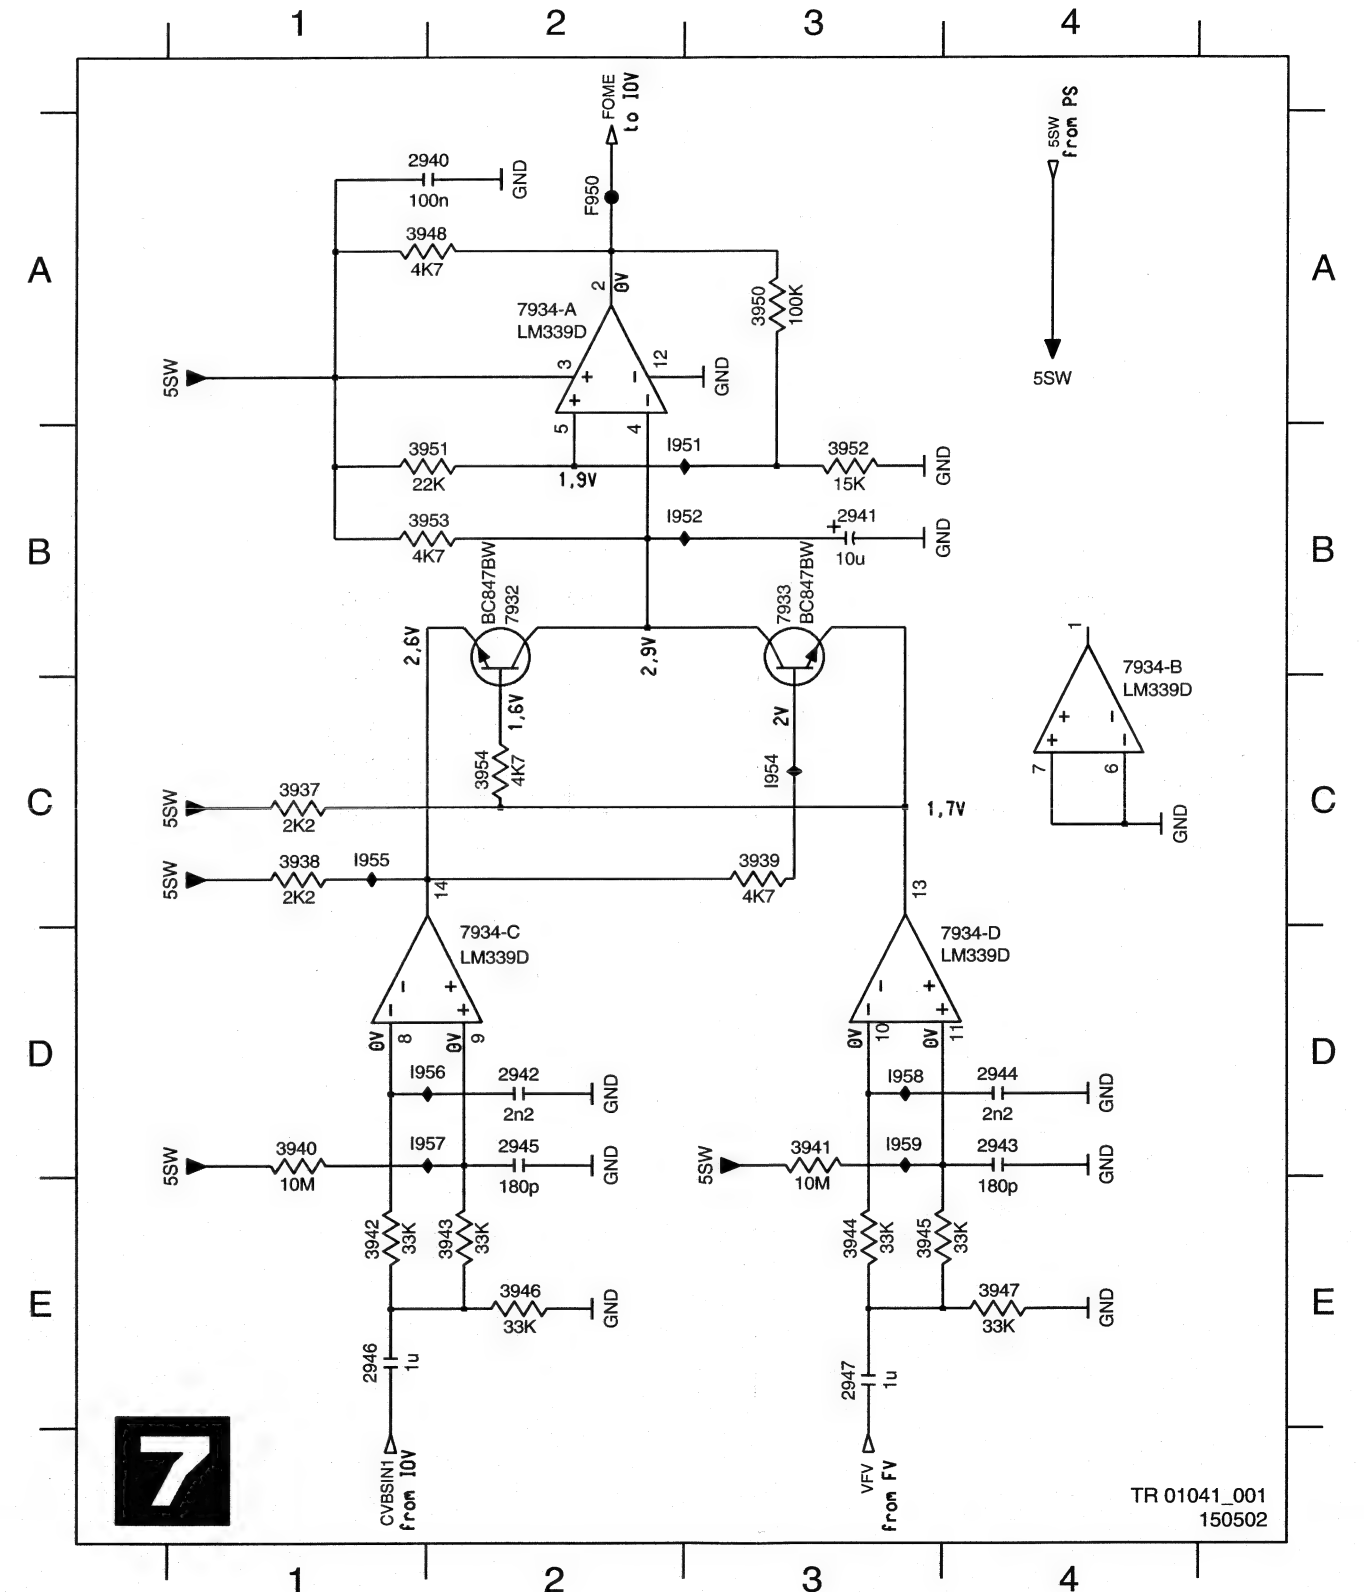


Analog Board: Digital In/Out (DIGIO)

1951 A4	2585 C3	2590 A3	3582 D2	5580 B2	7580-A C2	7580-D D3	F4102 A4	I488 C2	I491 D2
2580 A3	2586 D3	3580 A3	3584 C1	5581 A1	7580-B C3	7580-E D3	F4103 A4	I489 C3	I492 D3
2581 A1	2587 E2	3581 C2	3585 D3	6580 C4	7580-C C3	7580-F D3	I487 A3	I490 C1	I493 B4




Analog Board: Audio Converter(DAC_ADC)


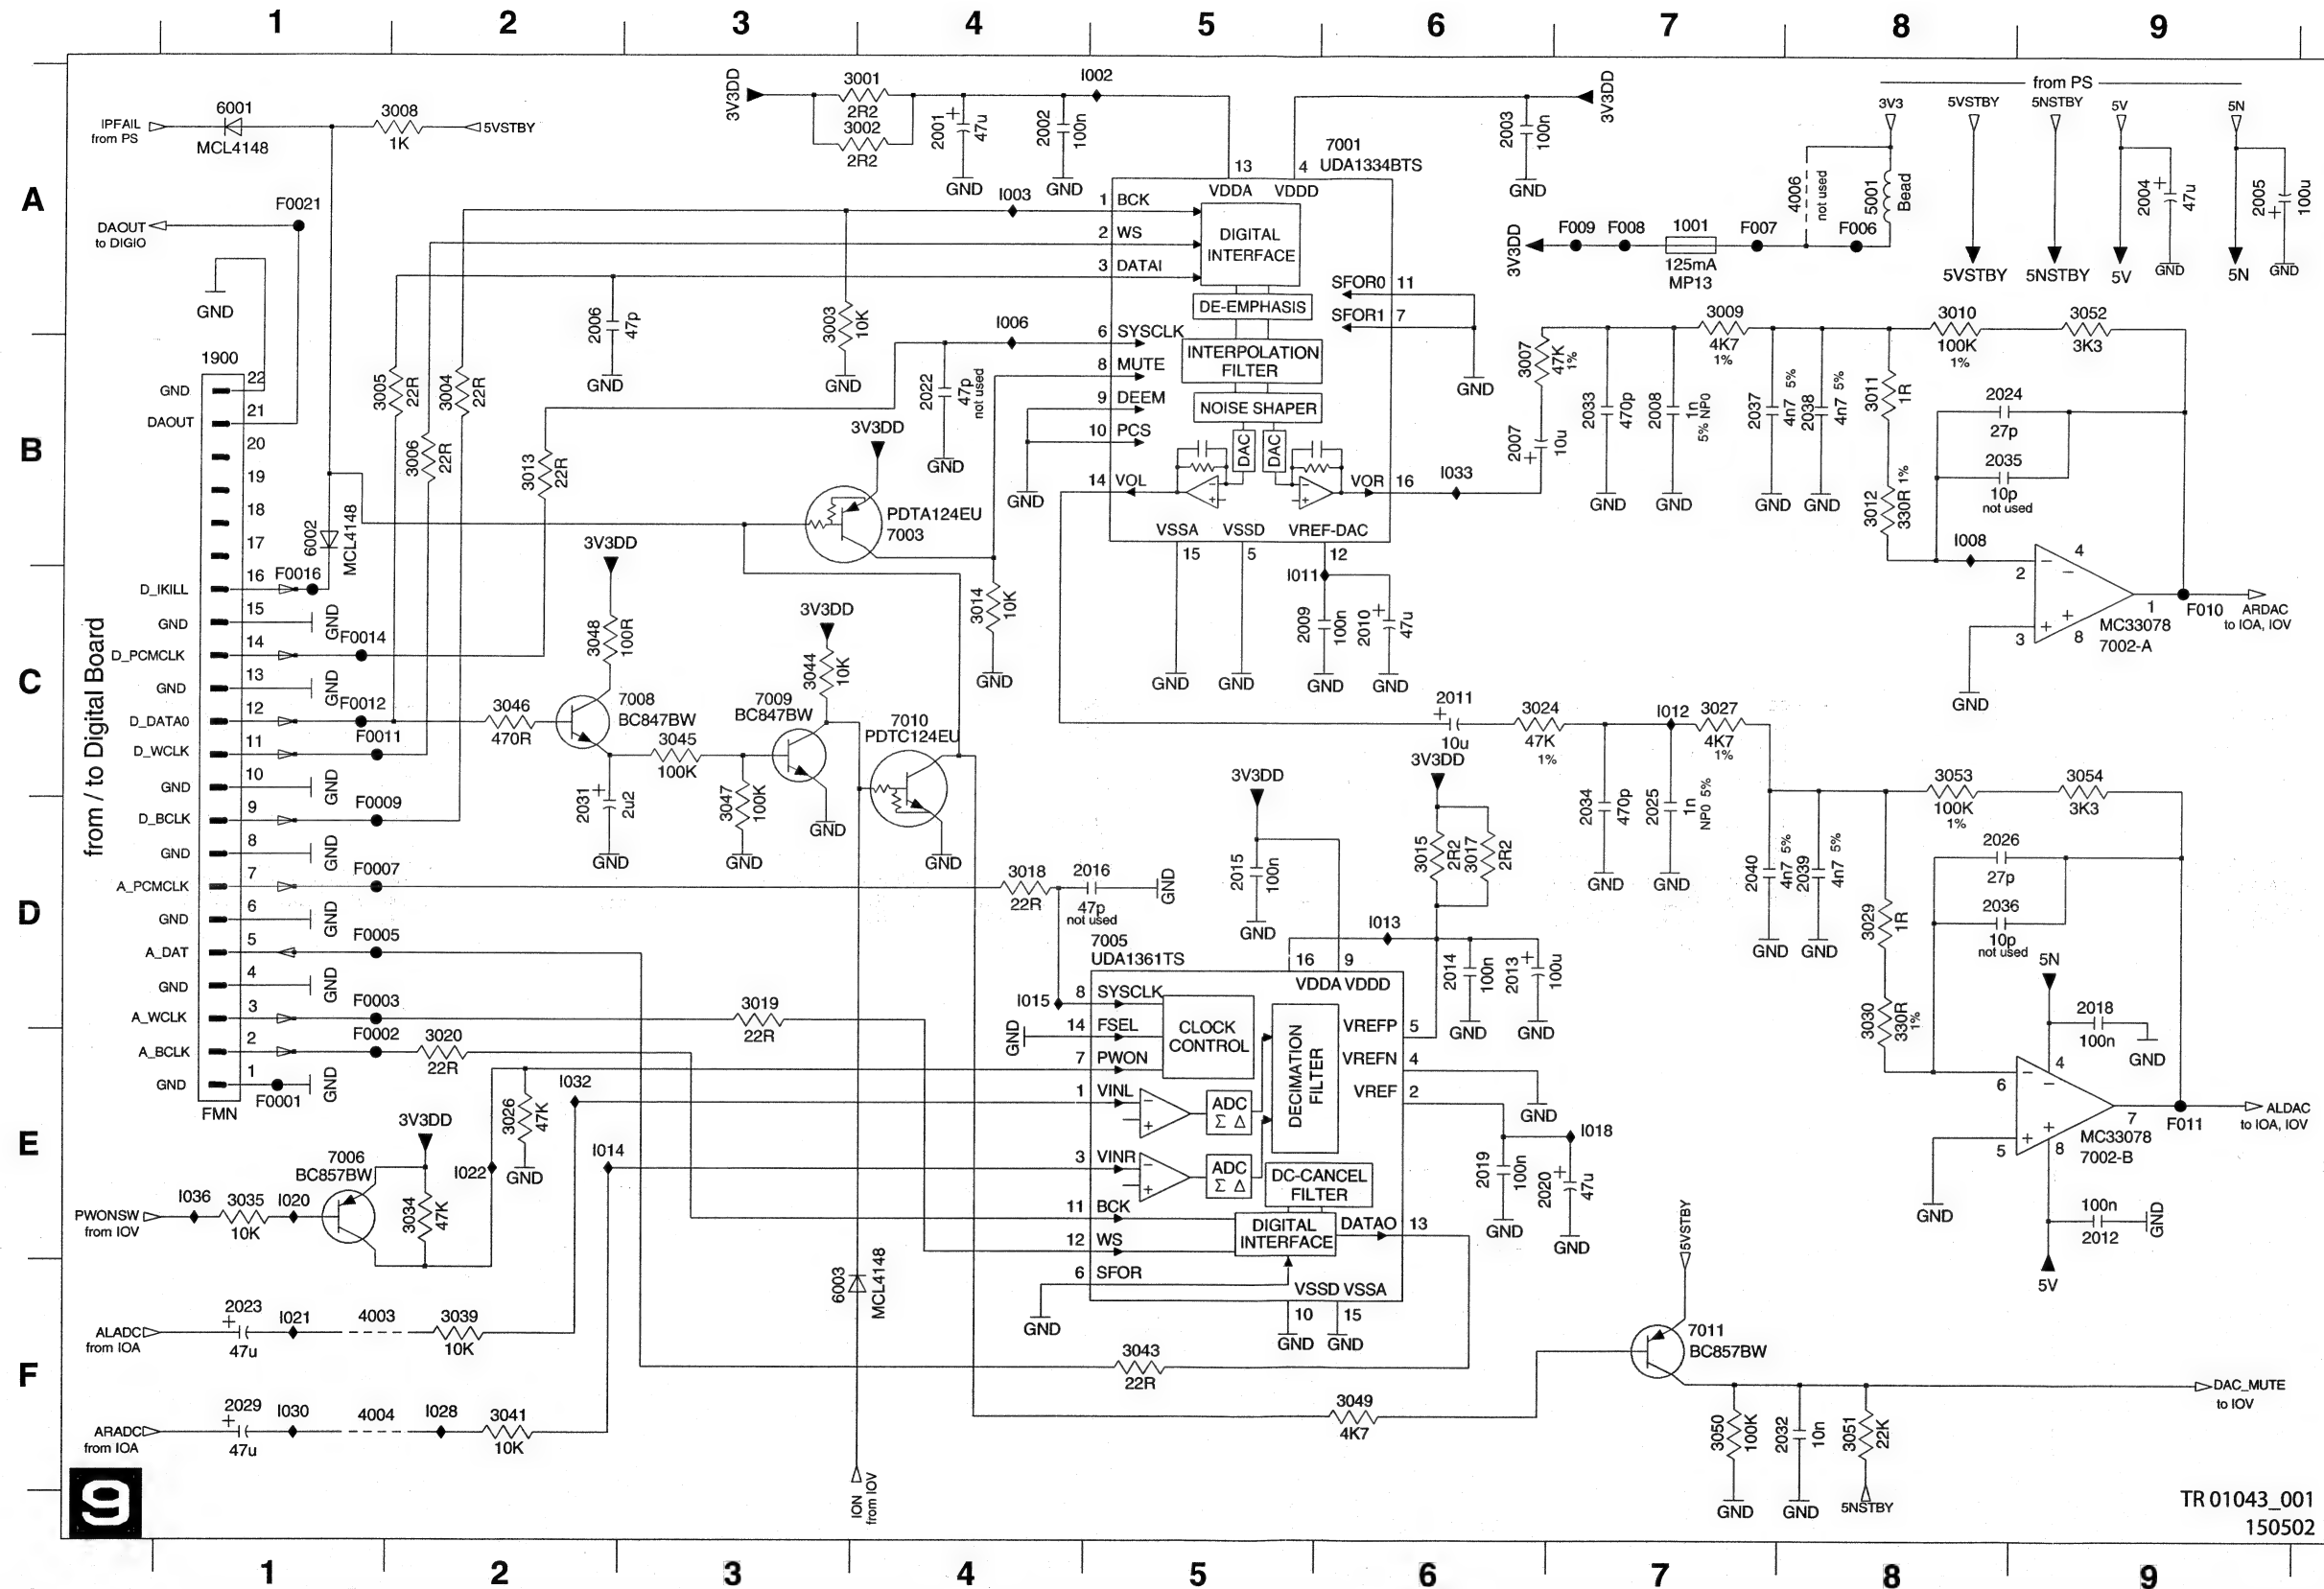


1001 A7	4003 F1
1900 B1	4004 F1
2001 A4	4006 A8
2002 A4	5001 A8
2003 A6	6001 A1
2004 A9	6002 B1
2005 A9	6003 F3
2006 A2	7001 A6
2007 B6	7002-A C9
2008 B7	7002-B E9
2009 C5	7003 B4
2010 C6	7005 D5
2011 C6	7006 E1
2012 E9	7008 C2
2013 D6	7009 C3
2014 D6	7010 C4
2015 D5	7011 F6
2016 D5	F0001 E1
2018 D9	F0002 E1
2019 E6	F0003 D1
2020 E7	F0005 D1
2022 B4	F0007 D1
2023 F1	F0009 D1
2024 B8	F0011 C1
2025 D7	F0012 C1
2026 D8	F0014 C1
2029 F1	F0016 C1
2031 D2	F0021 A1
2032 F7	F006 A8
2033 B7	F007 A7
2034 D7	F008 A7
2035 B8	F009 A7
2036 D8	F010 C9
2037 B7	F011 E9
2038 B8	I002 A5
2039 D8	I003 A4
2040 D7	I006 A4
3001 A4	I008 B8
3002 A4	I011 C5
3003 A3	I012 C7
3004 B2	I013 D6
3005 B1	I014 E2
3006 B2	I015 D4
3007 B6	I018 E7
3008 A2	I020 E1
3009 A7	I021 F1
3010 A8	I022 E2
3011 B8	I028 F2
3012 B8	I030 F1
3013 B2	I032 E2
3014 C4	I033 B6
3015 D6	I036 E1
3017 D6	
3018 D4	
3019 D3	
3020 E2	
3024 C6	
3026 E2	
3027 C7	
3029 D8	
3030 D8	
3034 E2	
3035 E1	
3039 F2	
3041 F2	
3043 F5	
3044 C3	
3045 C3	
3046 C2	
3047 D3	
3048 C2	
3049 F6	
3050 F7	
3051 F7	
3052 A9	
3053 C8	
3054 C9	


Layout Analog Board (Top View)

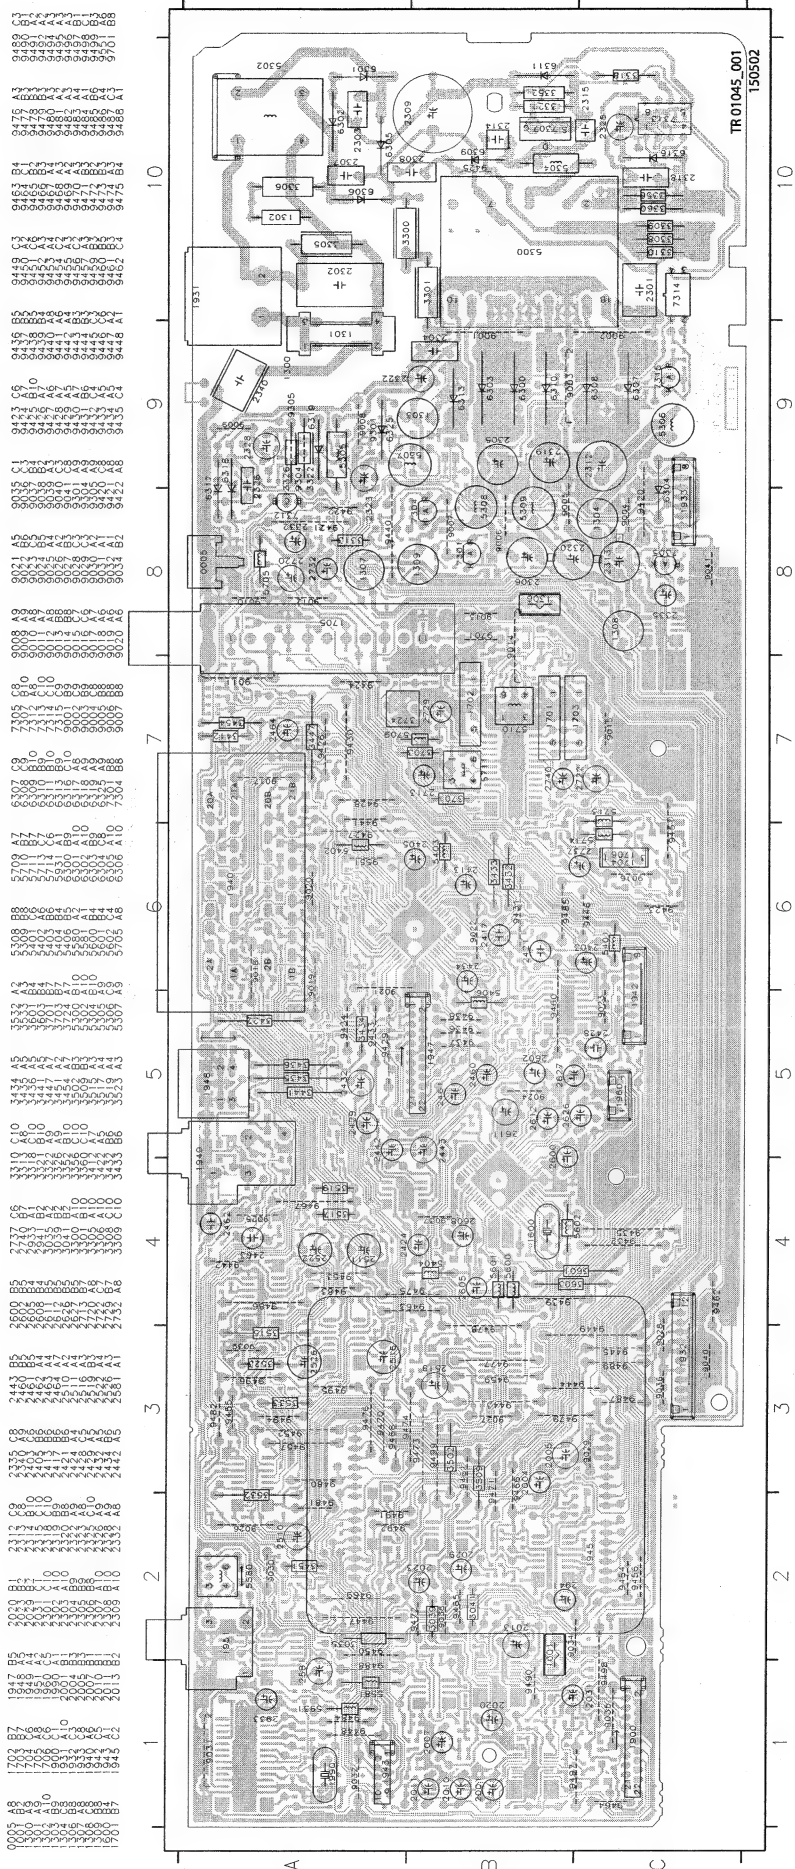


Layout Analog Board (Overview Bottom View)

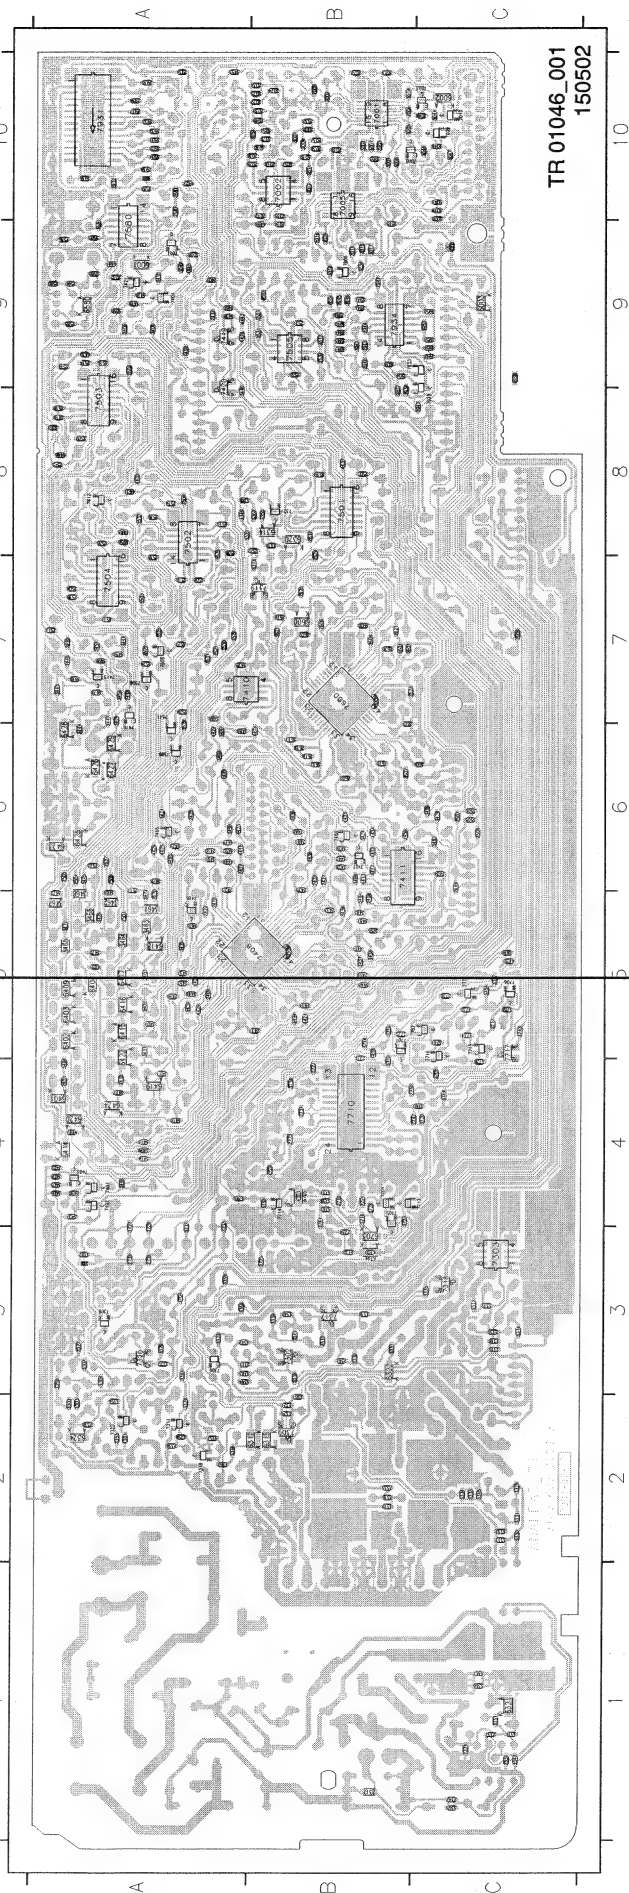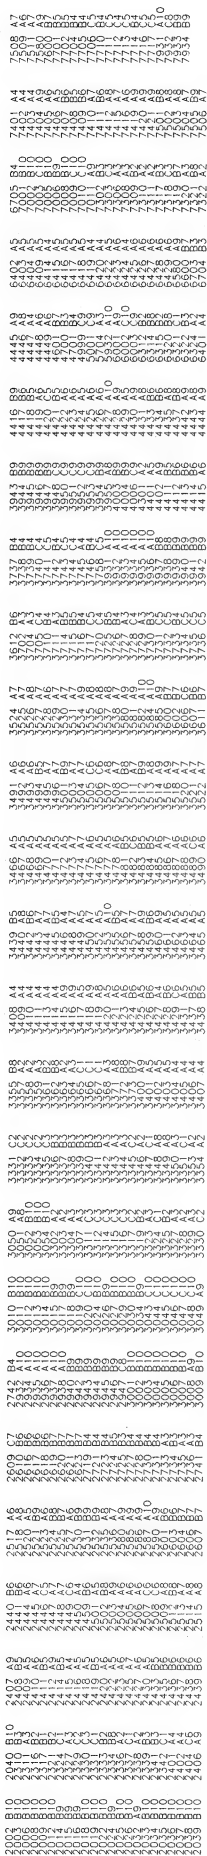



Layout Analog Board (Part 1 Bottom View)

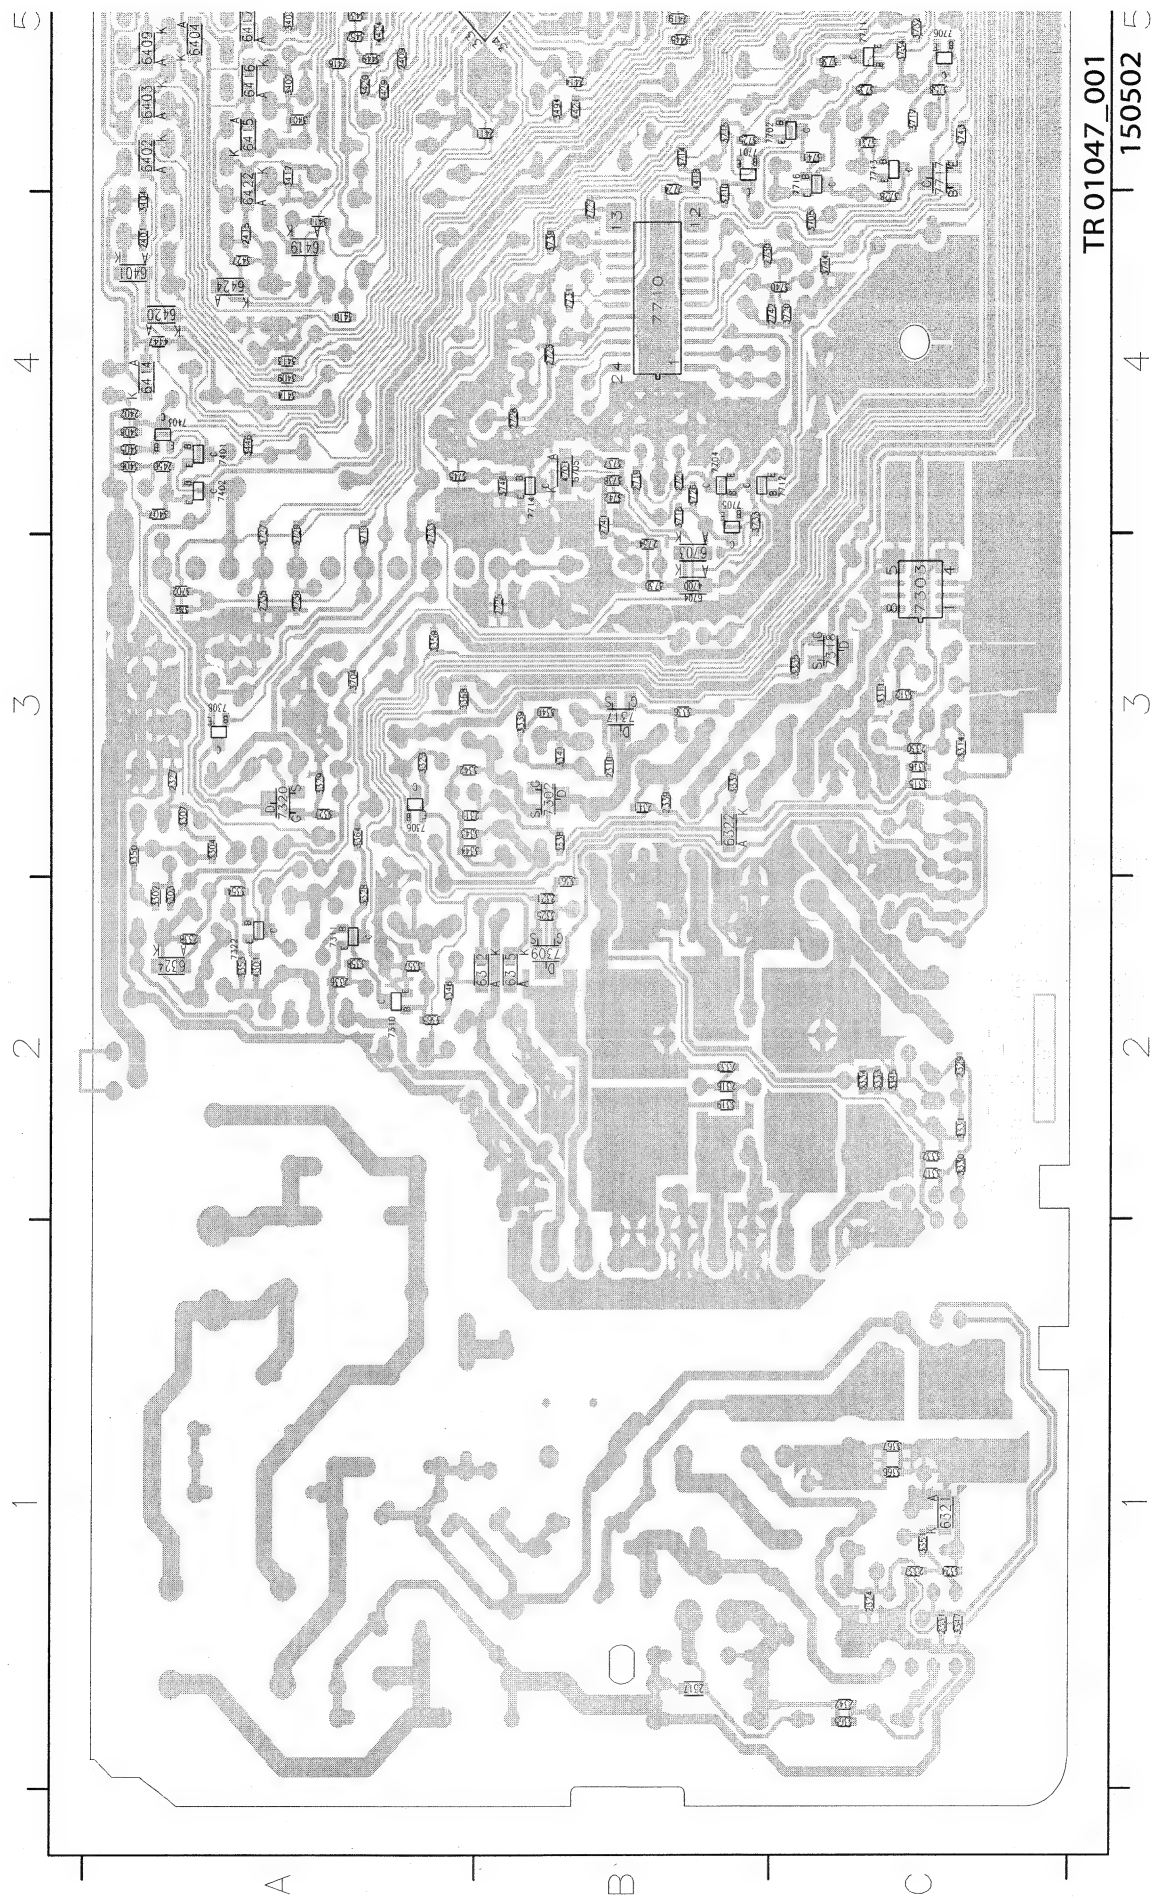


Layout Analog Board (Part 2 Bottom View)

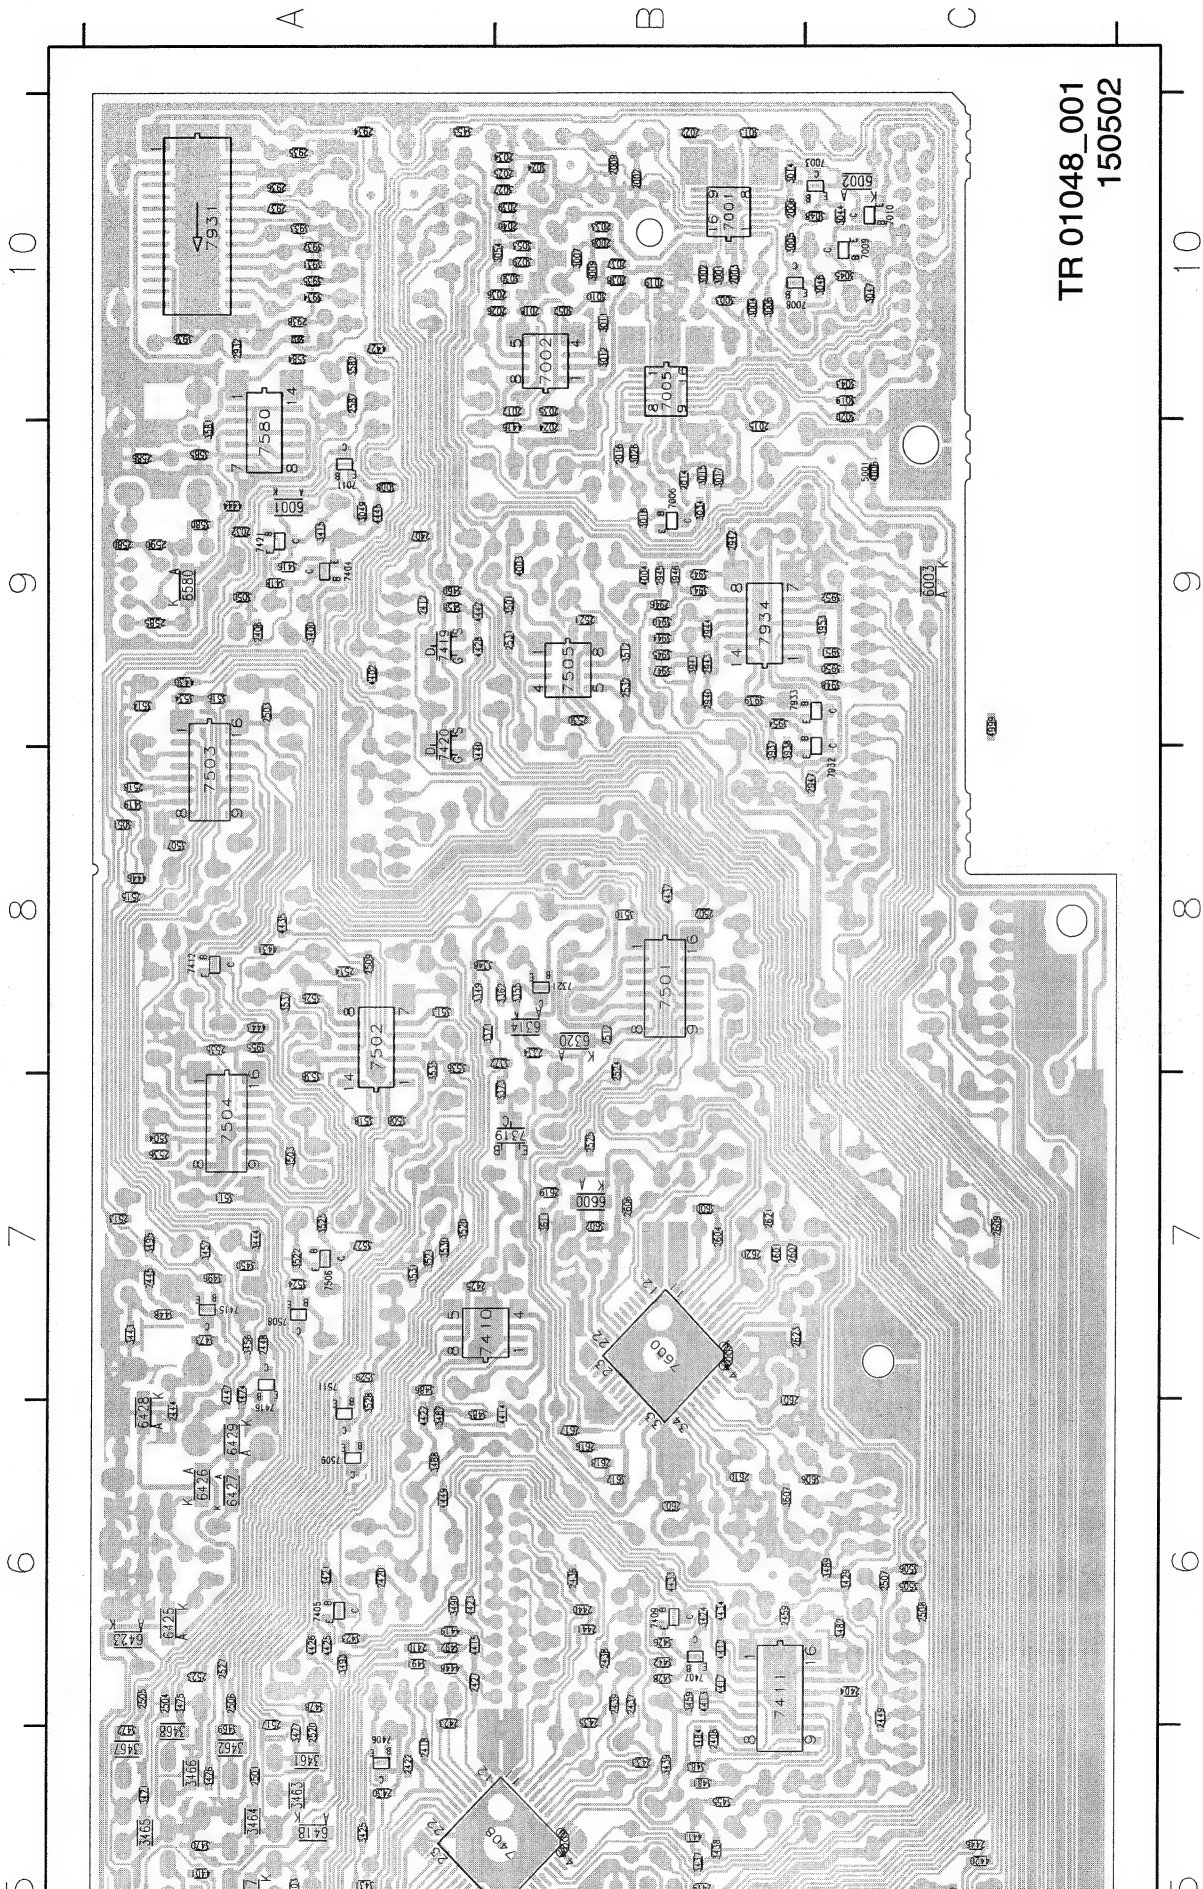

Test points overview Analog Board

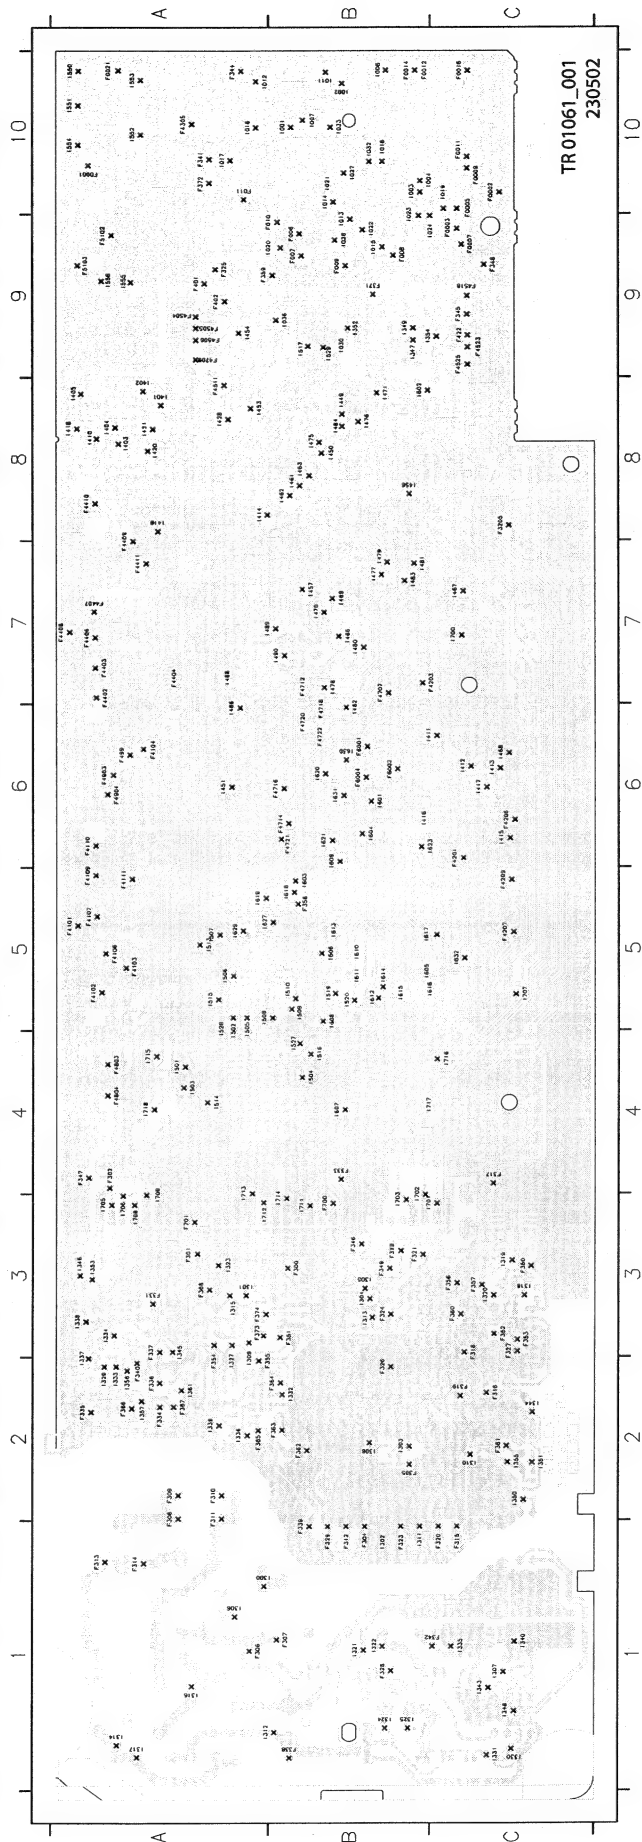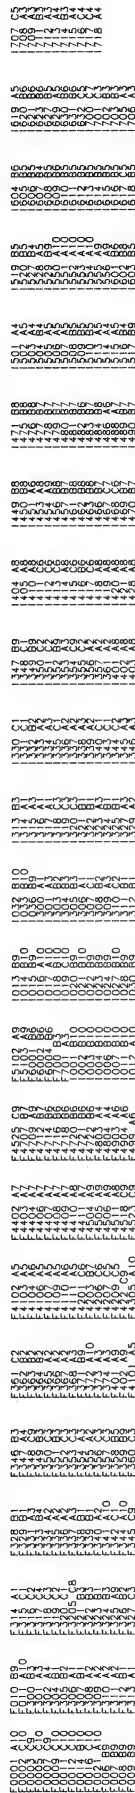


UPC12 Sub PCB: Central Controller (CECO)

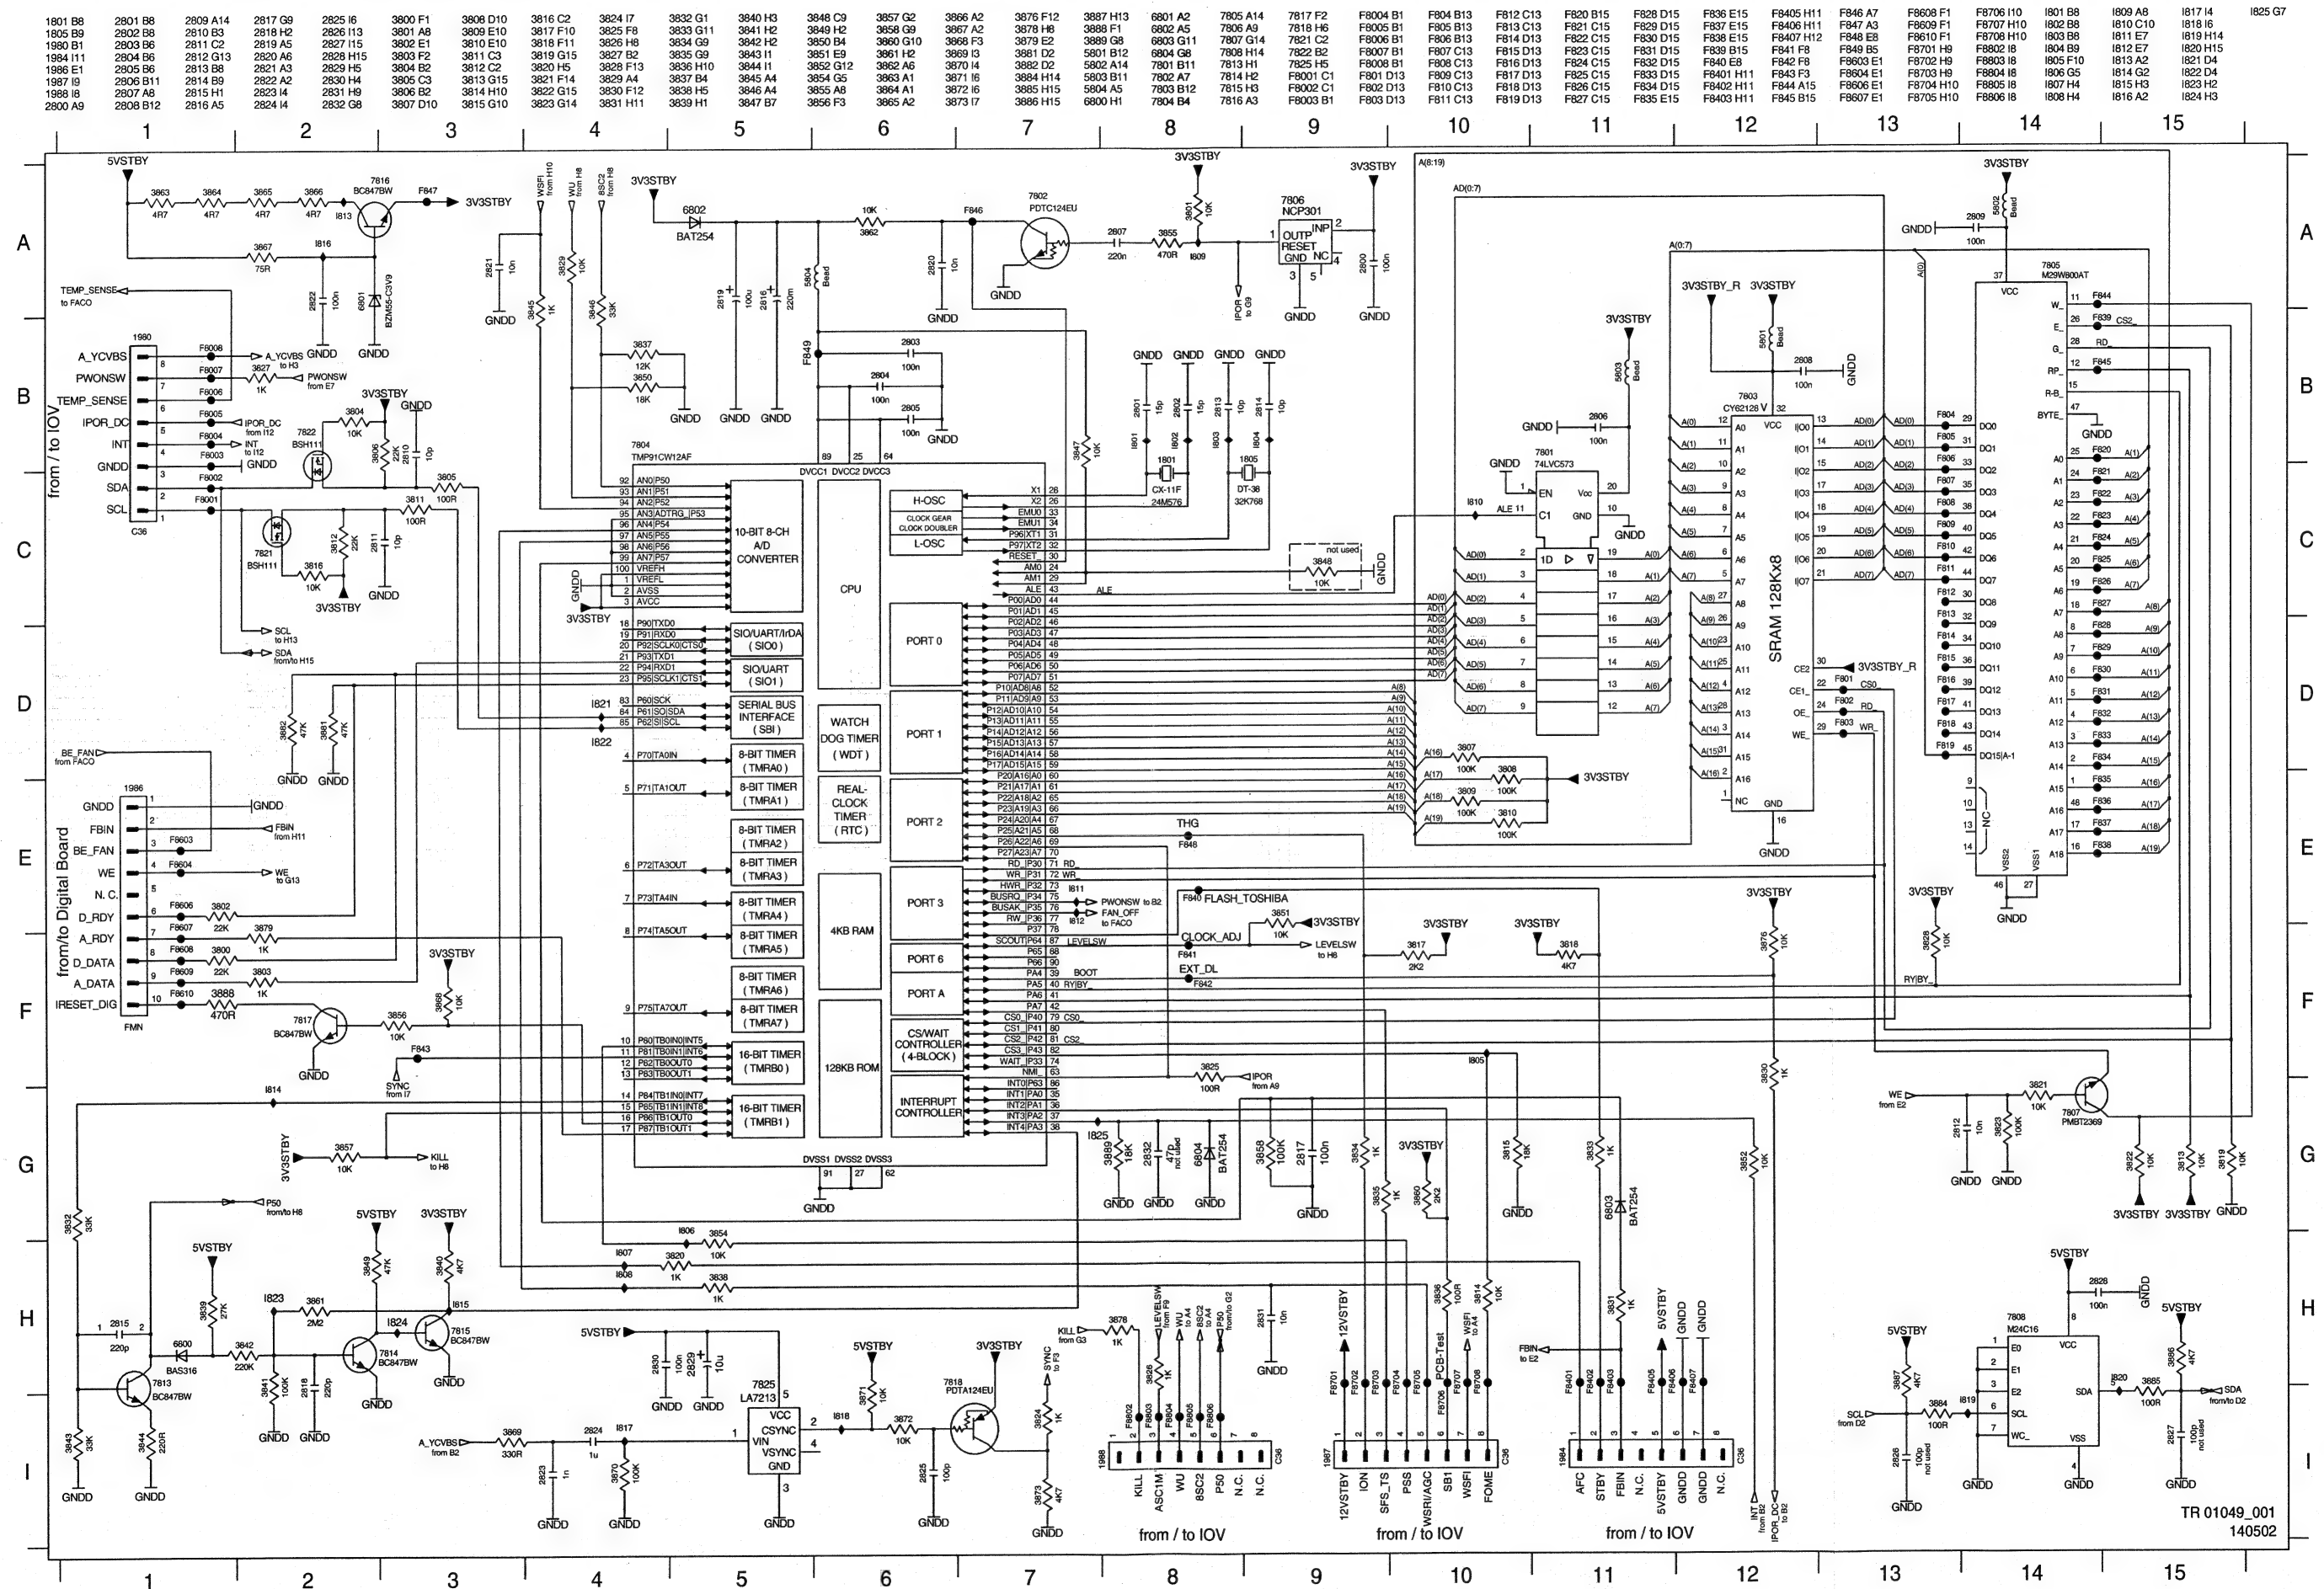

UPC12 Sub PCB: Fan Control (FACO)




2911 B4 3919 C1 3922 C1 3927 D2 6901 D4 1907 D4
 3916 B3 3920 C3 3923 C3 3928 B1 6902 E4 1908 B3
 3917 B1 3921 E4 3925 C1 3929 D2 6903 A1 1909 C4

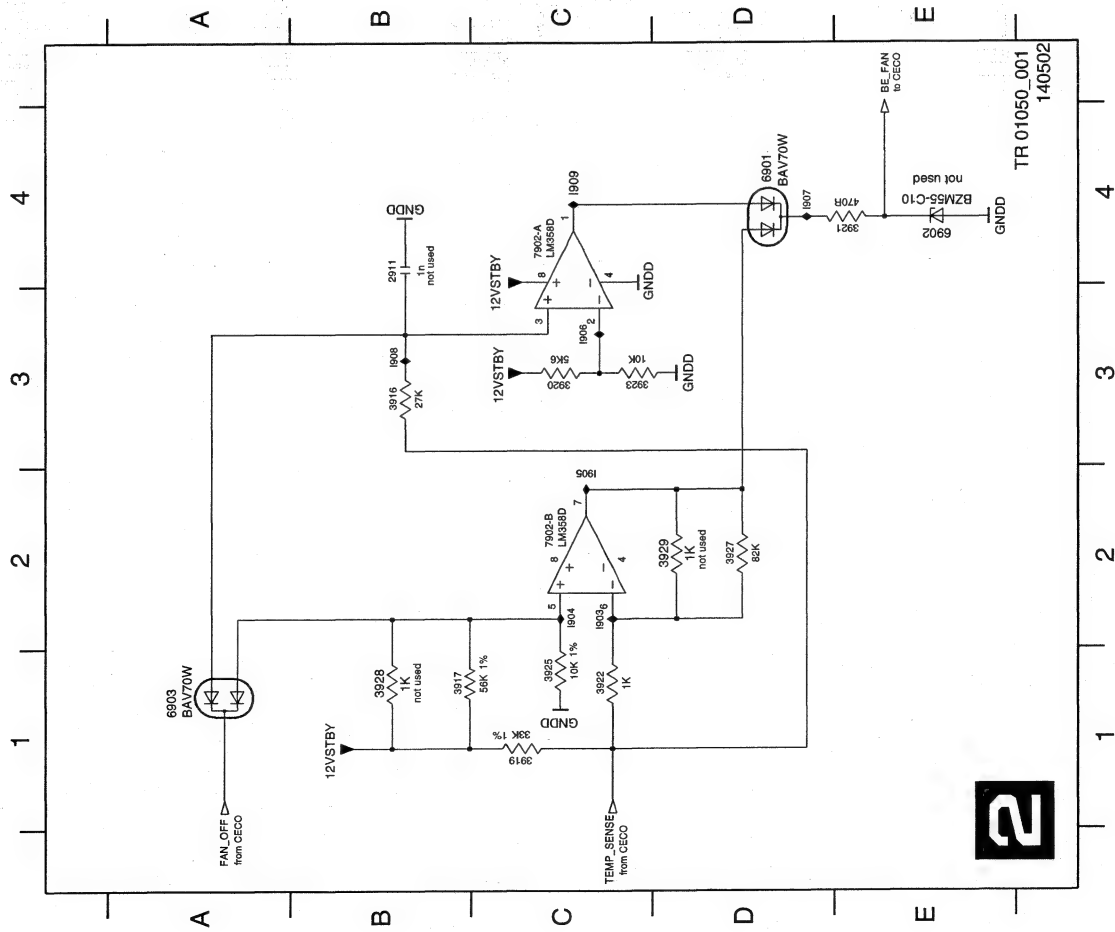


2

TR 01050_001
140502

Layout UPC 12 Sub PCB (Bottom View)

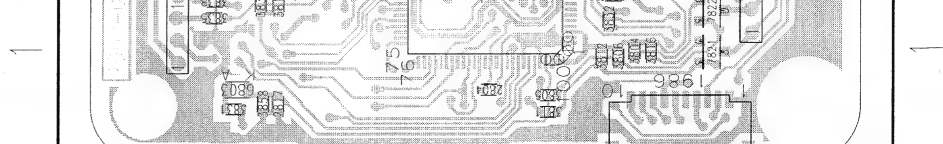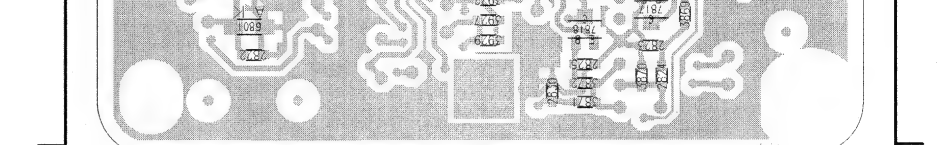


Tests points overview UPC12 Sub PCB

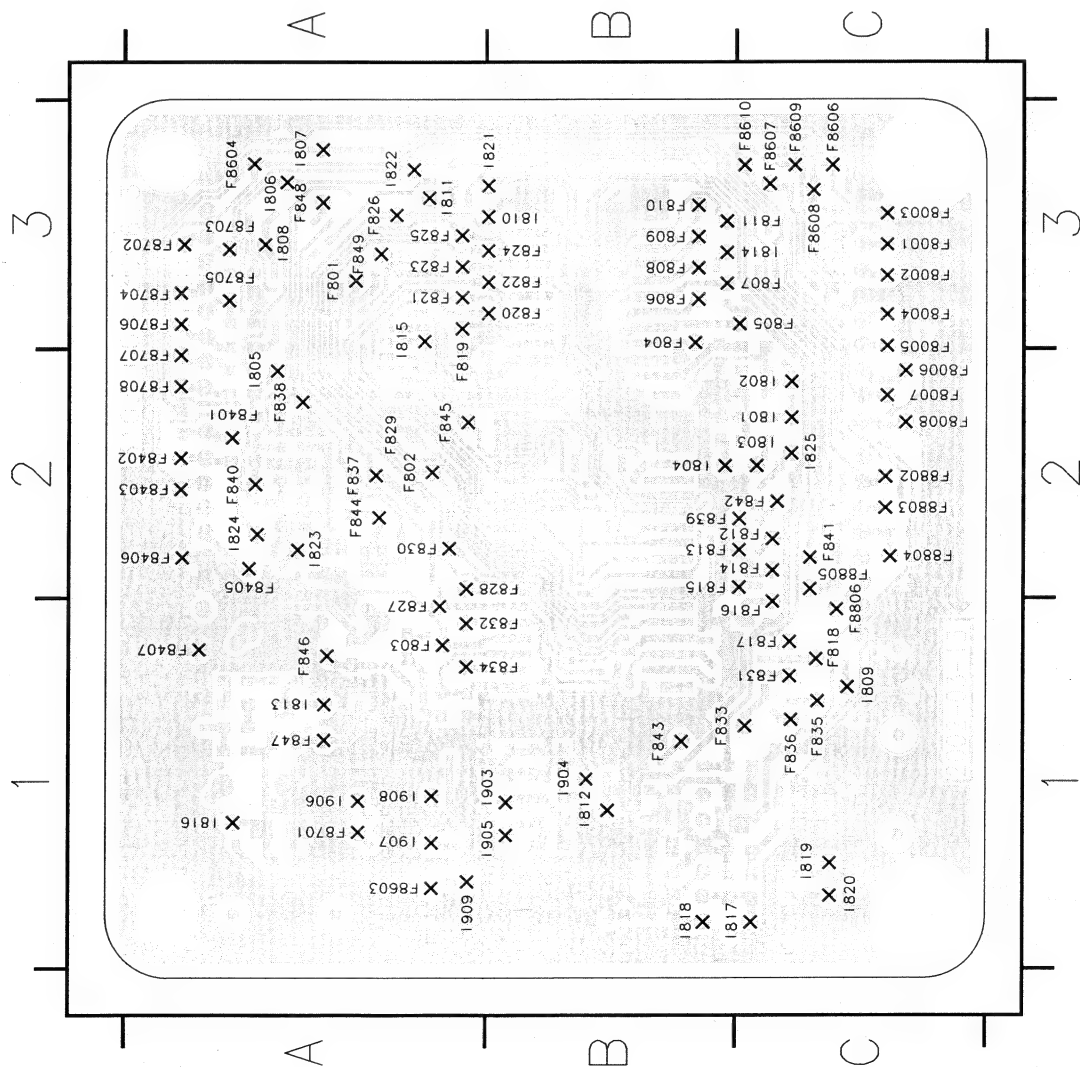


TR 01053_001
140502

DVIO Front Board

0002 C3 1000 B1 1002 A1 2001 A1 2003 D2 5000 B2 6000 A2
0003 D3 1001 B2 2000 A2 2002 D2 3000 D2 5001 C2 6001 C2

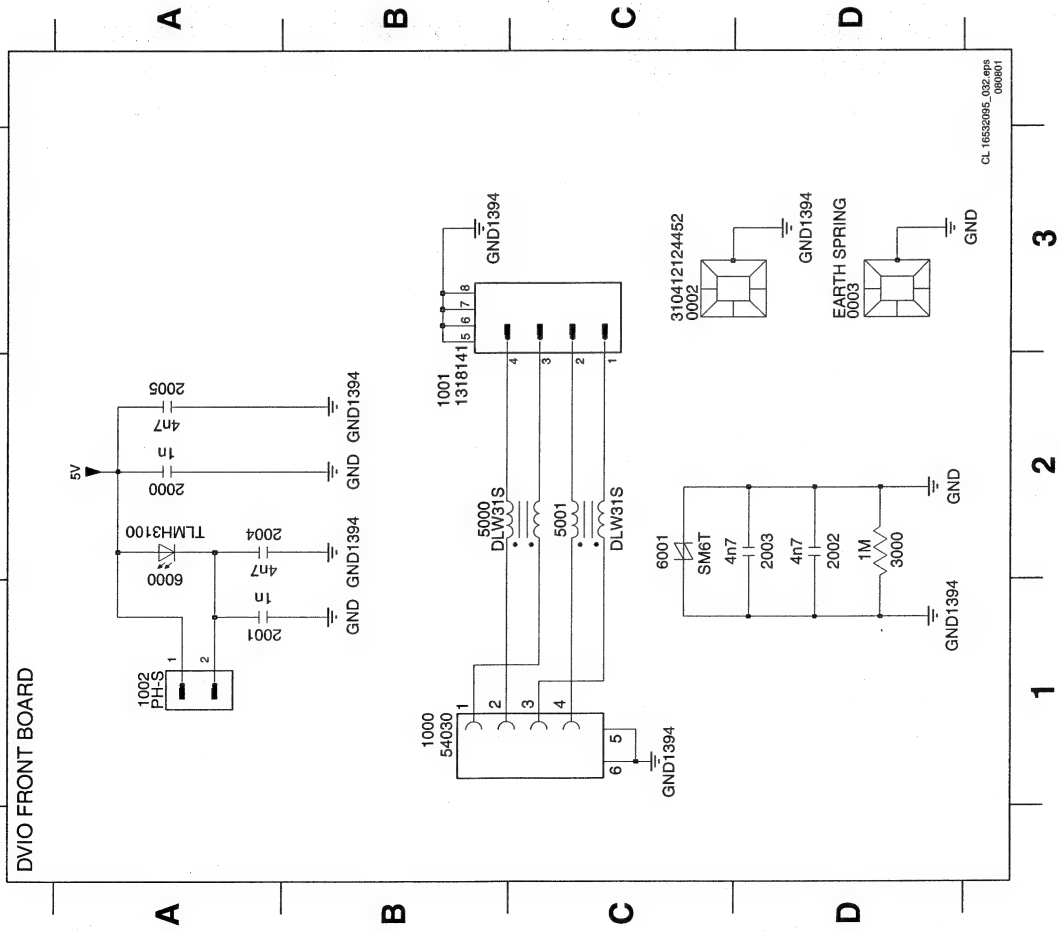


Layout DVIO Front Board

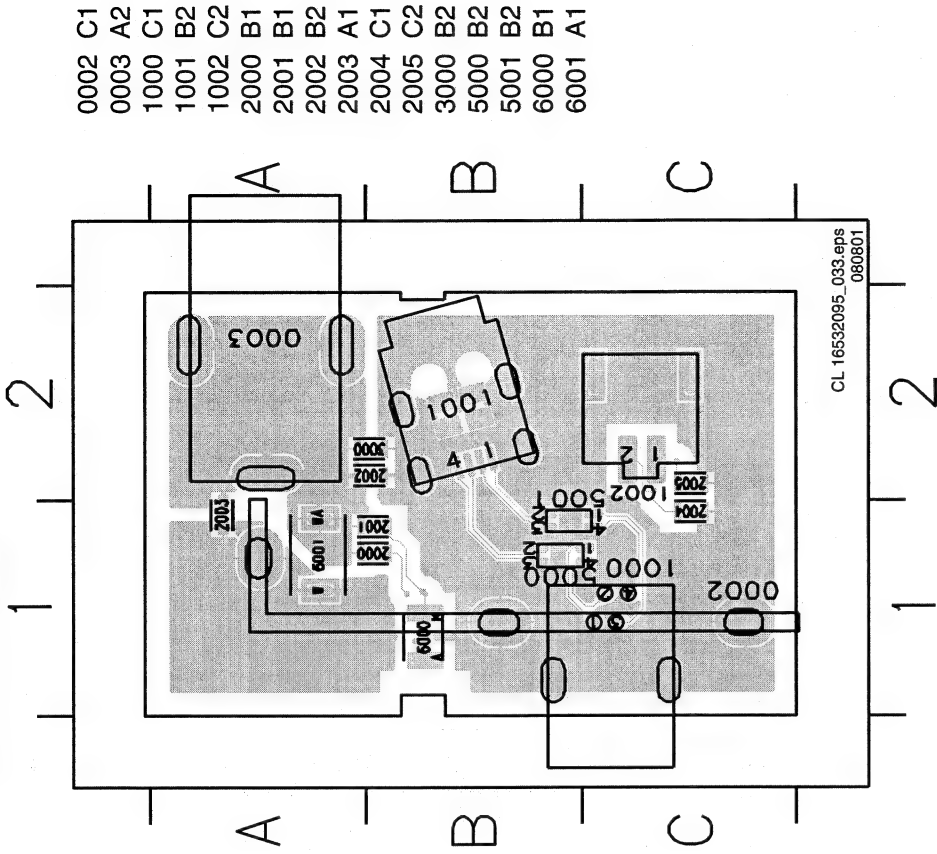

1 1394 INTERFACE




DVIO Board: DVCODEC

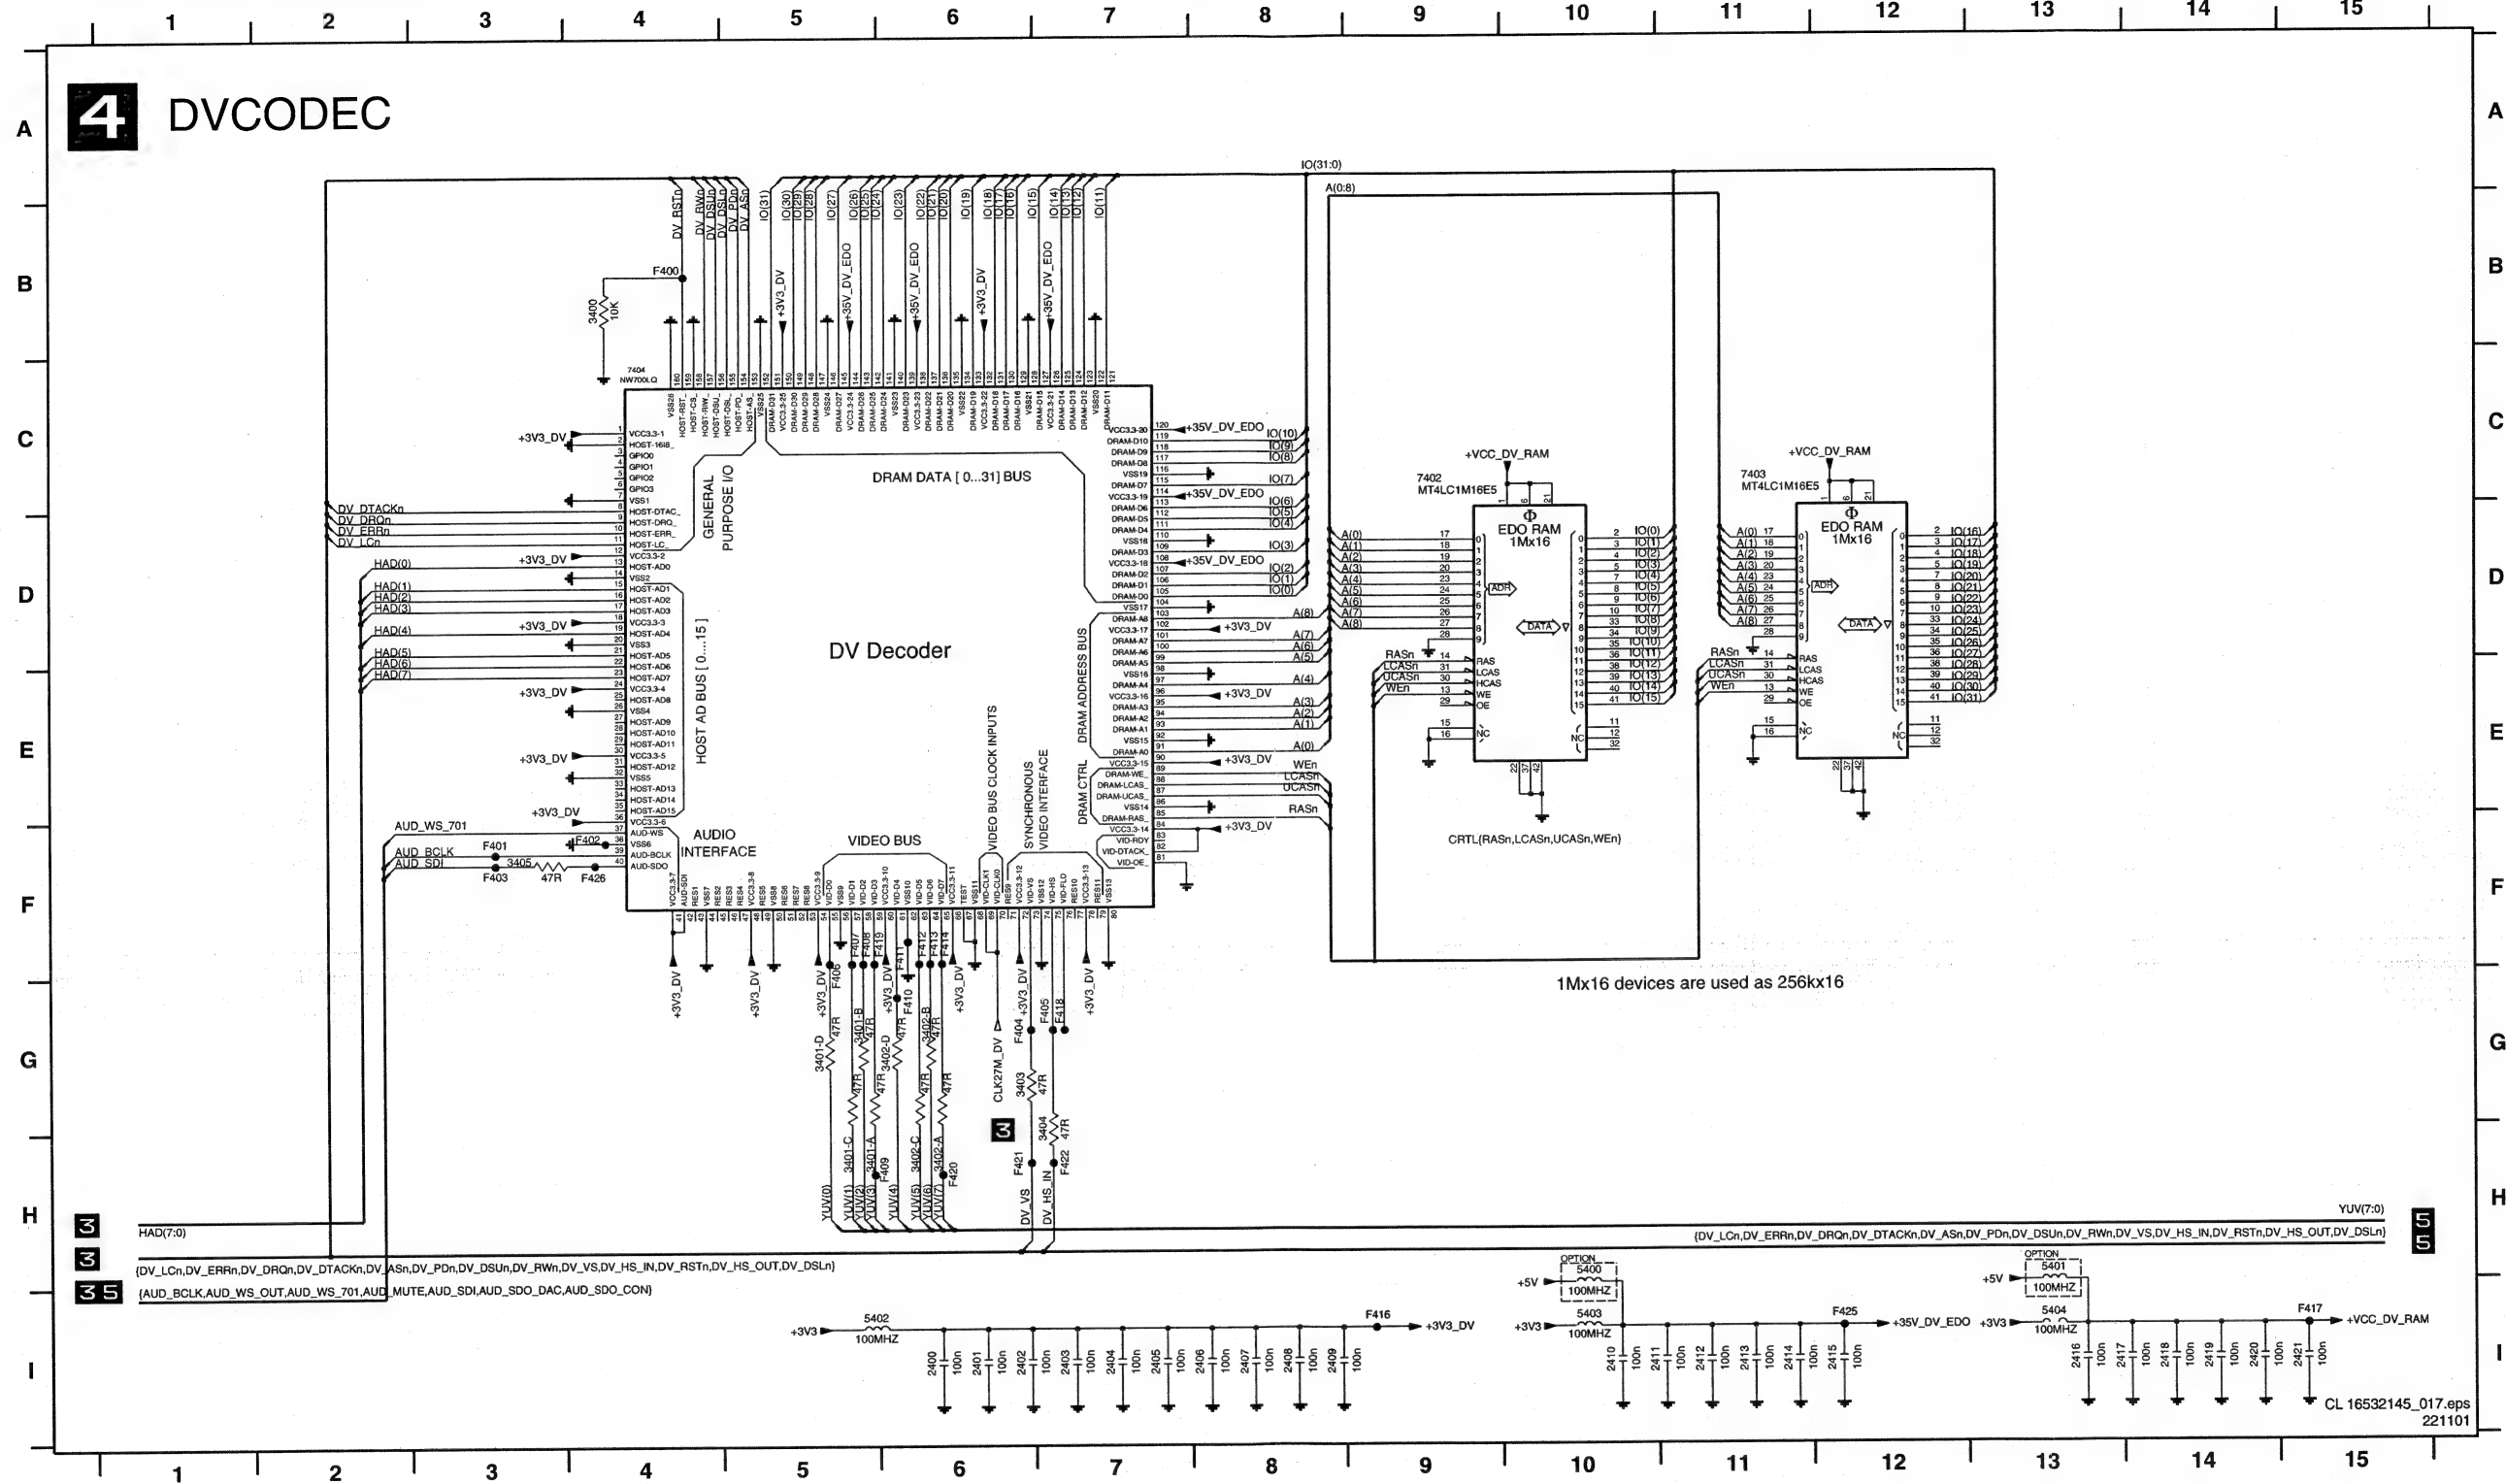

2400 I6
2401 I6
2402 I6
2403 I7
2404 I7
2405 I7
2406 I8
2407 I8
2408 I8
2409 I8
2410 I10
2411 I10
2412 I11
2413 I11
2414 I11
2415 I12
2416 I13
2417 I13
2418 I14
2419 I14
2420 I14
2421 I15
3400 B4
3401-A H5
3401-B G5
3401-C H5
3401-D G5
3402-A H6
3402-B G6
3402-C H6
3402-D G6
3403 G6
3404 G7
3405 F3
5400 H10
5401 H13
5402 I5
5403 I10
5404 I13
7402 C9
7403 C11
F400 B4
F401 F3
F402 F4
F403 F3
F404 G6
F405 G7
F406 F5
F407 F5
F408 F5
F409 H6
F410 G6
F411 F6
F412 F6
F413 F6
F414 F6
F416 I9
F417 I15
F418 G7
F419 F6
F420 H6
F421 H6
F422 H7
F425 I12
F426 F4


DVIO Board: Audio & Video Output

5 AUDIO & VIDEO OUTPUT

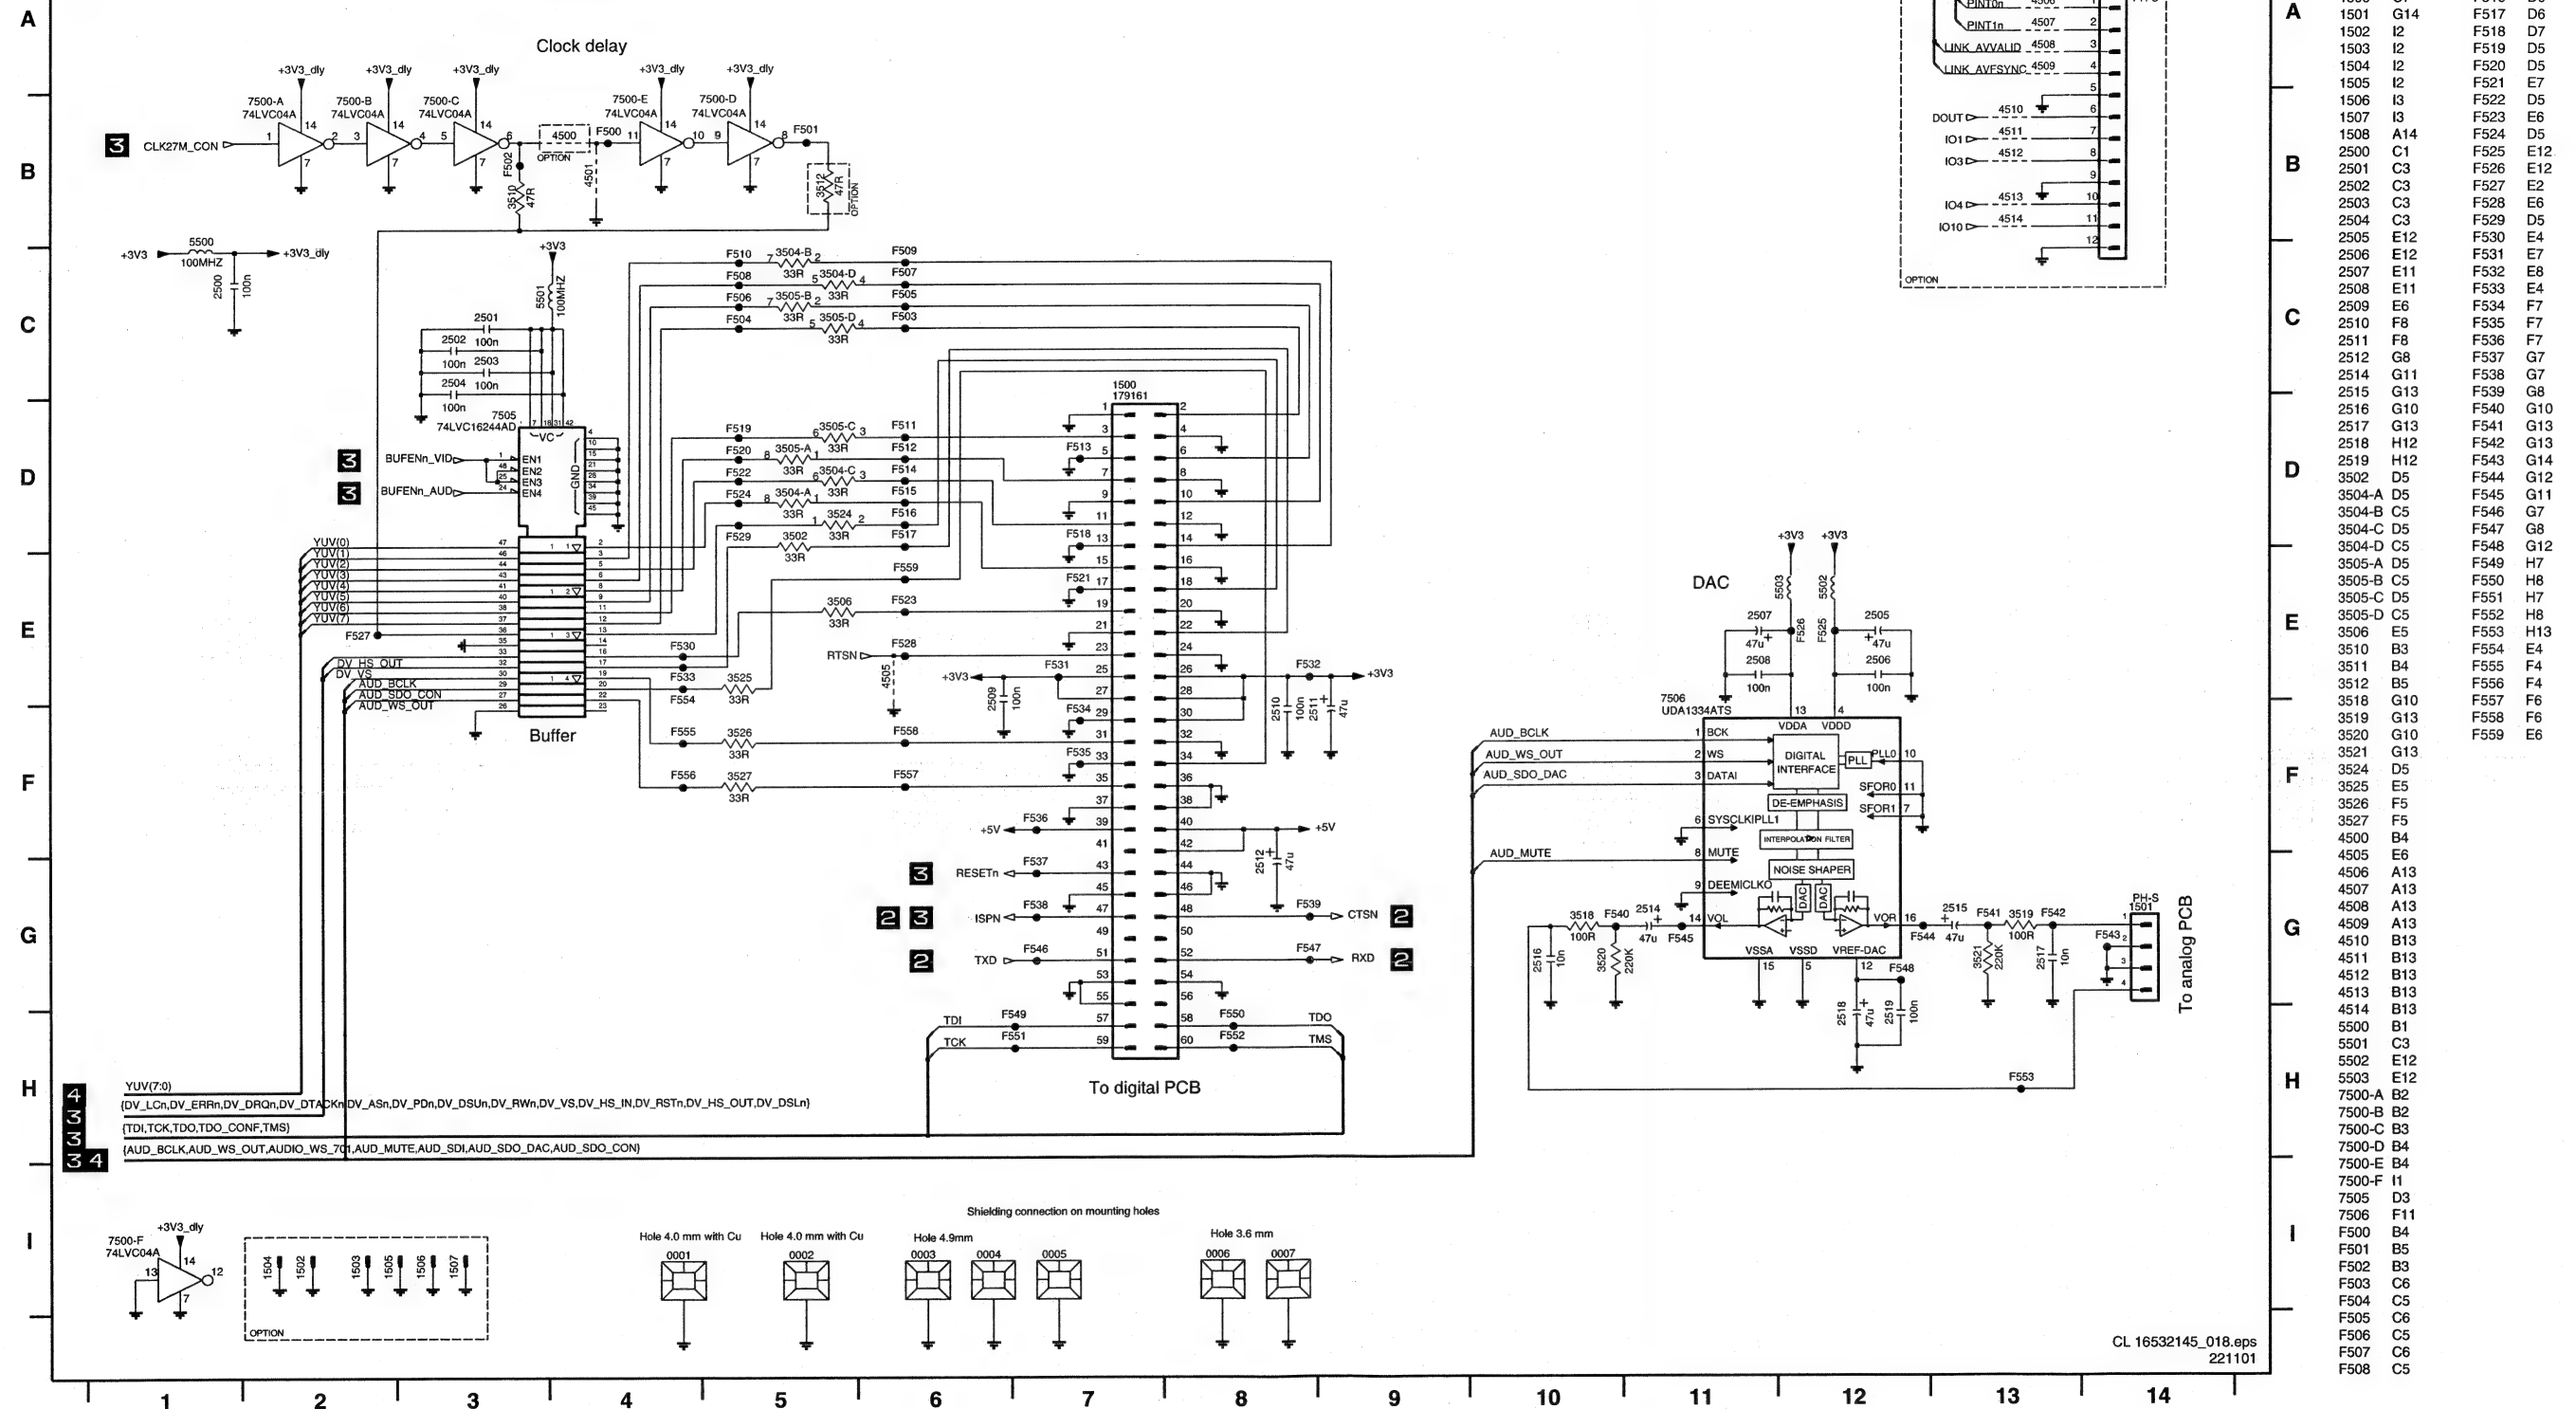


CL 16532145_018.eps
221101

Layout DVIO Board (Overview Top View)

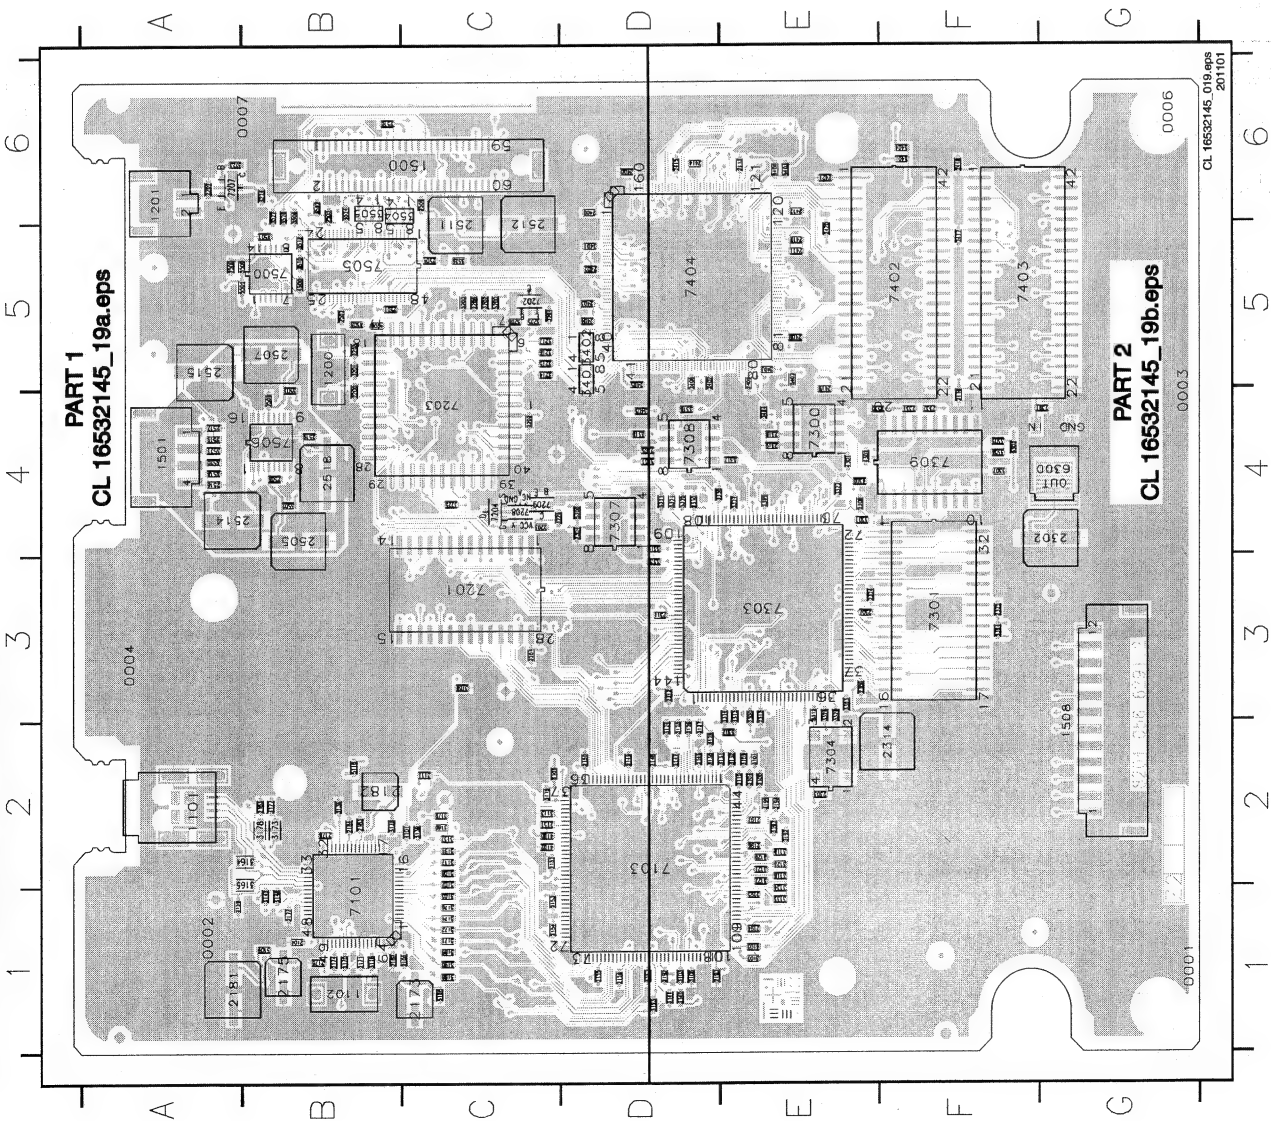


- | | | | |
|---------|---------|---------|---------|
| 3331 D4 | 3130 D2 | 2332 F4 | 1101 A2 |
| 3400 D6 | 3131 E2 | 2400 D6 | 1102 B1 |
| 3401 D5 | 3132 E2 | 2401 D5 | 1200 B5 |
| 3402 D5 | 3133 E1 | 2402 D5 | 1201 A6 |
| 3403 E5 | 3134 E1 | 2403 D5 | 1500 C6 |
| 3404 E4 | 3135 E1 | 2404 D5 | 1501 A4 |
| 3405 D4 | 3136 E2 | 2405 D5 | 1502 G2 |
| 3502 B6 | 3137 C2 | 2406 D5 | 1503 B2 |
| 3504 B6 | 3138 B2 | 2407 D5 | 1504 B1 |
| 3505 B6 | 3139 C2 | 2408 D5 | 1505 C1 |
| 3506 B6 | 3140 D1 | 2409 E5 | 2146 D2 |
| 3510 B5 | 3141 D1 | 2410 E5 | 2147 D2 |
| 3512 B5 | 3142 B1 | 2411 E5 | 2148 D2 |
| 3516 A4 | 3143 B1 | 2412 E5 | 2149 D2 |
| 3519 A4 | 3144 B2 | 2413 E5 | 2150 D2 |
| 3521 A4 | 3145 B2 | 2414 D6 | 2151 C2 |
| 3522 A4 | 3146 C3 | 2415 D6 | 2152 C2 |
| 3523 C5 | 3147 C1 | 2416 F4 | 2153 C1 |
| 3524 B6 | 3148 B1 | 2417 F5 | 2154 C1 |
| 3525 C5 | 3149 B1 | 2418 F6 | 2155 D1 |
| 3526 B6 | 3150 B1 | 2419 E4 | 2156 D1 |
| 3527 B6 | 3151 B1 | 2420 E5 | 2157 D1 |
| 4100 C2 | 3152 B2 | 2500 A5 | 2158 A1 |
| 4101 C2 | 3153 B2 | 2501 A5 | 2159 B2 |
| 4102 C2 | 3154 B2 | 2502 B5 | 2160 B1 |
| 4103 E1 | 3155 B2 | 2503 B5 | 2161 B1 |
| 4208 B5 | 3156 B2 | 2504 C5 | 2162 B1 |
| 4300 E4 | 3157 B2 | 2505 B4 | 2163 B2 |
| 4301 E4 | 3158 B2 | 2506 B4 | 2164 B2 |
| 4302 E4 | 3159 C1 | 2507 B5 | 2165 B2 |
| 4500 B5 | 3160 C1 | 2508 C6 | 2166 B2 |
| 4501 B5 | 3161 C1 | 2509 C6 | 2167 B2 |
| 4505 B5 | 3162 C1 | 2510 B6 | 2168 B2 |
| 5103 C2 | 3163 D1 | 2511 C5 | 2169 B1 |
| 5108 C1 | 3164 D1 | 2512 C5 | 2170 B1 |
| 5109 B1 | 3165 D1 | 2513 C5 | 2171 B1 |
| 5110 B2 | 3166 D1 | 2514 A4 | 2172 B1 |
| 5200 C5 | 3167 D1 | 2515 A5 | 2173 B1 |
| 5300 D4 | 3168 D1 | 2516 A5 | 2174 B1 |
| 5301 D4 | 3169 D1 | 2517 A5 | 2175 B1 |
| 5302 E2 | 3170 D1 | 2518 A5 | 2176 B1 |
| 5303 F4 | 3171 D1 | 2519 B4 | 2177 B1 |
| 5304 F4 | 3172 D1 | 2520 B4 | 2178 B1 |
| 5400 E6 | 3173 D1 | 2521 B4 | 2179 B1 |
| 5401 F6 | 3174 D1 | 2522 B4 | 2180 B1 |
| 5402 E5 | 3175 D1 | 2523 B4 | 2181 B1 |
| 5403 E5 | 3176 D1 | 2524 B4 | 2182 B2 |
| 5404 F6 | 3177 D1 | 2525 B4 | 2183 B2 |
| 5500 A5 | 3178 D1 | 2526 B4 | 2184 B2 |
| 5501 A5 | 3179 D1 | 2527 B4 | 2185 B2 |
| 5502 B4 | 3180 D1 | 2528 B4 | 2186 B2 |
| 5503 B4 | 3181 D1 | 2529 B4 | 2187 B1 |
| 6300 G4 | 3182 D1 | 2530 B4 | 2188 B1 |
| 7101 B1 | 3183 D1 | 2531 B4 | 2189 B1 |
| 7103 D2 | 3184 D1 | 2532 B4 | 2190 B1 |
| 7201 C3 | 3185 D1 | 2533 B4 | 2191 B1 |
| 7202 C5 | 3186 D1 | 2534 B4 | 2192 B1 |
| 7203 C4 | 3187 D1 | 2535 B4 | 2193 D1 |
| 7204 C4 | 3188 D1 | 2536 B4 | 2194 E1 |
| 7205 C4 | 3189 D1 | 2537 B4 | 2195 E1 |
| 7206 C4 | 3190 D1 | 2538 B4 | 2196 E2 |
| 7207 A6 | 3191 D1 | 2539 B4 | 2197 E2 |
| 7208 C4 | 3192 D1 | 2540 B4 | 2198 E2 |
| 7209 C4 | 3193 D1 | 2541 B4 | 2199 E2 |
| 7300 E4 | 3194 D1 | 2542 B4 | 2200 B4 |
| 7301 F3 | 3195 D1 | 2543 B4 | 2201 C4 |
| 7302 F3 | 3196 D1 | 2544 B4 | 2202 C4 |
| 7303 E3 | 3197 D1 | 2545 B4 | 2203 C4 |
| 7304 E3 | 3198 D1 | 2546 B4 | 2204 C3 |
| 7305 E3 | 3199 D1 | 2547 B4 | 2205 B5 |
| 7306 E3 | 3200 D1 | 2548 B4 | 2206 B5 |
| 7307 E3 | 3201 D1 | 2549 B4 | 2207 A6 |
| 7308 E3 | 3202 D1 | 2550 B4 | 2208 C5 |
| 7309 E3 | 3203 D1 | 2551 B4 | 2209 C5 |
| 7310 E3 | 3204 D1 | 2552 B4 | 2210 C5 |
| 7311 E3 | 3205 D1 | 2553 B4 | 3101 E2 |
| 7312 E3 | 3206 D1 | 2554 B4 | 3102 E1 |
| 7313 E3 | 3207 D1 | 2555 B4 | 3103 E1 |
| 7314 E3 | 3208 D1 | 2556 B4 | 3104 E2 |
| 7315 E3 | 3209 D1 | 2557 B4 | 3105 C1 |
| 7316 E3 | 3210 D1 | 2558 B4 | 3106 D1 |
| 7317 E3 | 3211 D1 | 2559 B4 | 3107 C2 |
| 7318 E3 | 3212 D1 | 2560 B4 | 3108 C2 |
| 7319 E3 | 3213 D1 | 2561 B4 | 3109 E2 |
| 7320 E3 | 3214 D1 | 2562 B4 | 3110 E2 |
| 7321 E3 | 3215 D1 | 2563 B4 | 3111 C2 |
| 7322 E3 | 3216 D1 | 2564 B4 | 3112 C2 |
| 7323 E3 | 3217 D1 | 2565 B4 | 3113 C2 |
| 7324 E3 | 3218 D1 | 2566 B4 | 3114 C2 |
| 7325 E3 | 3219 D1 | 2567 B4 | 3115 C2 |
| 7326 E3 | 3220 D1 | 2568 B4 | 3116 C2 |
| 7327 E3 | 3221 D1 | 2569 B4 | 3117 C2 |
| 7328 E3 | 3222 D1 | 2570 B4 | 3118 E2 |
| 7329 E3 | 3223 D1 | 2571 B4 | 3119 E2 |
| 7330 E3 | 3224 D1 | 2572 B4 | 3120 E2 |
| 7331 E3 | 3225 D1 | 2573 B4 | 3121 E2 |
| 7332 E3 | 3226 D1 | 2574 B4 | 3122 E2 |
| 7333 E3 | 3227 D1 | 2575 B4 | 3123 E2 |
| 7334 E3 | 3228 D1 | 2576 B4 | 3124 D2 |
| 7335 E3 | 3229 D1 | 2577 B4 | 3125 D2 |
| 7336 E3 | 3230 D1 | 2578 B4 | 3126 D2 |
| 7337 E3 | 3231 D1 | 2579 B4 | 3127 D2 |
| 7338 E3 | 3232 D1 | 2580 B4 | 3128 D2 |
| 7339 E3 | 3233 D1 | 2581 B4 | |
| 7340 E3 | 3234 D1 | 2582 B4 | |
| 7341 E3 | 3235 D1 | 2583 B4 | |
| 7342 E3 | 3236 D1 | 2584 B4 | |
| 7343 E3 | 3237 D1 | 2585 B4 | |
| 7344 E3 | 3238 D1 | 2586 B4 | |
| 7345 E3 | 3239 D1 | 2587 B4 | |
| 7346 E3 | 3240 D1 | 2588 B4 | |
| 7347 E3 | 3241 D1 | 2589 B4 | |
| 7348 E3 | 3242 D1 | 2590 B4 | |
| 7349 E3 | 3243 D1 | 2591 B4 | |
| 7350 E3 | 3244 D1 | 2592 B4 | |
| 7351 E3 | 3245 D1 | 2593 B4 | |
| 7352 E3 | 3246 D1 | 2594 B4 | |
| 7353 E3 | 3247 D1 | 2595 B4 | |
| 7354 E3 | 3248 D1 | 2596 B4 | |
| 7355 E3 | 3249 D1 | 2597 B4 | |
| 7356 E3 | 3250 D1 | 2598 B4 | |
| 7357 E3 | 3251 D1 | 2599 B4 | |
| 7358 E3 | 3252 D1 | 2600 B4 | |
| 7359 E3 | 3253 D1 | 2601 B4 | |
| 7360 E3 | 3254 D1 | 2602 B4 | |
| 7361 E3 | 3255 D1 | 2603 B4 | |
| 7362 E3 | 3256 D1 | 2604 B4 | |
| 7363 E3 | 3257 D1 | 2605 B4 | |
| 7364 E3 | 3258 D1 | 2606 B4 | |
| 7365 E3 | 3259 D1 | 2607 B4 | |
| 7366 E3 | 3260 D1 | 2608 B4 | |
| 7367 E3 | 3261 D1 | 2609 B4 | |
| 7368 E3 | 3262 D1 | 2610 B4 | |
| 7369 E3 | 3263 D1 | 2611 B4 | |
| 7370 E3 | 3264 D1 | 2612 B4 | |
| 7371 E3 | 3265 D1 | 2613 B4 | |
| 7372 E3 | 3266 D1 | 2614 B4 | |
| 7373 E3 | 3267 D1 | 2615 B4 | |
| 7374 E3 | 3268 D1 | 2616 B4 | |
| 7375 E3 | 3269 D1 | 2617 B4 | |
| 7376 E3 | 3270 D1 | 2618 B4 | |
| 7377 E3 | 3271 D1 | 2619 B4 | |
| 7378 E3 | 3272 D1 | 2620 B4 | |
| 7379 E3 | 3273 D1 | 2621 B4 | |
| 7380 E3 | 3274 D1 | 2622 B4 | |
| 7381 E3 | 3275 D1 | 2623 B4 | |
| 7382 E3 | 3276 D1 | 2624 B4 | |
| 7383 E3 | 3277 D1 | 2625 B4 | |
| 7384 E3 | 3278 D1 | 2626 B4 | |
| 7385 E3 | 3279 D1 | 2627 B4 | |
| 7386 E3 | 3280 D1 | 2628 B4 | |
| 7387 E3 | 3281 D1 | 2629 B4 | |
| 7388 E3 | 3282 D1 | 2630 B4 | |
| 7389 E3 | 3283 D1 | 2631 B4 | |
| 7390 E3 | 3284 D1 | 2632 B4 | |
| 7391 E3 | 3285 D1 | 2633 B4 | |
| 7392 E3 | 3286 D1 | 2634 B4 | |
| 7393 E3 | 3287 D1 | 2635 B4 | |
| 7394 E3 | 3288 D1 | 2636 B4 | |
| 7395 E3 | 3289 D1 | 2637 B4 | |
| 7396 E3 | 3290 D1 | 2638 B4 | |
| 7397 E3 | 3291 D1 | 2639 B4 | |
| 7398 E3 | 3292 D1 | 2640 B4 | |
| 7399 E3 | 3293 D1 | 2641 B4 | |
| 7400 E3 | 3294 D1 | 2642 B4 | |
| 7401 E3 | 3295 D1 | 2643 B4 | |
| 7402 E3 | 3296 D1 | 2644 B4 | |
| 7403 E3 | 3297 D1 | 2645 B4 | |
| 7404 E3 | 3298 D1 | 2646 B4 | |
| 7405 E3 | 3299 D1 | 2647 B4 | |
| 7406 E3 | 3300 D1 | 2648 B4 | |
| 7407 E3 | 3301 D1 | 2649 B4 | |
| 7408 E3 | 3302 D1 | 2650 B4 | |
| 7409 E3 | 3303 D1 | 2651 B4 | |
| 7410 E3 | 3304 D1 | 2652 B4 | |
| 7411 E3 | 3305 D1 | 2653 B4 | |
| 7412 E3 | 3306 D1 | 2654 B4 | |
| 7413 E3 | 3307 D1 | | |

Layout DVIO Board (Part 1 Top View)

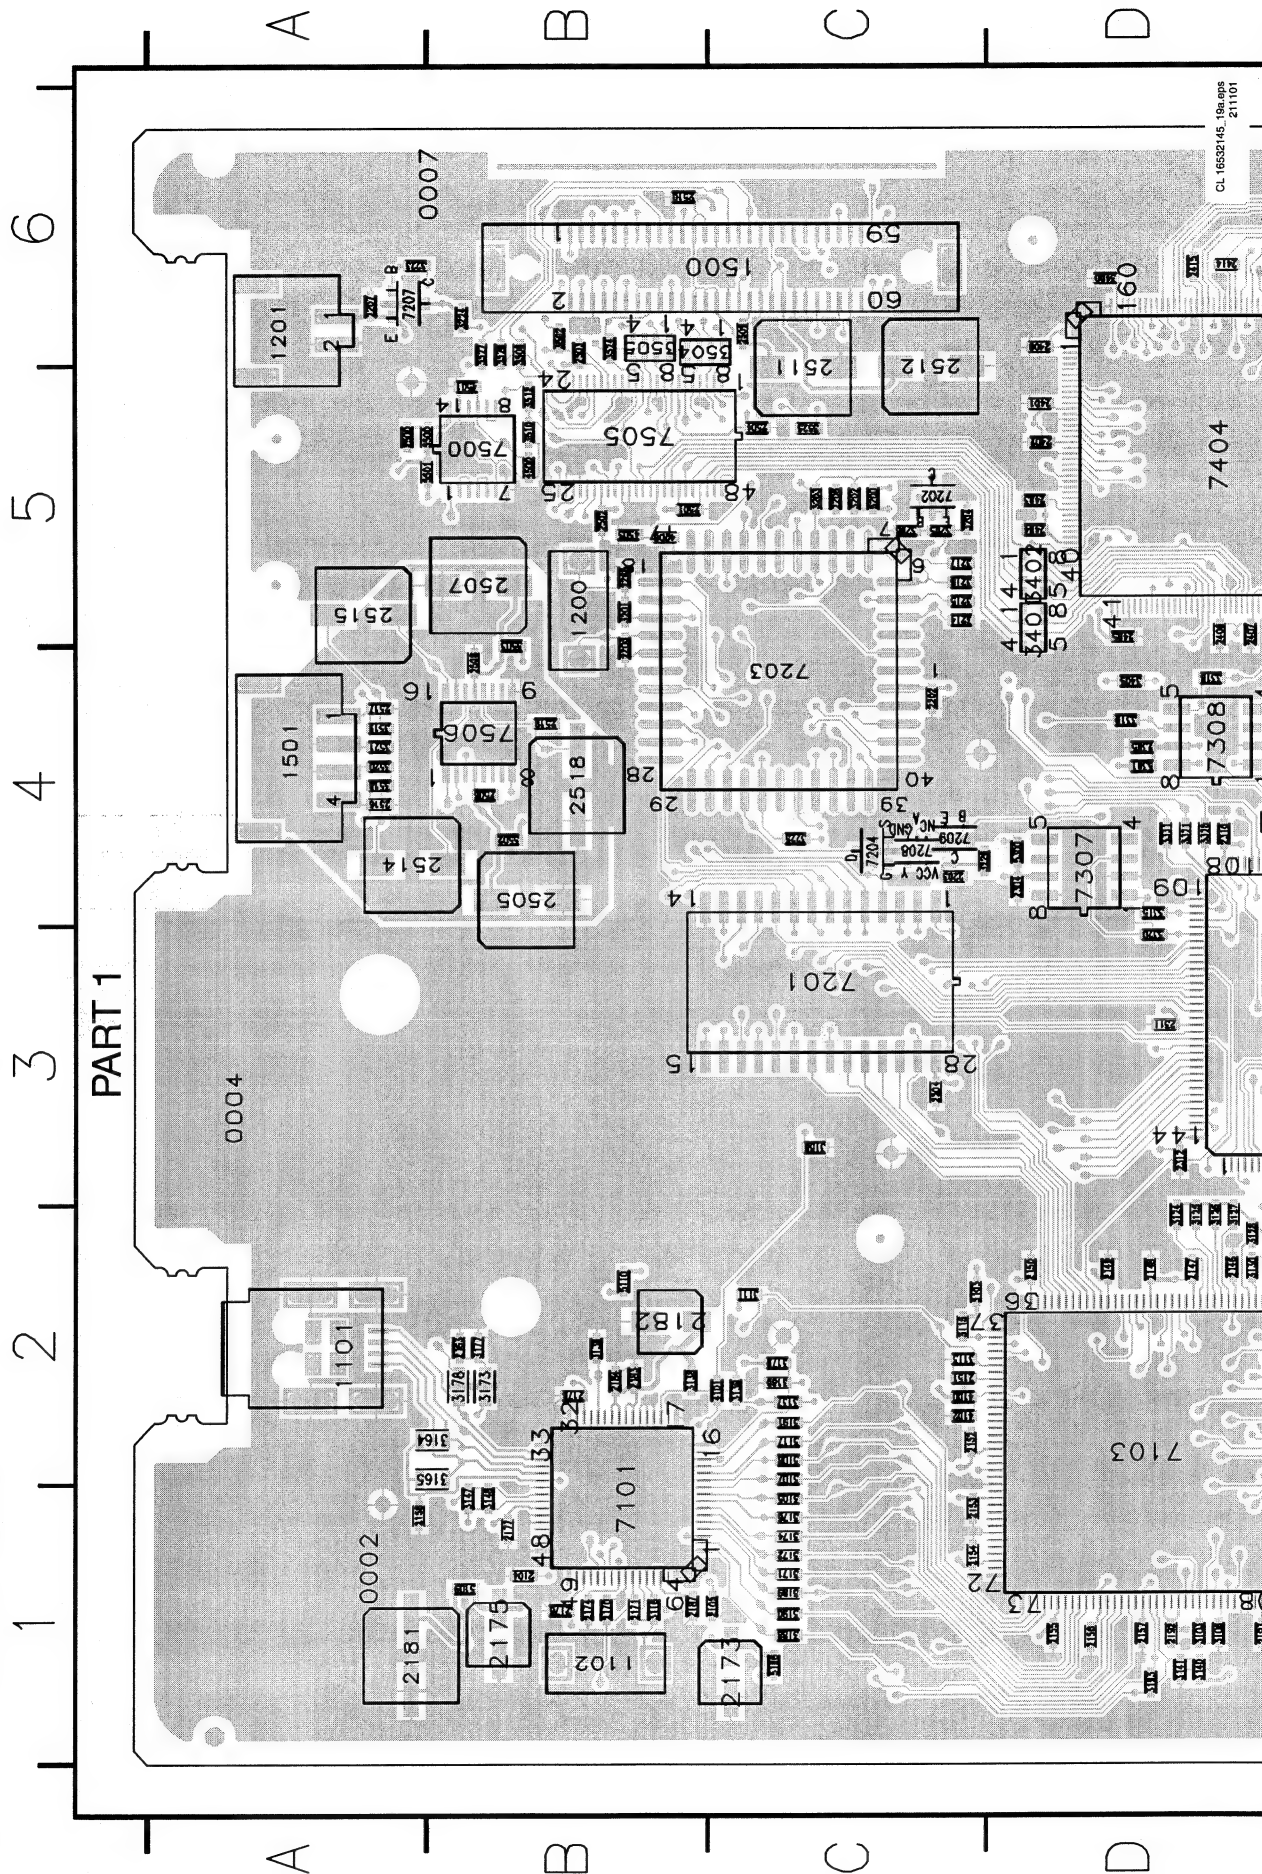


CL 1652145, 19a.eps 211101

Layout DVIO Board (Part 2 Top View)




Layout DVIO Board (Testlands Bottom View)

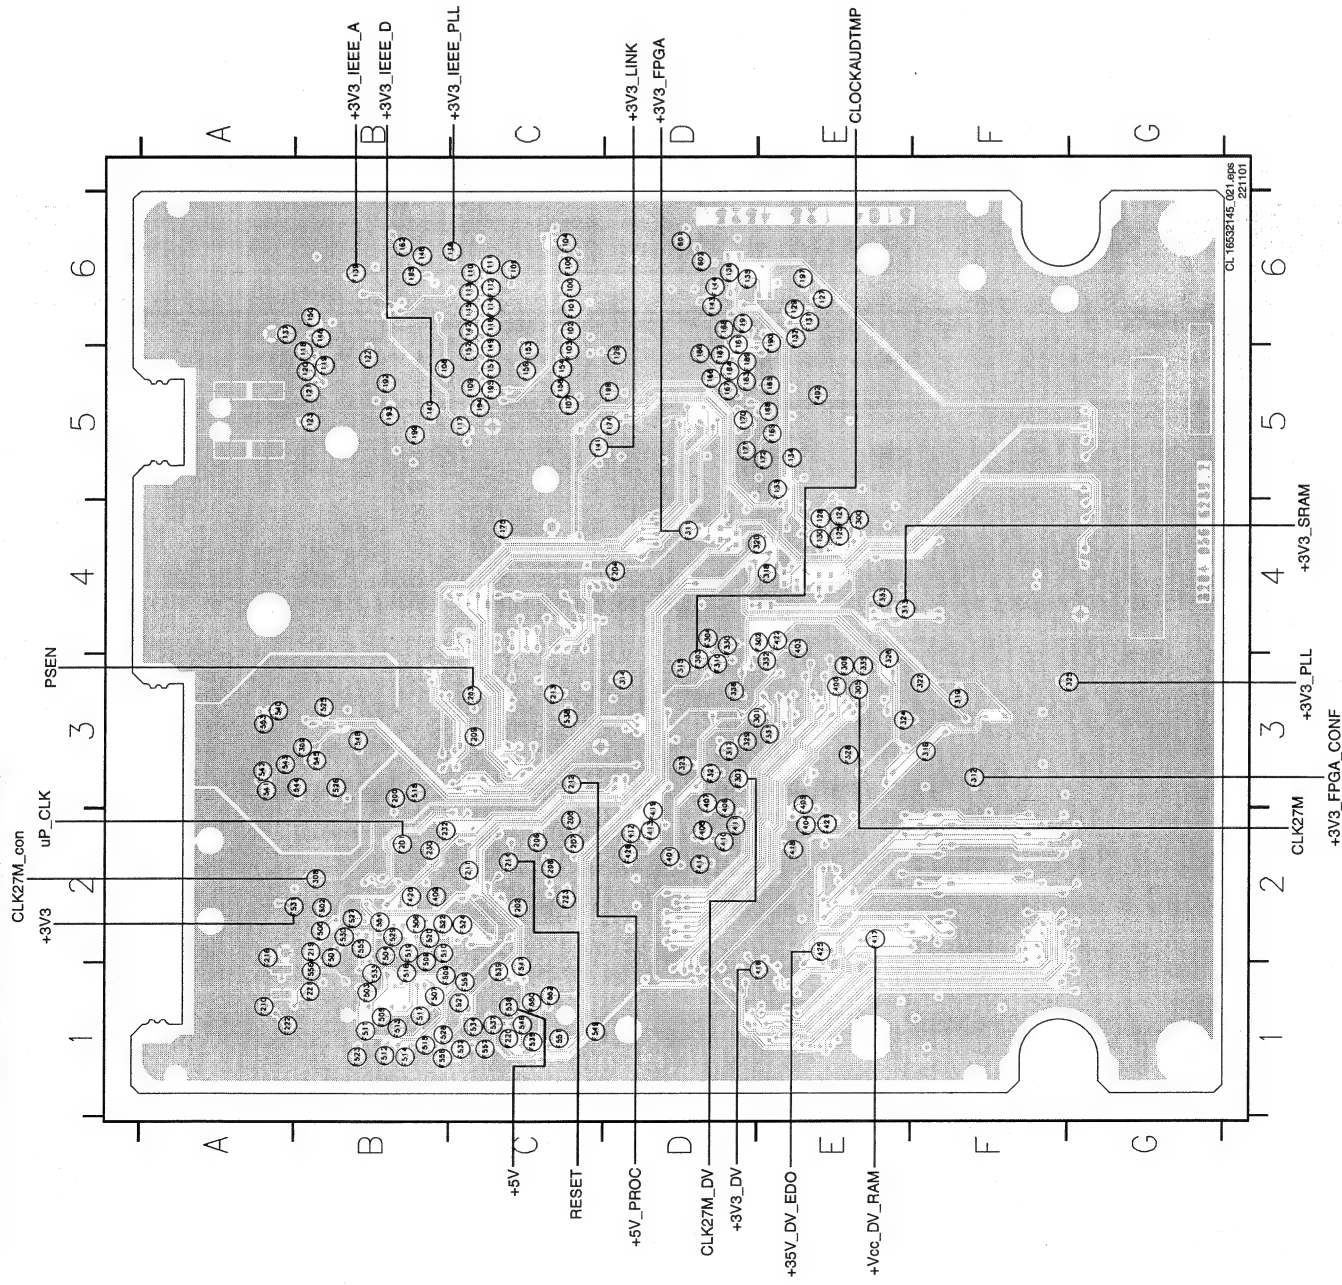


F100	C5	F144	C5	F206	C2	F328	B3	F513	B1
F101	C6	F145	C6	F207	C2	F329	D3	F514	B1
F102	C6	F146	B6	F208	C2	F330	D4	F515	B1
F103	C6	F147	B6	F209	C2	F331	E3	F516	B1
F104	C6	F148	B6	F210	A1	F332	E3	F517	B1
F105	C6	F149	B6	F211	A1	F333	E4	F518	B3
F106	C6	F150	B6	F212	C3	F334	E4	F519	B3
F107	C5	F151	C5	F213	C3	F335	E4	F520	B2
F108	B5	F152	C5	F214	C3	F336	D3	F521	C1
F109	C5	F153	C5	F215	C3	F337	D3	F522	B2
F110	C6	F154	C5	F216	A2	F338	D3	F523	B1
F111	C6	F155	C5	F217	B2	F339	E3	F524	B1
F112	C6	F156	C5	F218	B2	F340	E3	F525	B3
F113	C6	F157	C5	F219	B2	F341	E2	F526	B3
F114	C6	F158	C5	F220	C1	F342	E2	F527	B2
F115	C6	F159	C5	F221	B1	F343	E2	F528	B1
F116	C6	F160	C5	F222	A1	F344	E2	F529	B1
F117	C5	F161	D6	F223	C2	F345	E2	F530	B2
F118	B5	F162	B6	F224	C2	F346	E2	F531	A2
F119	B5	F163	D5	F225	C2	F347	E2	F532	C1
F120	B5	F164	D5	F226	C2	F348	E2	F533	B1
F121	B5	F165	D5	F227	C2	F349	E2	F534	C1
F122	B5	F166	D5	F228	C2	F350	E2	F535	C1
F123	B5	F167	D5	F229	C2	F351	E2	F536	C1
F124	E4	F168	E5	F230	B2	F352	E2	F537	C1
F125	E4	F169	E5	F231	B2	F353	E2	F538	C3
F126	E4	F170	D5	F232	B2	F354	E2	F539	C1
F127	E4	F171	D5	F233	B2	F355	E2	F540	A3
F128	E4	F172	D5	F234	B2	F356	E2	F541	A3
F129	E4	F173	D5	F235	B2	F357	E2	F542	A3
F130	E4	F174	D5	F236	B2	F358	E2	F543	A3
F131	E5	F175	C4	F237	B2	F359	E2	F544	B3
F132	E5	F176	C4	F238	B2	F360	E2	F545	B3
F133	E5	F177	C4	F239	B2	F361	E2	F546	C1
F134	E5	F178	C4	F240	B2	F362	E2	F547	C1
F135	D6	F179	C4	F241	B2	F363	E2	F548	B3
F136	D6	F180	C4	F242	E4	F364	E2	F549	C1
F137	A6	F181	D6	F243	E4	F365	E2	F550	C1
F138	A6	F182	D6	F244	E4	F366	E2	F551	C1
F139	B6	F183	D6	F245	E4	F367	E2	F552	C1
F140	B5	F184	D6	F246	E4	F368	E2	F553	A3
F141	C5	F185	D6	F247	E4	F369	E2	F554	B2
F142	C5	F186	D6	F248	E4	F370	E2	F555	B2
F143	D6	F187	D6	F249	E4	F371	E2	F556	B1
F144	D6	F188	D6	F250	E4	F372	E2	F557	C1

Digital Board: VSM, Buffer Memory and Bit Engine Interface

2100	C1	2106	A5	2114	A5	2122	B14	2130	G15	2139	G13	2147	D1	3102	E3	3110	F3	3118	D11	3126	H12	3134	E2	4103	F7	7101	B14
2101	H1	2107	A5	2115	A6	2123	B14	2131	H15	2140	G2	2148	E1	3111	B3	3119	F10	3127	G3	3135	E2	4104	G6	7102	G13		
2100	A4	2108	A5	2116	A6	2124	B13	2132	B1	2141	G2	2149	E1	3104	C2	3112	B3	3120	G15	3128	G2	3136	G1	4105	G7	7103	C1
2101	A5	2109	A5	2117	A6	2125	B13	2134	D1	2142	G2	2150	E1	3105	D2	3113	B3	3121	G12	3129	H2	3137	B2	5100	A4	7104	H4
2102	A5	2110	A5	2118	A6	2126	B12	2135	G13	2143	H1	2151	F1	3106	F2	3114	B2	3122	H12	3130	H12	3138	B2	5101	A12		
2103	A5	2111	A5	2119	A4	2127	B12	2136	F1	2144	H1	2152	G1	3107	C3	3115	E3	3123	H12	3131	D2	4100	C15	5102	B1		
2104	A5	2112	A5	2120	B15	2128	B3	2137	G4	2145	H1	3100	D11	3108	F3	3116	E3	3124	H12	3132	E2	4101	H4	5103	F13		
2105	A5	2113	A5	2121	B15	2129	G13	2138	G1	2146	A4	3101	F10	3109	F3	3117	D11	3125	G14	3133	E2	4102	F6	7100	B4		

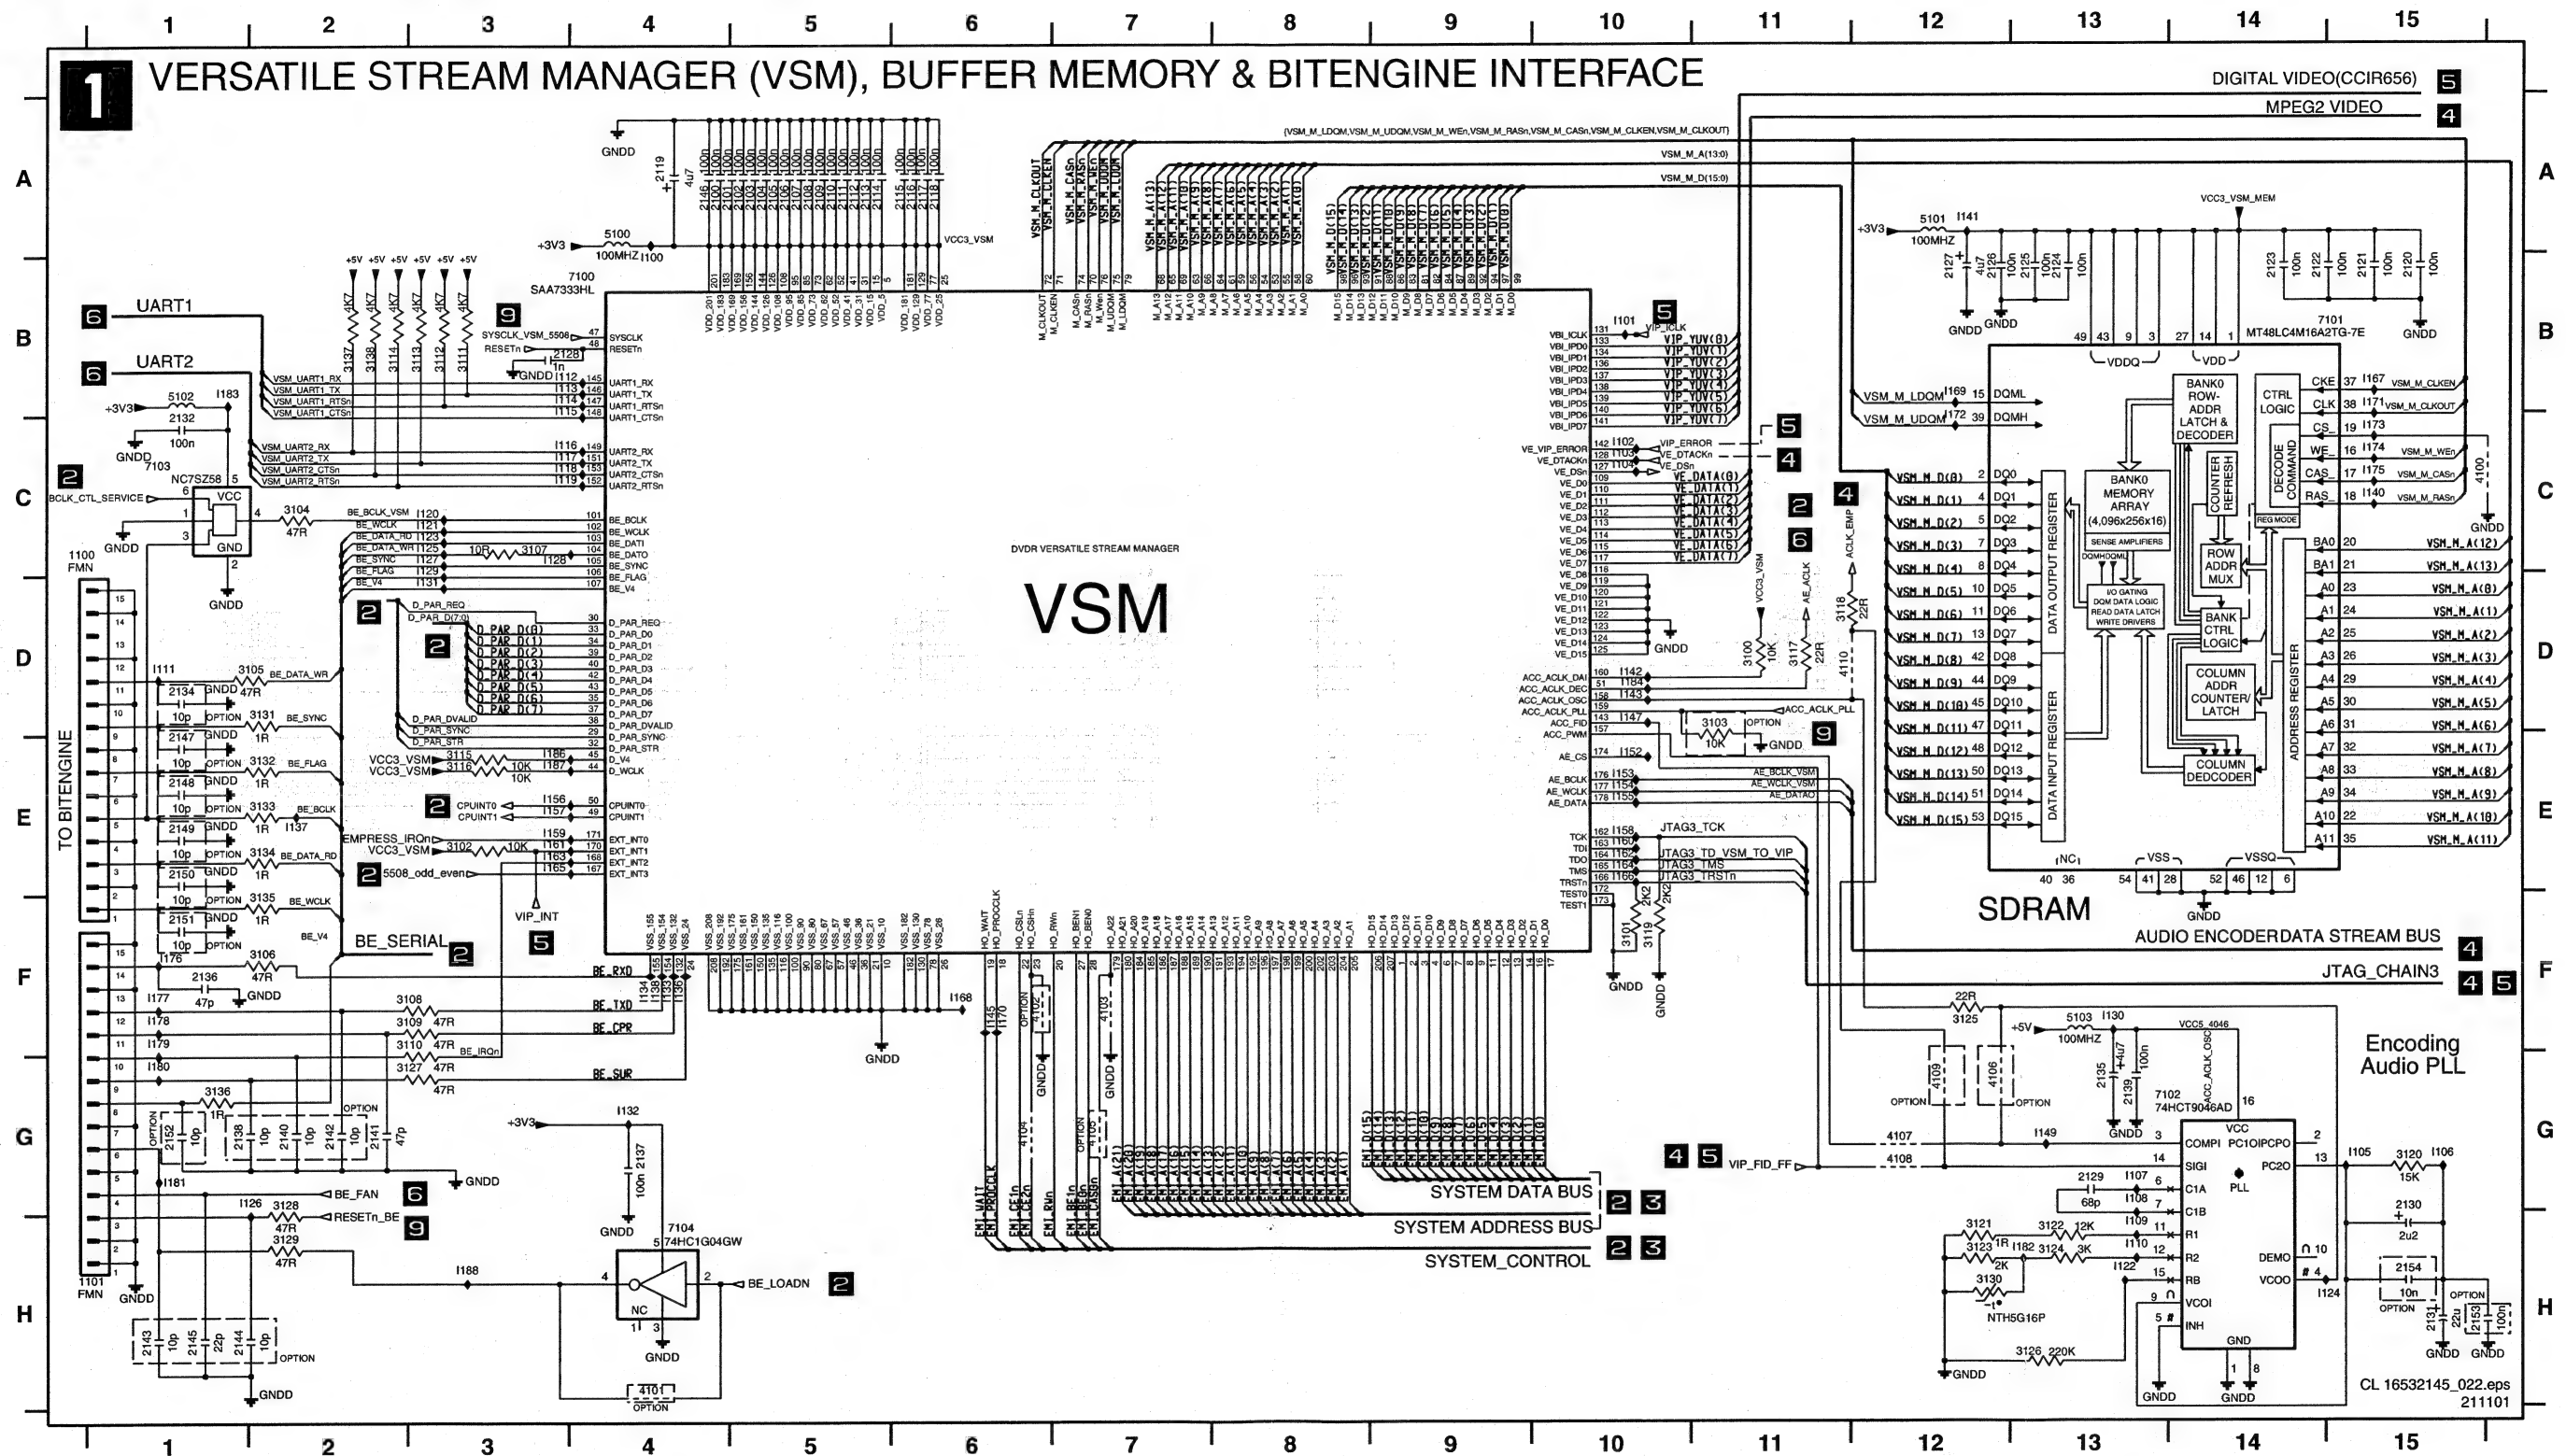

2 AV decoder : STI5508

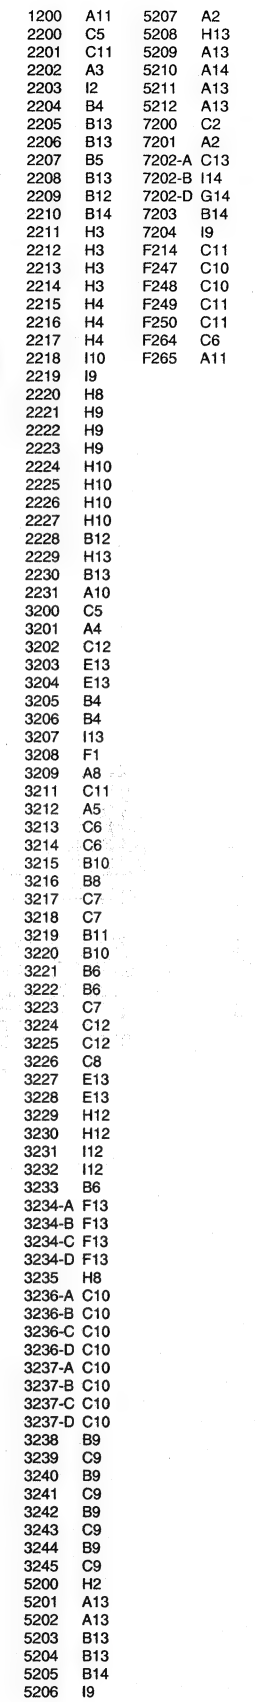


Digital Board: AV Decoder Memory

3 AV Decoder Memory

SDRAM Interface



SYSTEM DATA BUS

SYSTEM ADDRESS BUS

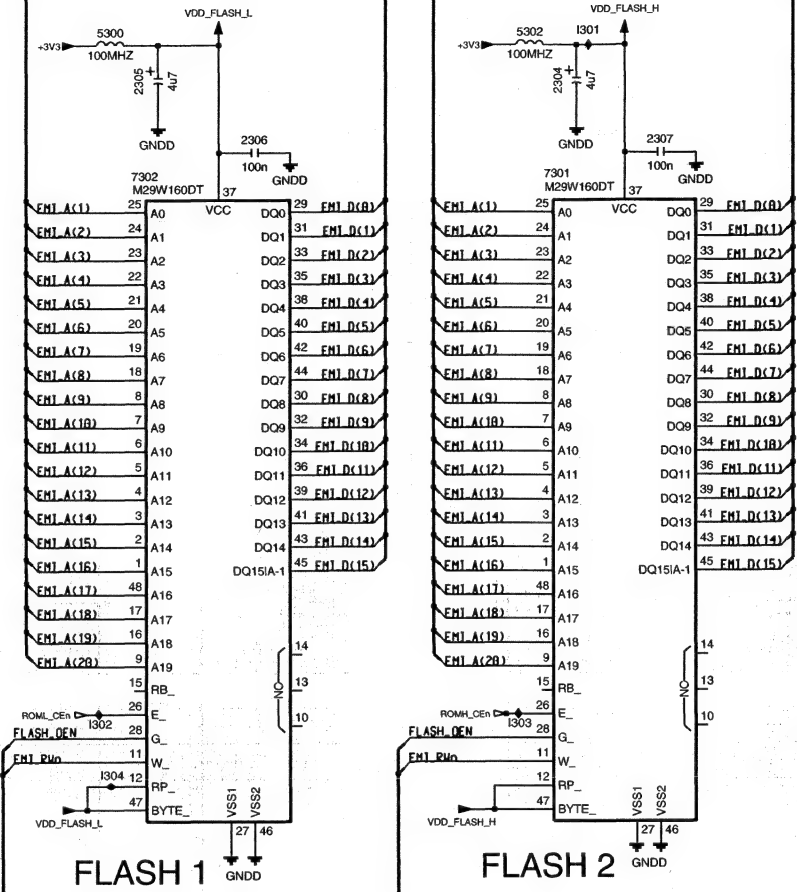


SYSTEM CONTROL

(EMI_RWn, FLASH_OEn, EMI_CEn, EMI_CEn)

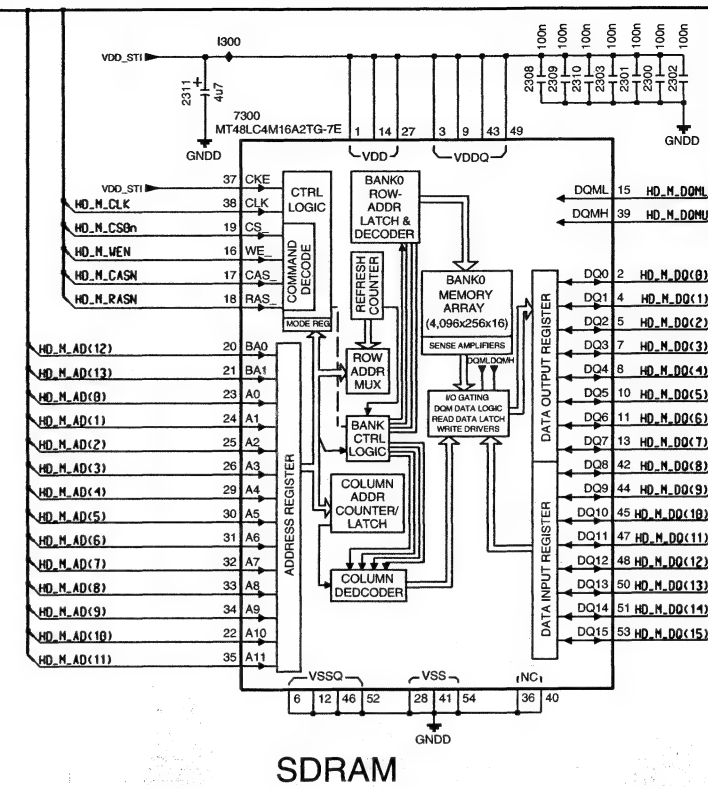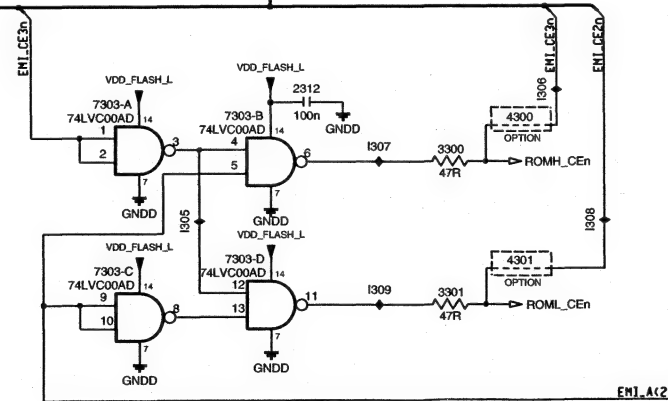


SDRAM


4 Video Encoder Empress

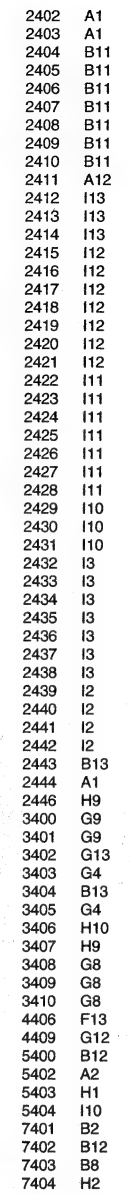

Digital Board: VIP CVBS Y/C Video Input

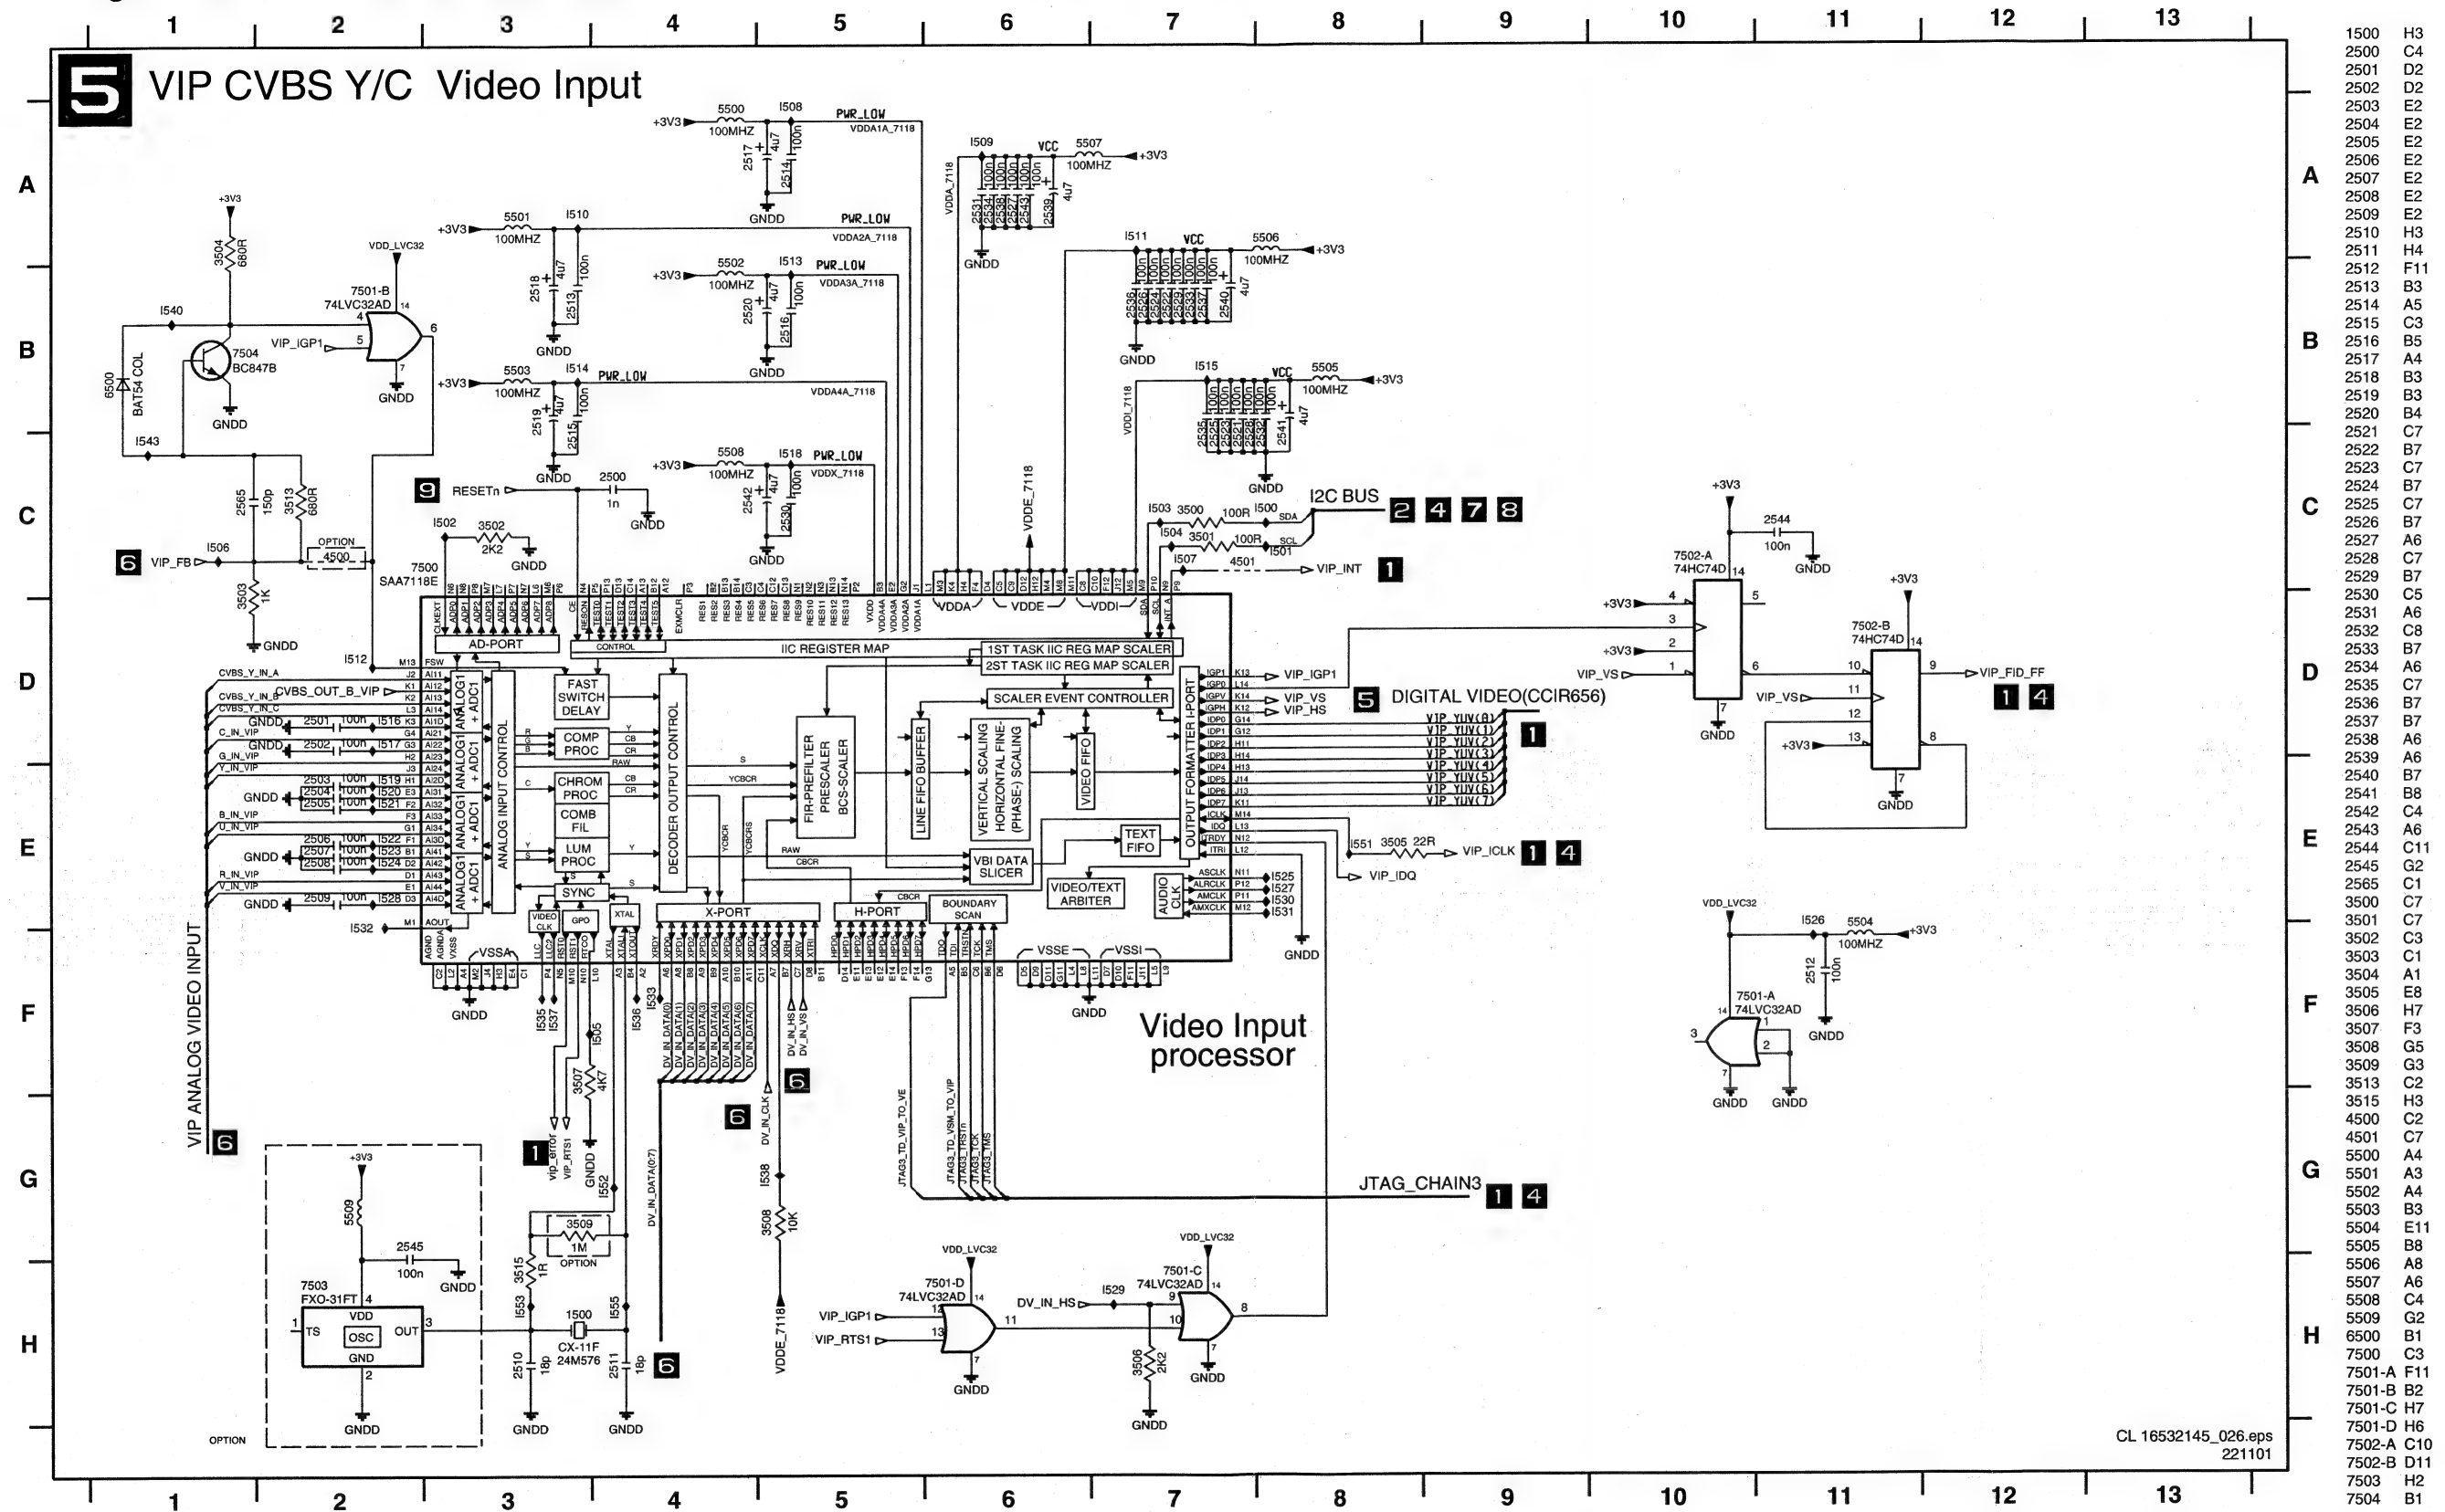


Digital Board: Analog Board Cons. Video In / Output

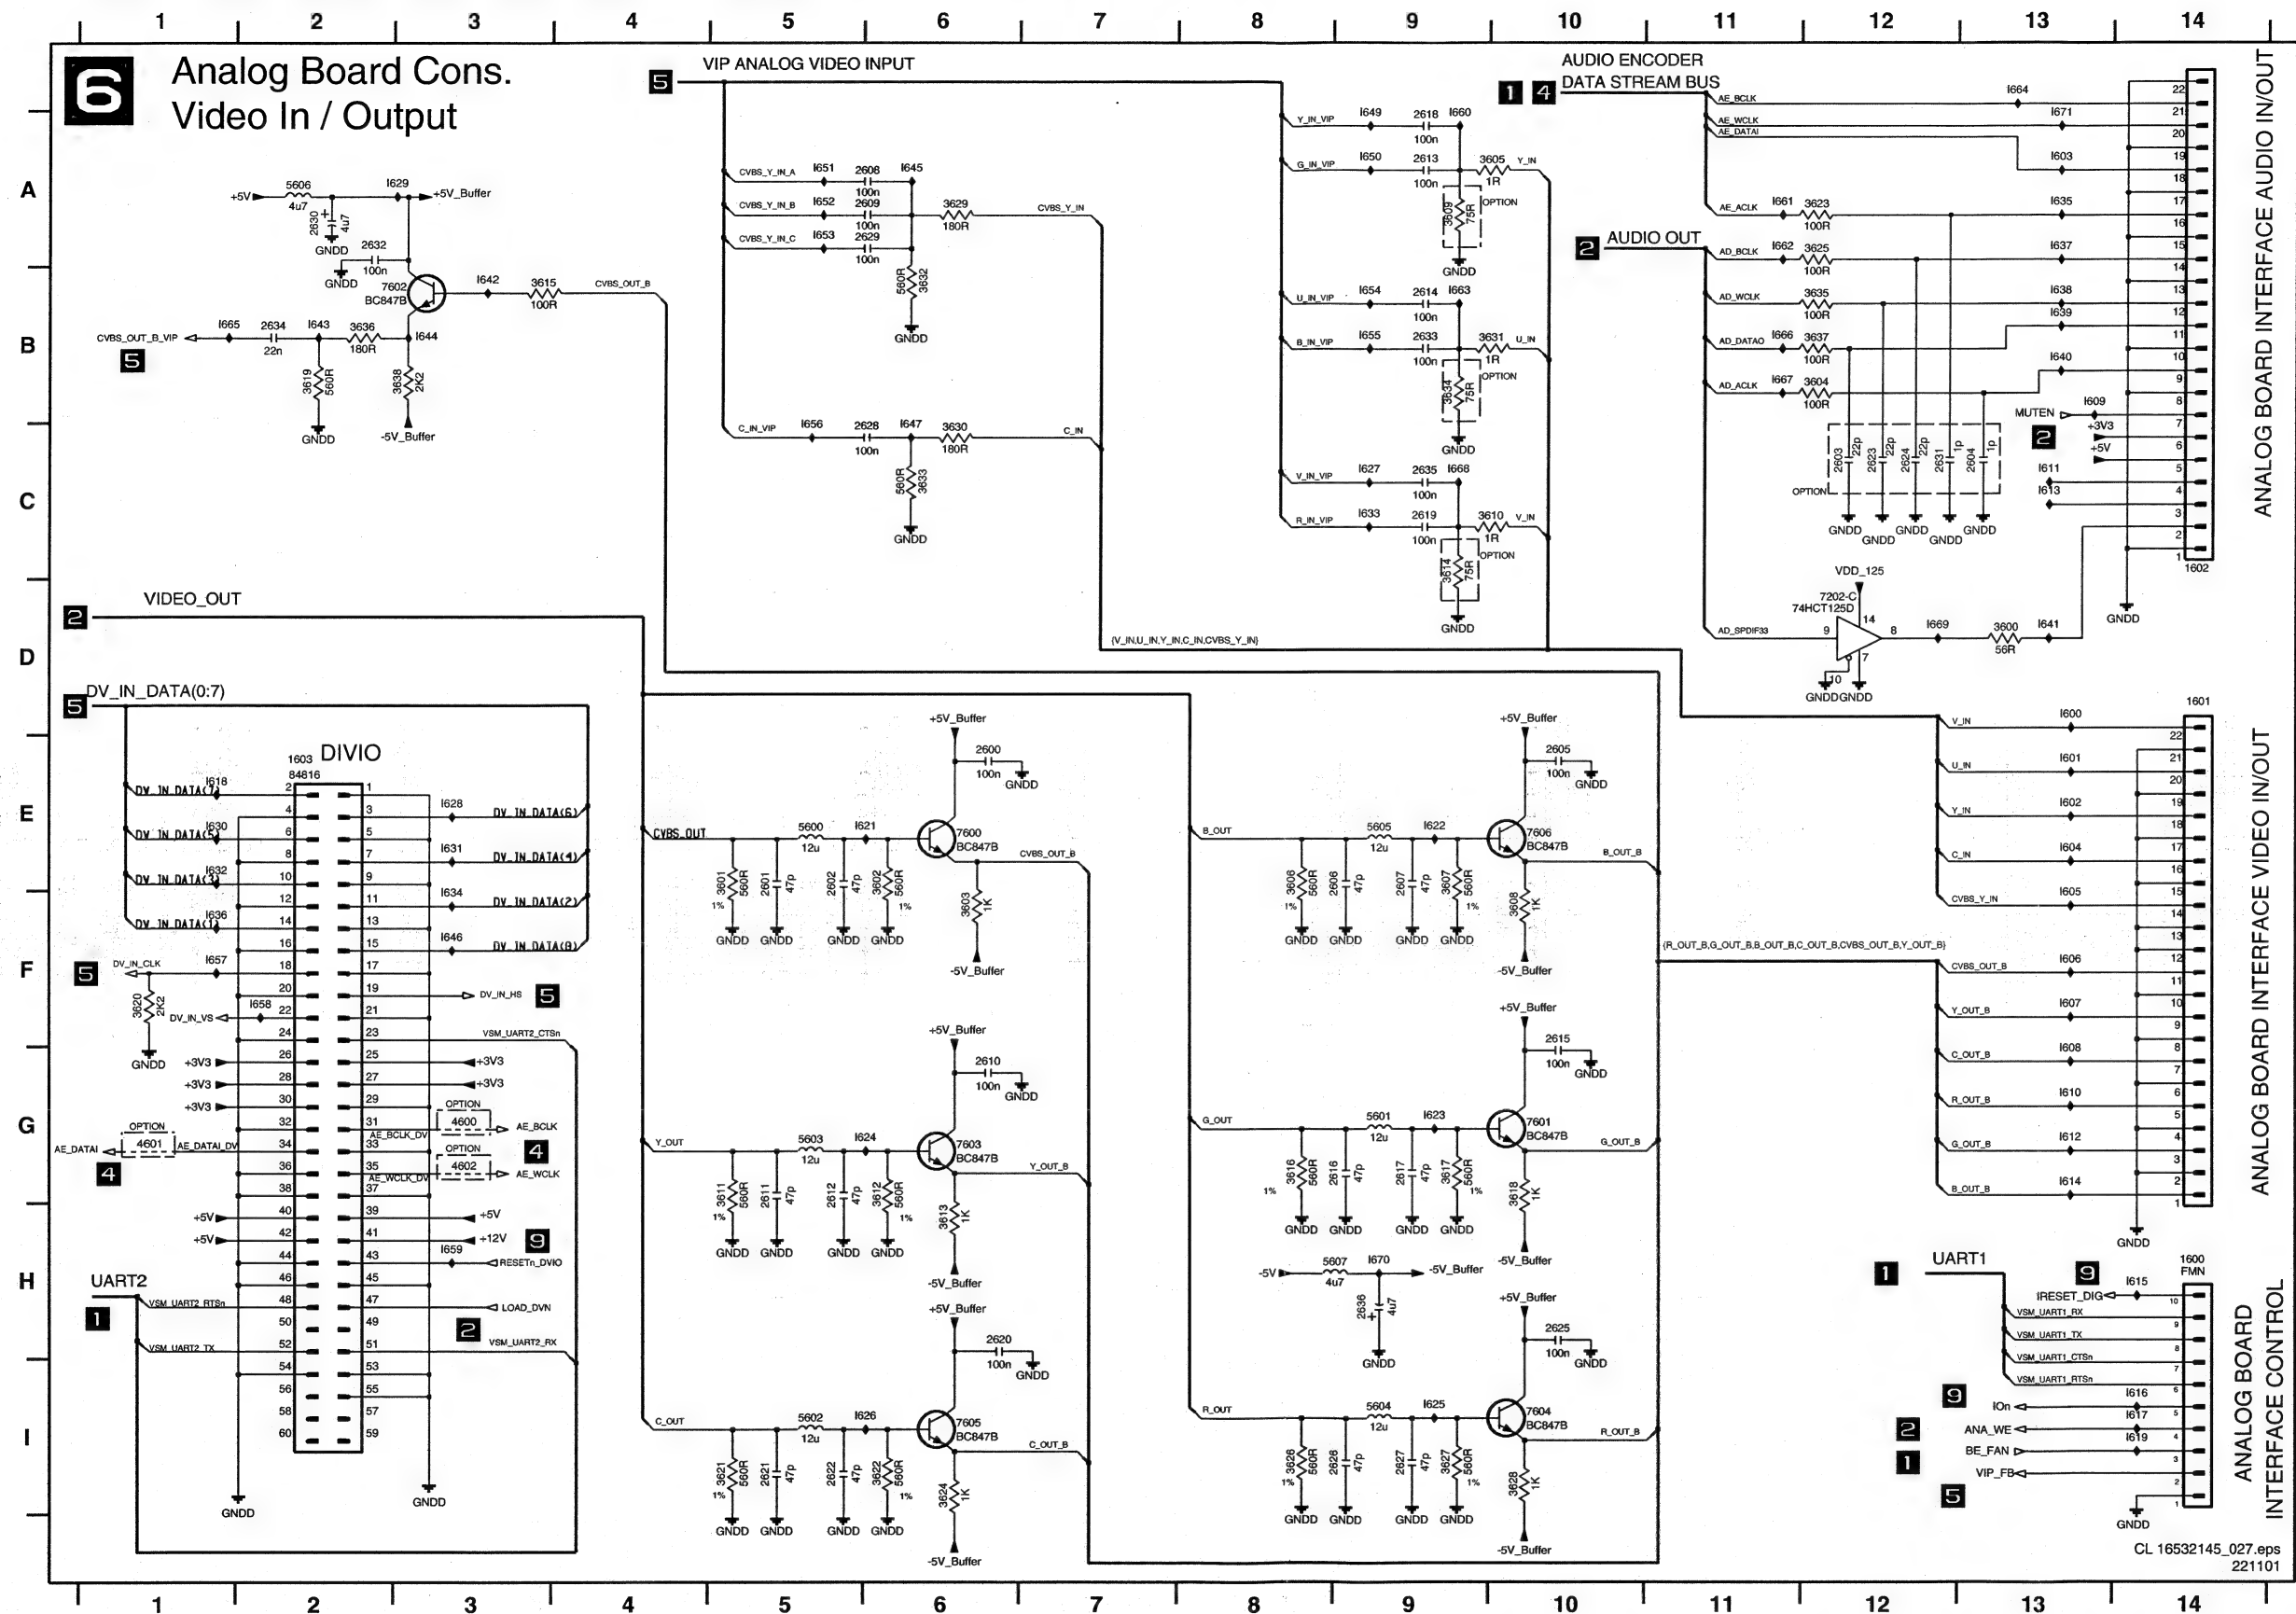

1600	H14	7202-C	D12
1601	D14	7600	E6
1602	C14	7601	G10
1603	E2	7602	B3
2600	E6	7603	G6
2601	E5	7604	I10
2602	E5	7605	I6
2603	C12	7606	E10
2604	C13		
2605	E10		
2606	E9		
2607	E9		
2608	A6		
2609	A6		
2610	G6		
2611	G5		
2612	G5		
2613	A9		
2614	B9		
2615	F10		
2616	G9		
2617	G9		
2618	A9		
2619	C9		
2620	H6		
2621	I5		
2622	I5		
2623	C12		
2624	C12		
2625	H10		
2626	I9		
2627	I9		
2628	C6		
2629	A6		
2630	A2		
2631	C12		
2632	A2		
2633	B9		
2634	B2		
2635	C9		
2636	H9		
3600	D13		
3601	E5		
3602	E6		
3603	F6		
3604	B12		
3605	A10		
3606	E8		
3607	E9		
3608	F10		
3609	A9		
3610	C10		
3611	G5		
3612	G6		
3613	H6		
3614	C9		
3615	B3		
3616	G8		
3617	G9		
3618	G10		
3619	B2		
3620	F1		
3621	I5		
3622	I6		
3623	A12		
3624	I6		
3625	A12		
3626	I8		
3627	I9		
3628	I10		
3629	A6		
3630	C6		
3631	B10		
3632	B6		
3633	C6		
3634	B9		
3635	B12		
3636	B2		
3637	B12		
3638	B3		
4600	G3		
4601	G1		
4602	G3		
5600	E5		
5601	G9		
5602	I5		
5603	G5		
5604	I9		
5605	E9		
5606	A2		
5607	H9		

7 Progressive Scan




2700	B9	3719-A	H9
2701	B8	3719-B	H8
2702	B9	3719-C	H8
2703	B9	3719-D	H8
2704	B9	3720	F6
2705	B8	4700	A1
2706	B8	4701	B1
2707	G3	4702	E2
2708	B8	5700	B11
2709	B8	5701	A3
2710	B8	5702	B6
2711	B8	7700	B7
2712	B8	7701-A	E1
2713	B8	7701-B	C1
2714	F13	7702-A	E3
2715	B6	7702-D	C3
2716	B7	7703	A2
2717	B8		
2718	B8		
2719	B8		
2720	B11		
2721	E2		
2722	E3		
2723	B3		
2724	B2		
2725	B2		
2726	B3		
2727	B8		
3700	G11		
3701-A	F11		
3701-B	F11		
3701-C	F11		
3701-D	F11		
3702-A	G11		
3702-B	F11		
3702-C	F11		
3702-D	F11		
3703-A	F6		
3703-B	F6		
3703-C	F6		
3703-D	F6		
3704-A	F6		
3704-B	F6		
3704-C	F6		
3704-D	F6		
3705	G11		
3706	G11		
3707	H11		
3708	H11		
3709-A	E6		
3709-B	E6		
3709-C	F6		
3709-D	F6		
3710-A	G6		
3710-B	G6		
3710-C	E6		
3710-D	E6		
3711-A	G6		
3711-B	G6		
3711-C	G6		
3711-D	G6		
3712	F3		
3713-A	G6		
3713-B	G6		
3713-C	G6		
3713-D	G6		
3714	G11		
3715-A	H7		
3715-B	H7		
3715-C	H7		
3715-D	H7		
3716-A	H8		
3716-B	H8		
3716-C	H8		
3716-D	H7		
3717-A	H8		
3717-B	H8		
3717-C	H8		
3717-D	H8		
3718-A	H8		
3718-B	H8		
3718-C	H8		
3718-D	H8		


Digital Board: Progressive Scan

1800	D15	2806	B3	2812	B3	2818	C7	2824	C14	2832	E12	3800	G4	3806	B8	3812	D14	3818	E14	3824	F14	5801	B12	5807	E12	7802	B14
2800	B14	2807	B3	2813	B3	2819	C8	2826	D11	2833	E12	3801	C14	3807	C14	3813	D13	3819	E14	3825	F14	5802	B12	5808	E12	7803-A	D14
2802	B2	2808	B2	2814	C11	2820	C9	2827	D12	2834	F14	3802	B8	3808	C14	3814	D13	3820	E10	3826	F11	5803	D12	5809	F12	7803-B	E14
2803	B2	2809	B2	2815	C12	2821	C14	2828	D12	2835	F10	3803	C13	3809	D10	3815	E10	3821	E13	3827	F11	5804	D12	5810	B8		
2804	B2	2810	B3	2816	C12	2822	C9	2829	D14	2836	G10	3804	C13	3810	D6	3816	D14	3822	E13	3828	G4	5805	D12	7800	B1		
2805	B2	2811	B3	2817	F12	2823	C9	2831	E11	2837	B8	3805	C8	3811	D11	3817	E11	3823	F11	5800	B12	5806	E12	7801	C6		


8 Progressive Scan

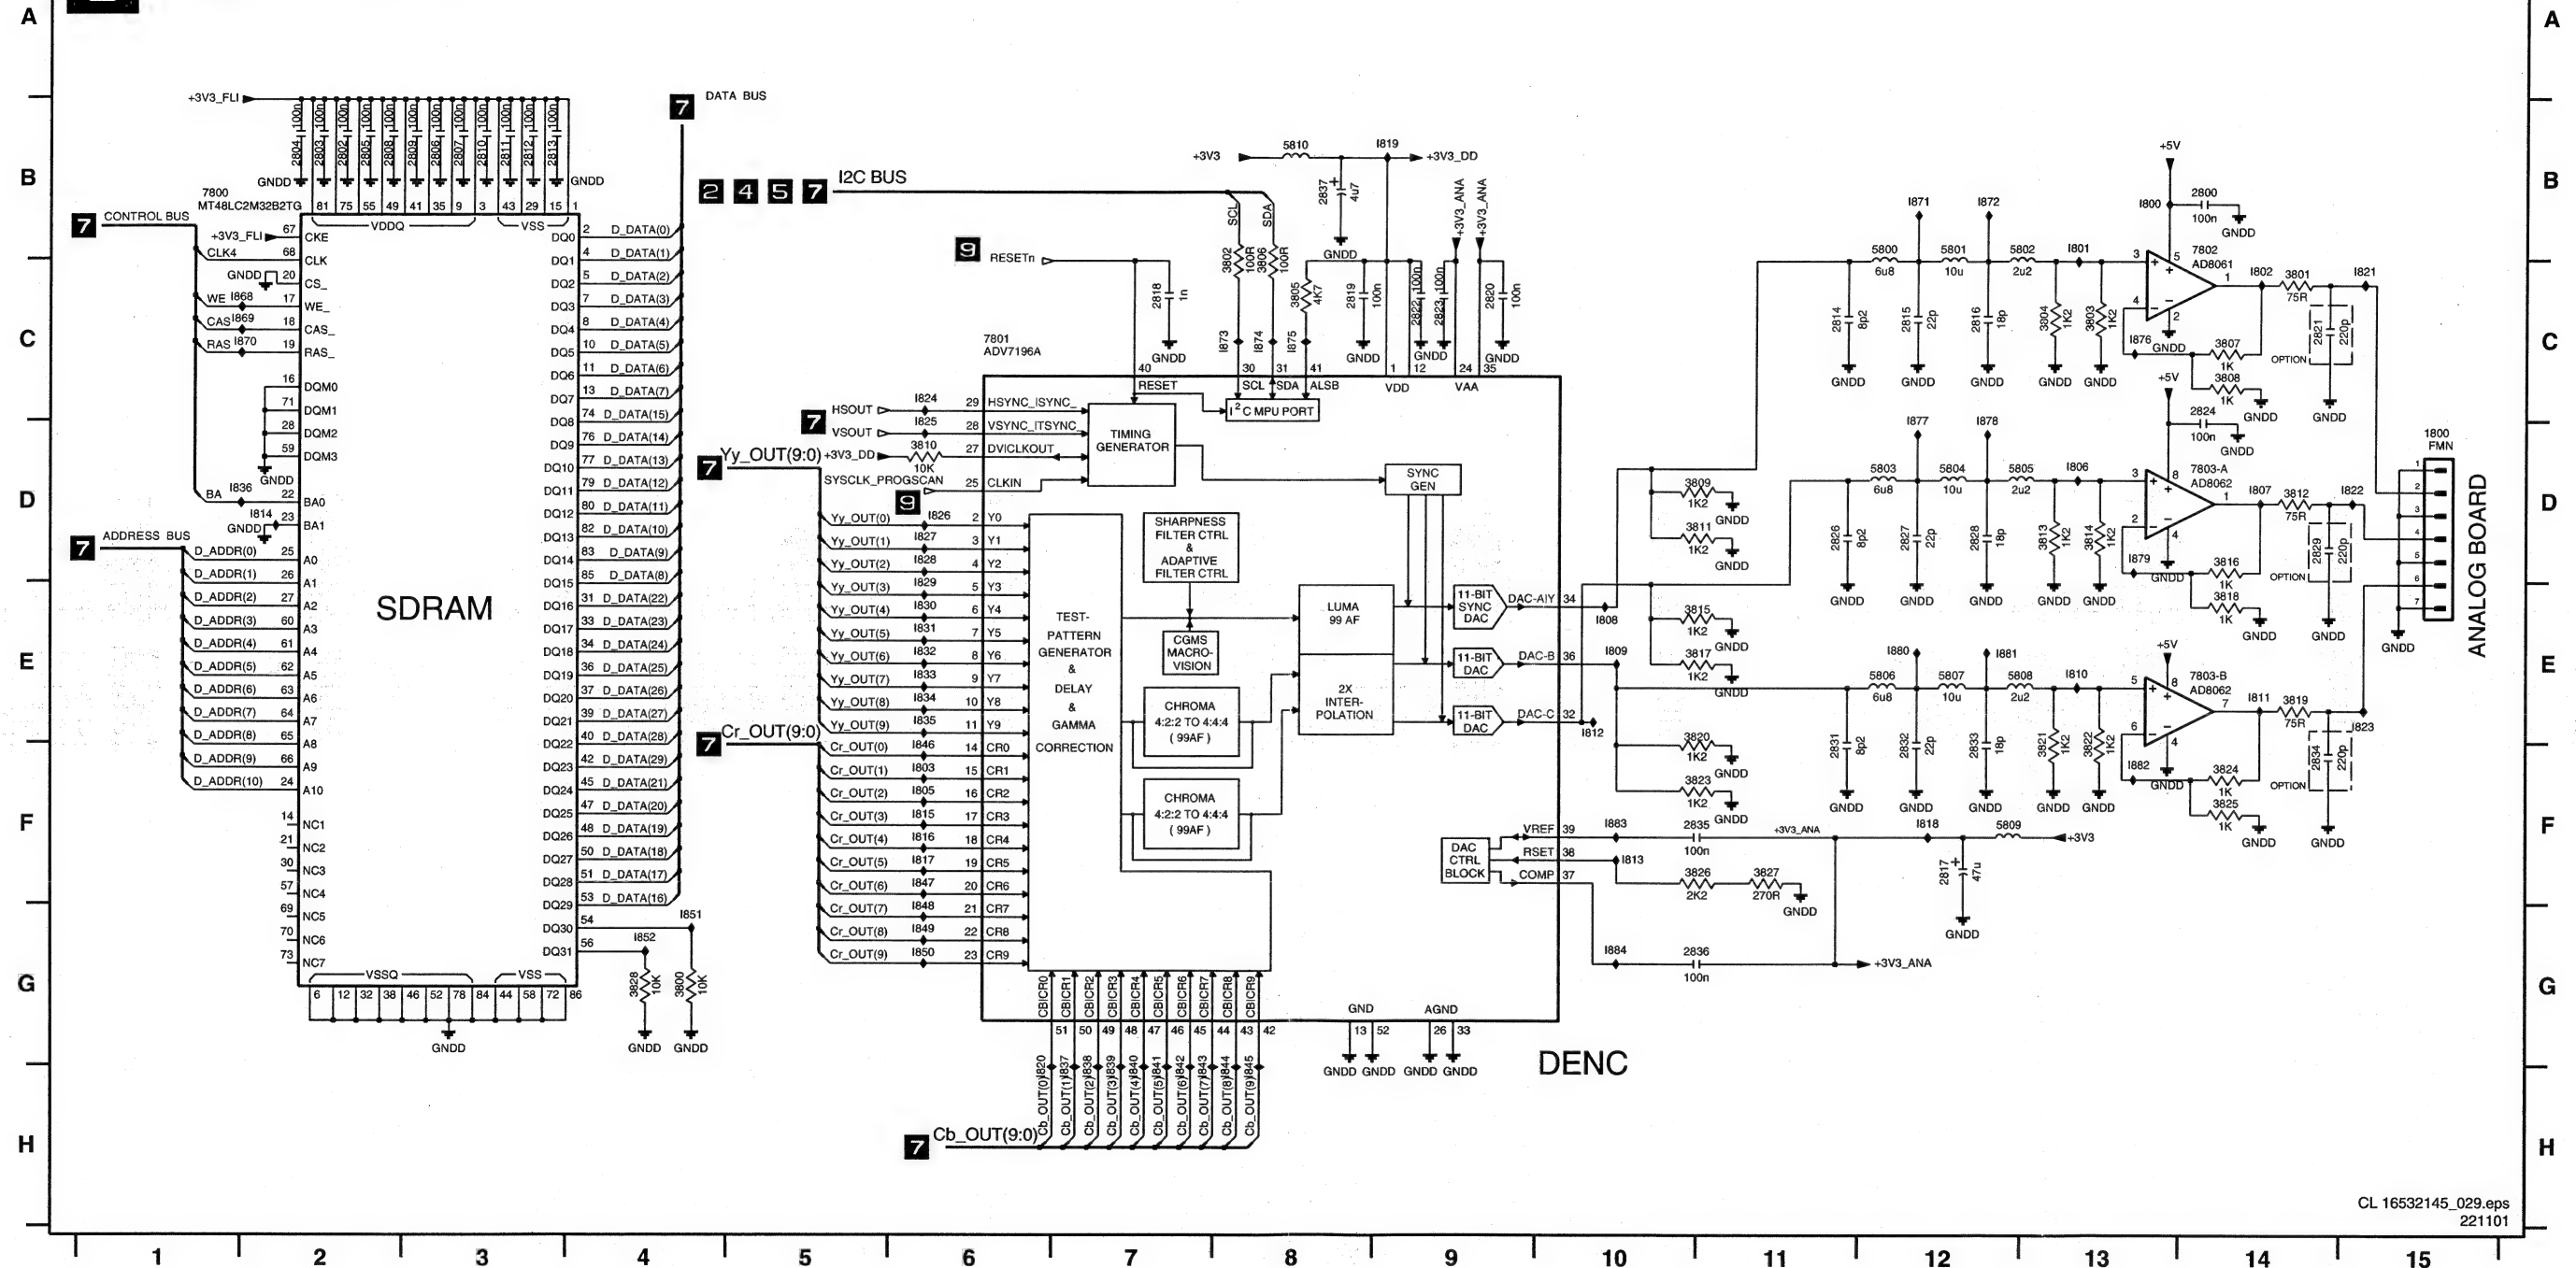


Digital Board: Power, Clock, and Reset Audio Clock

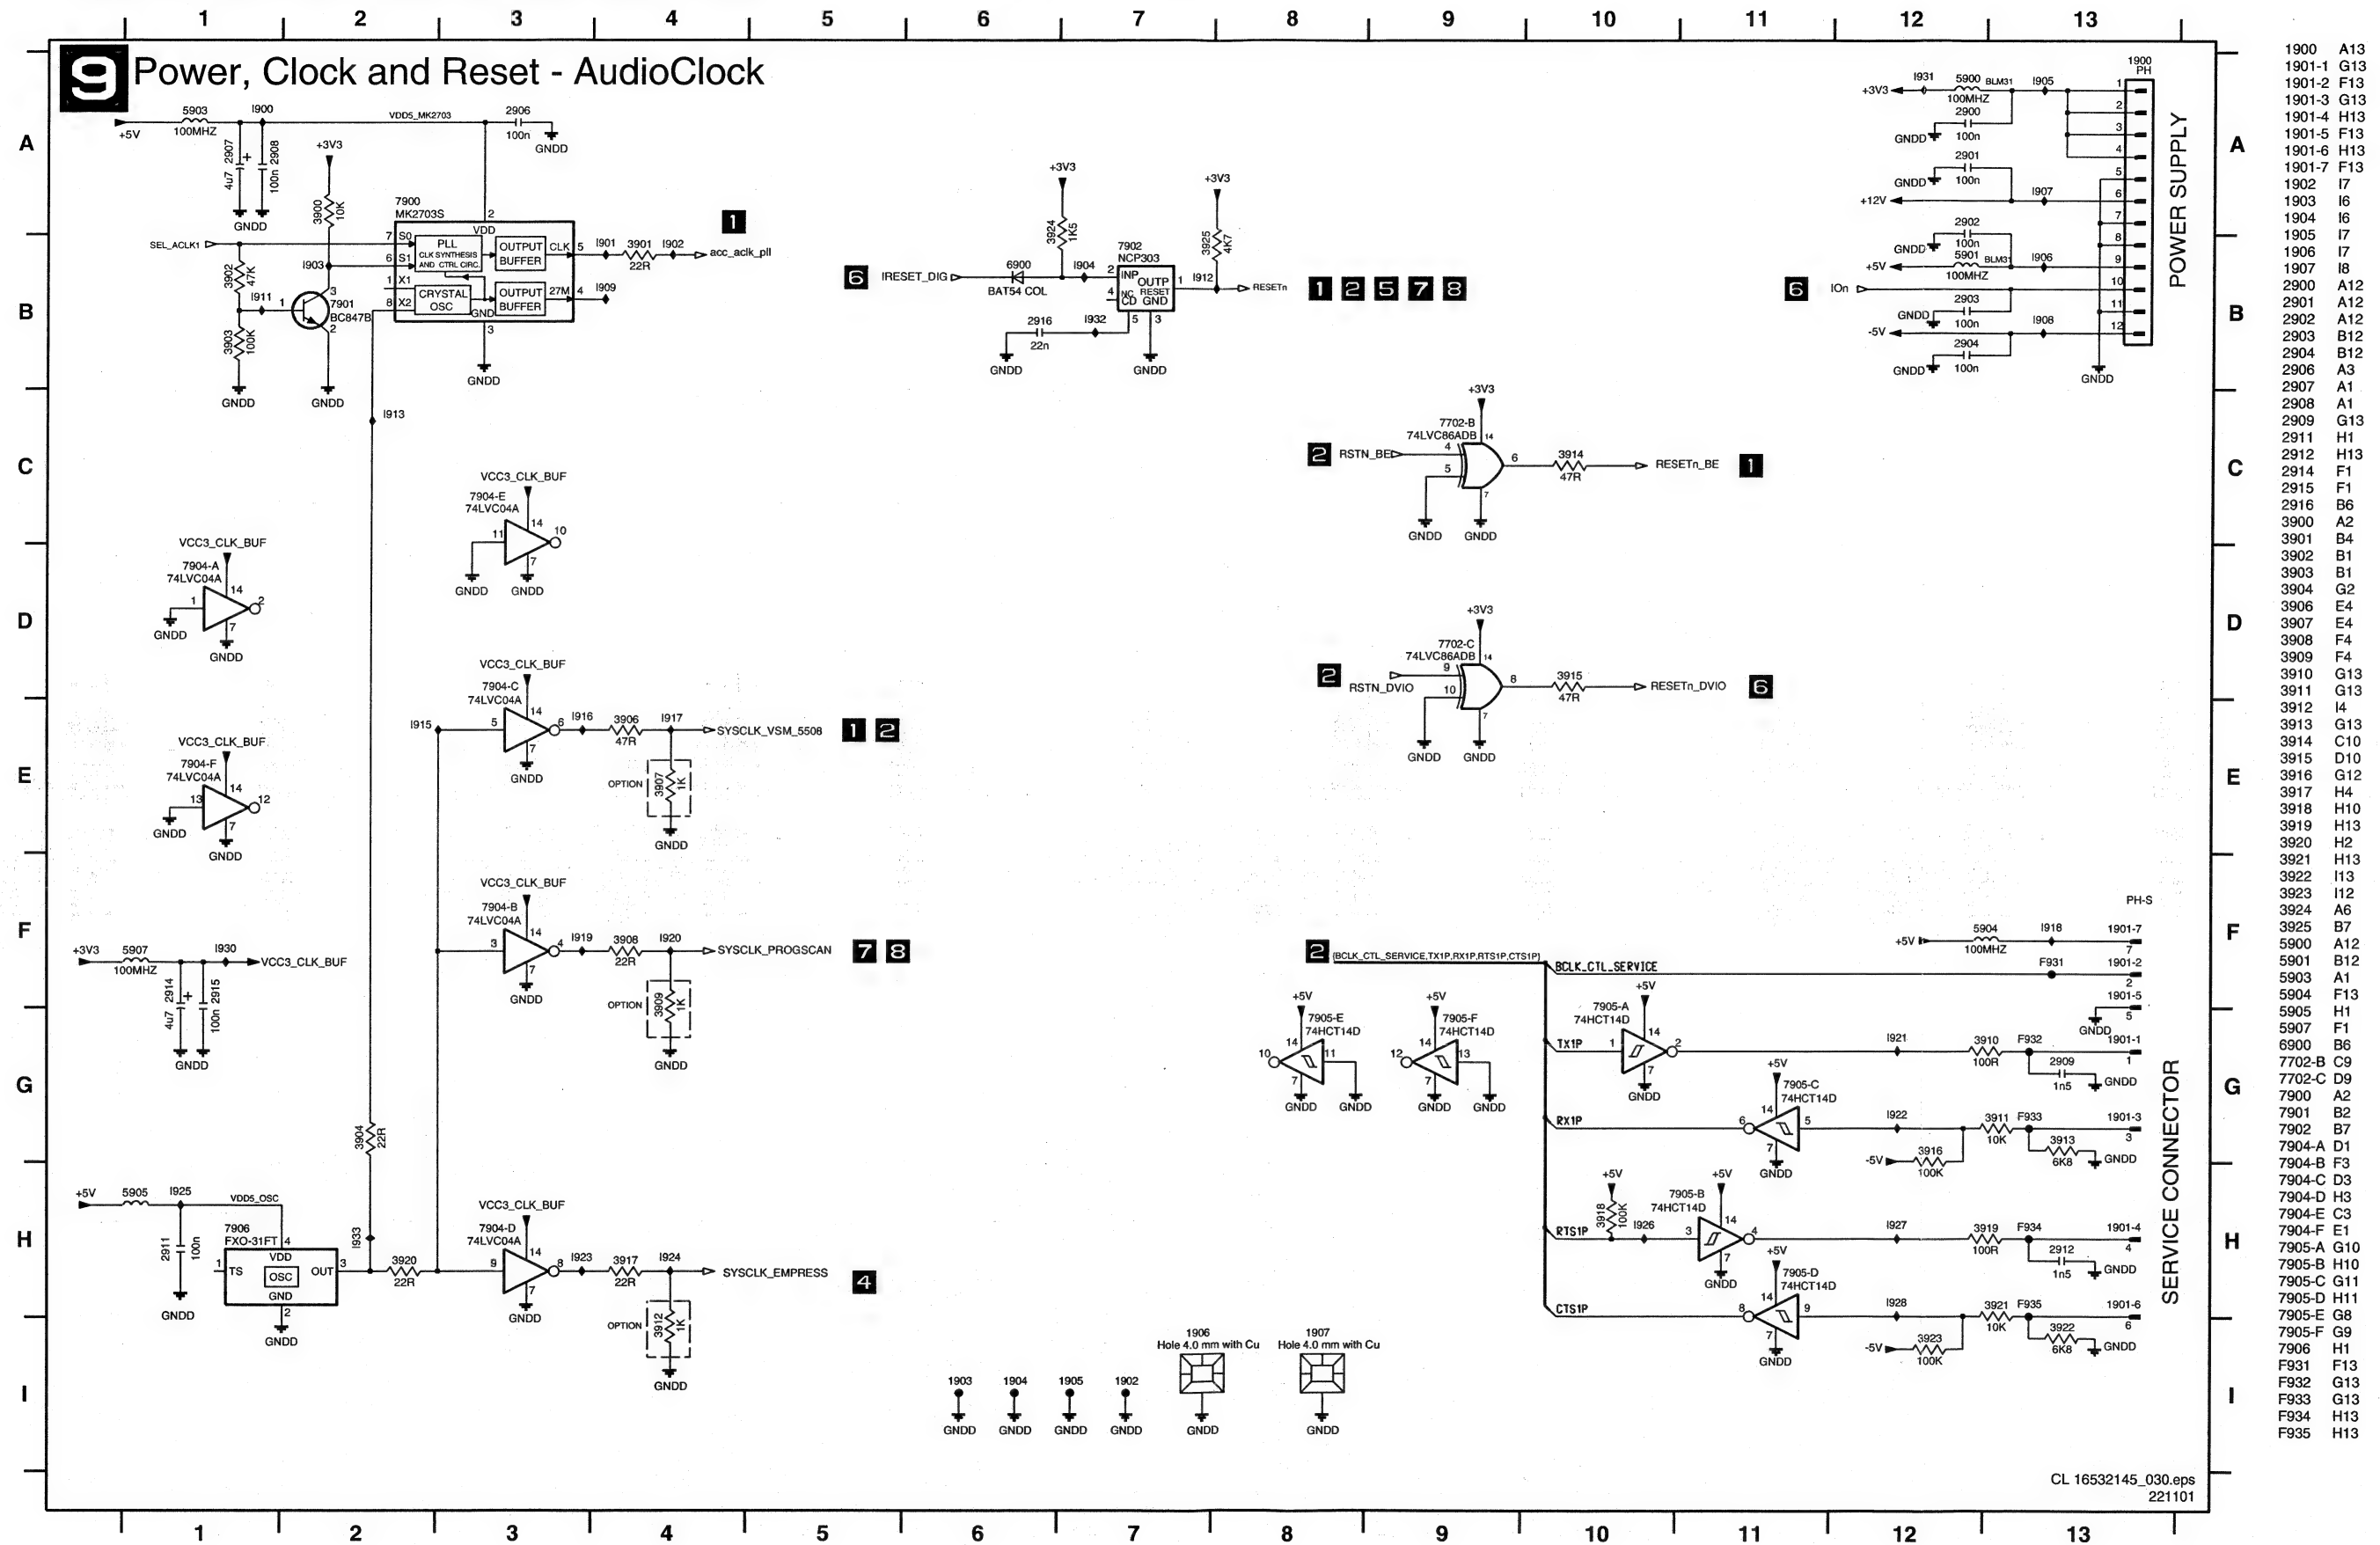


Layout Digital Board (Overview Top View)

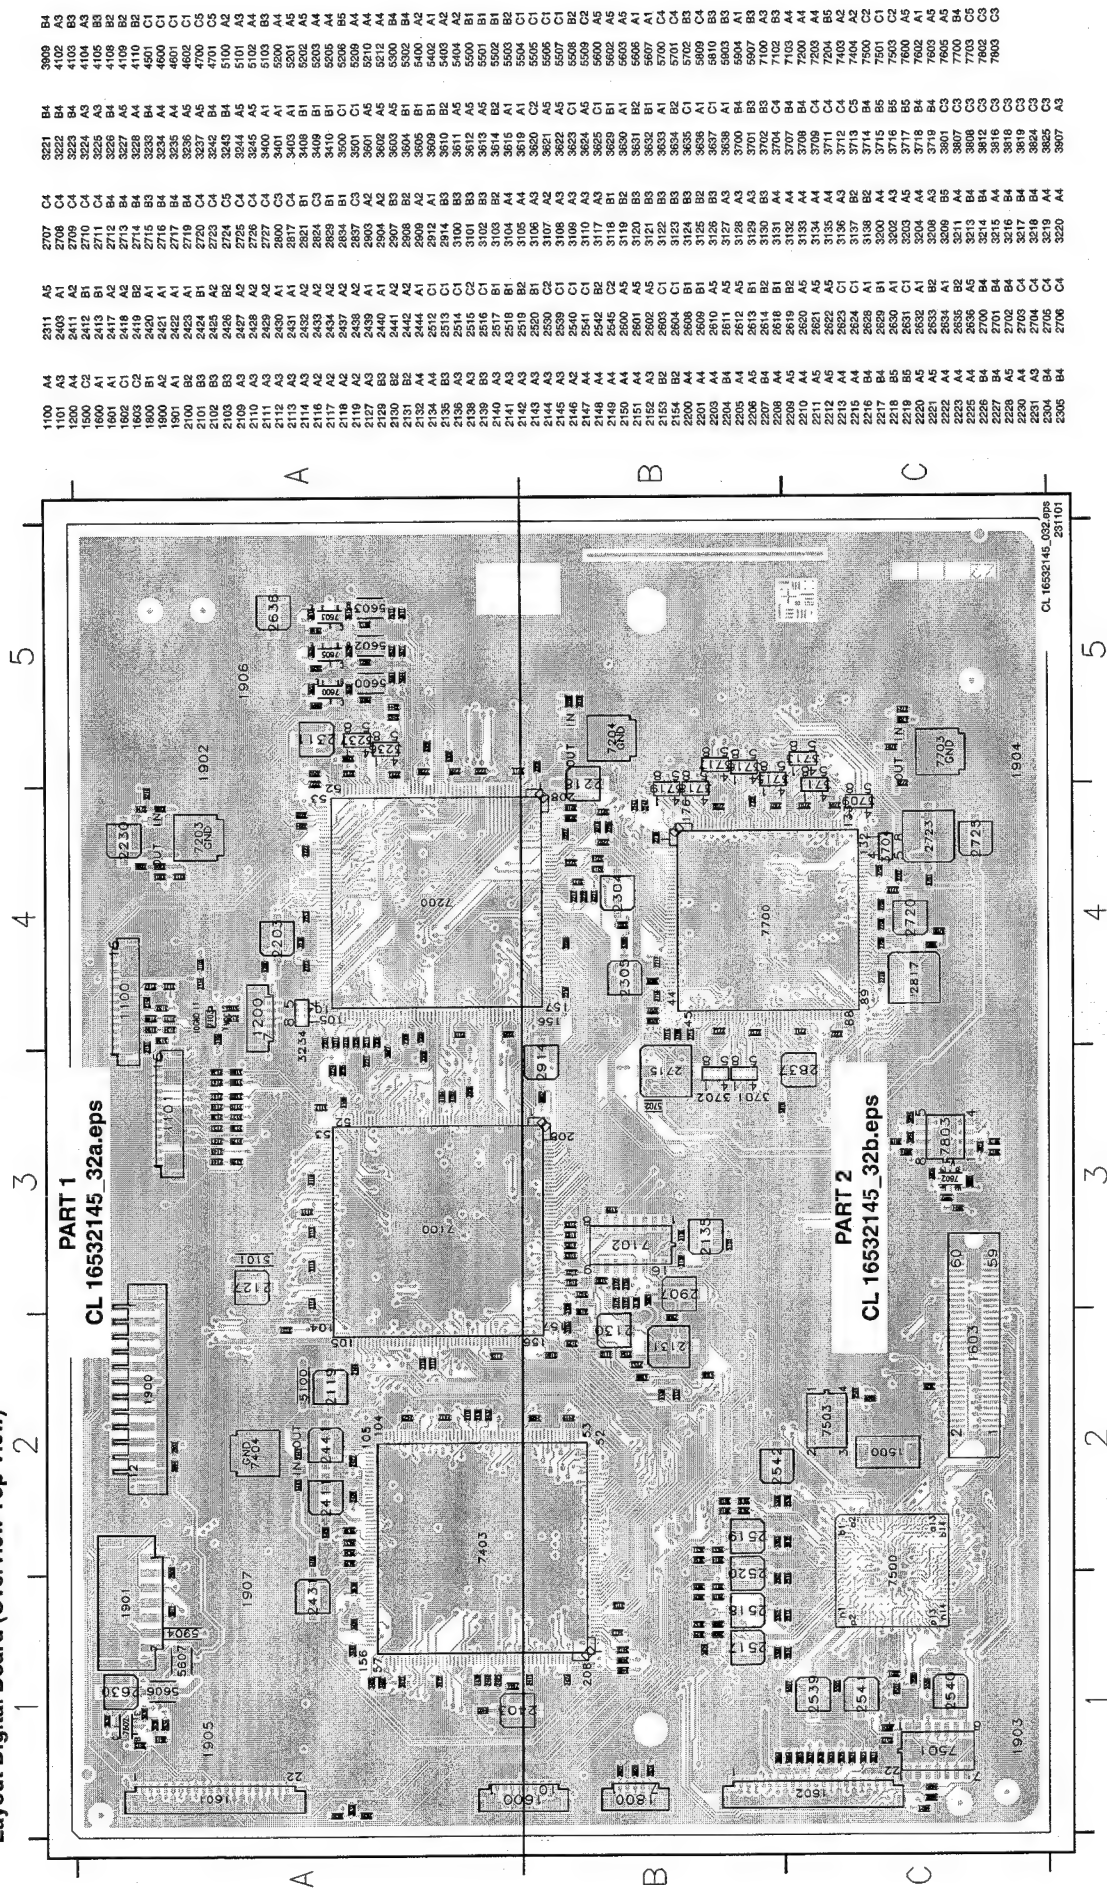

Layout Digital Board (Part 1 Top View)

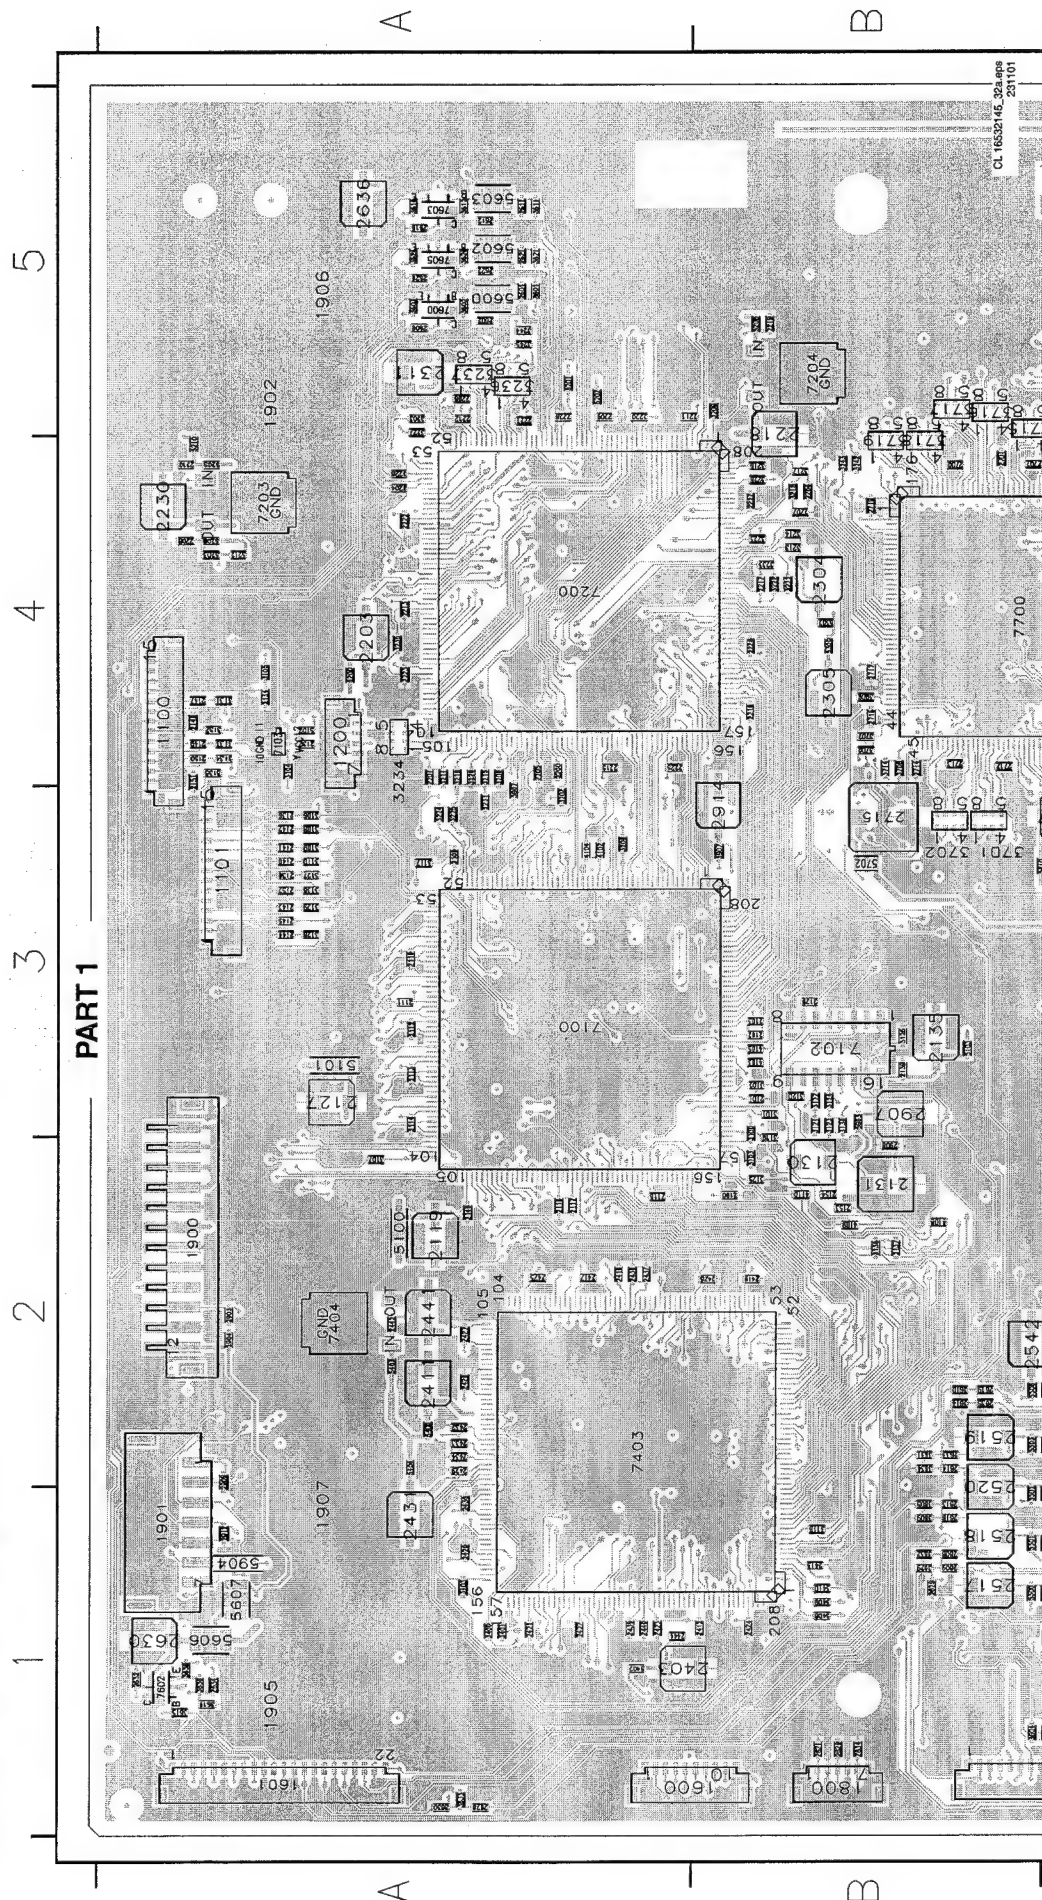


Layout Digital Board (Part 2 Top View)

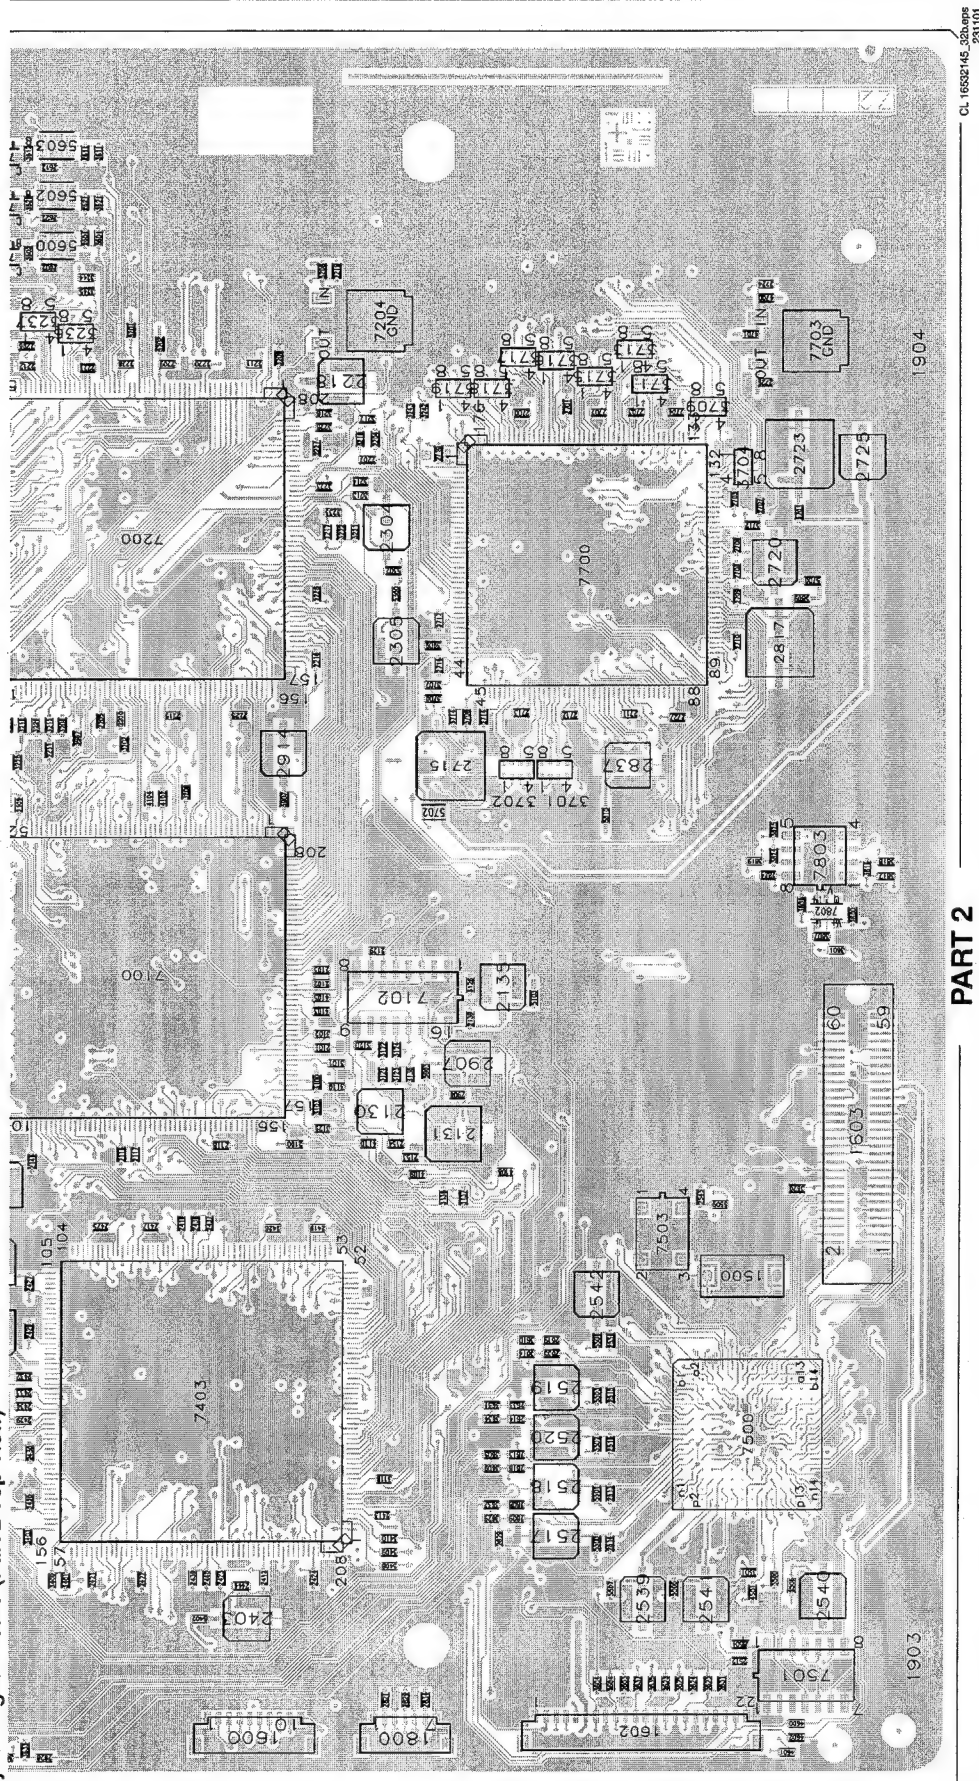

PART 2

CL 16532145_32b.eps
231101


Layout Digital Board (Overview Bottom View)

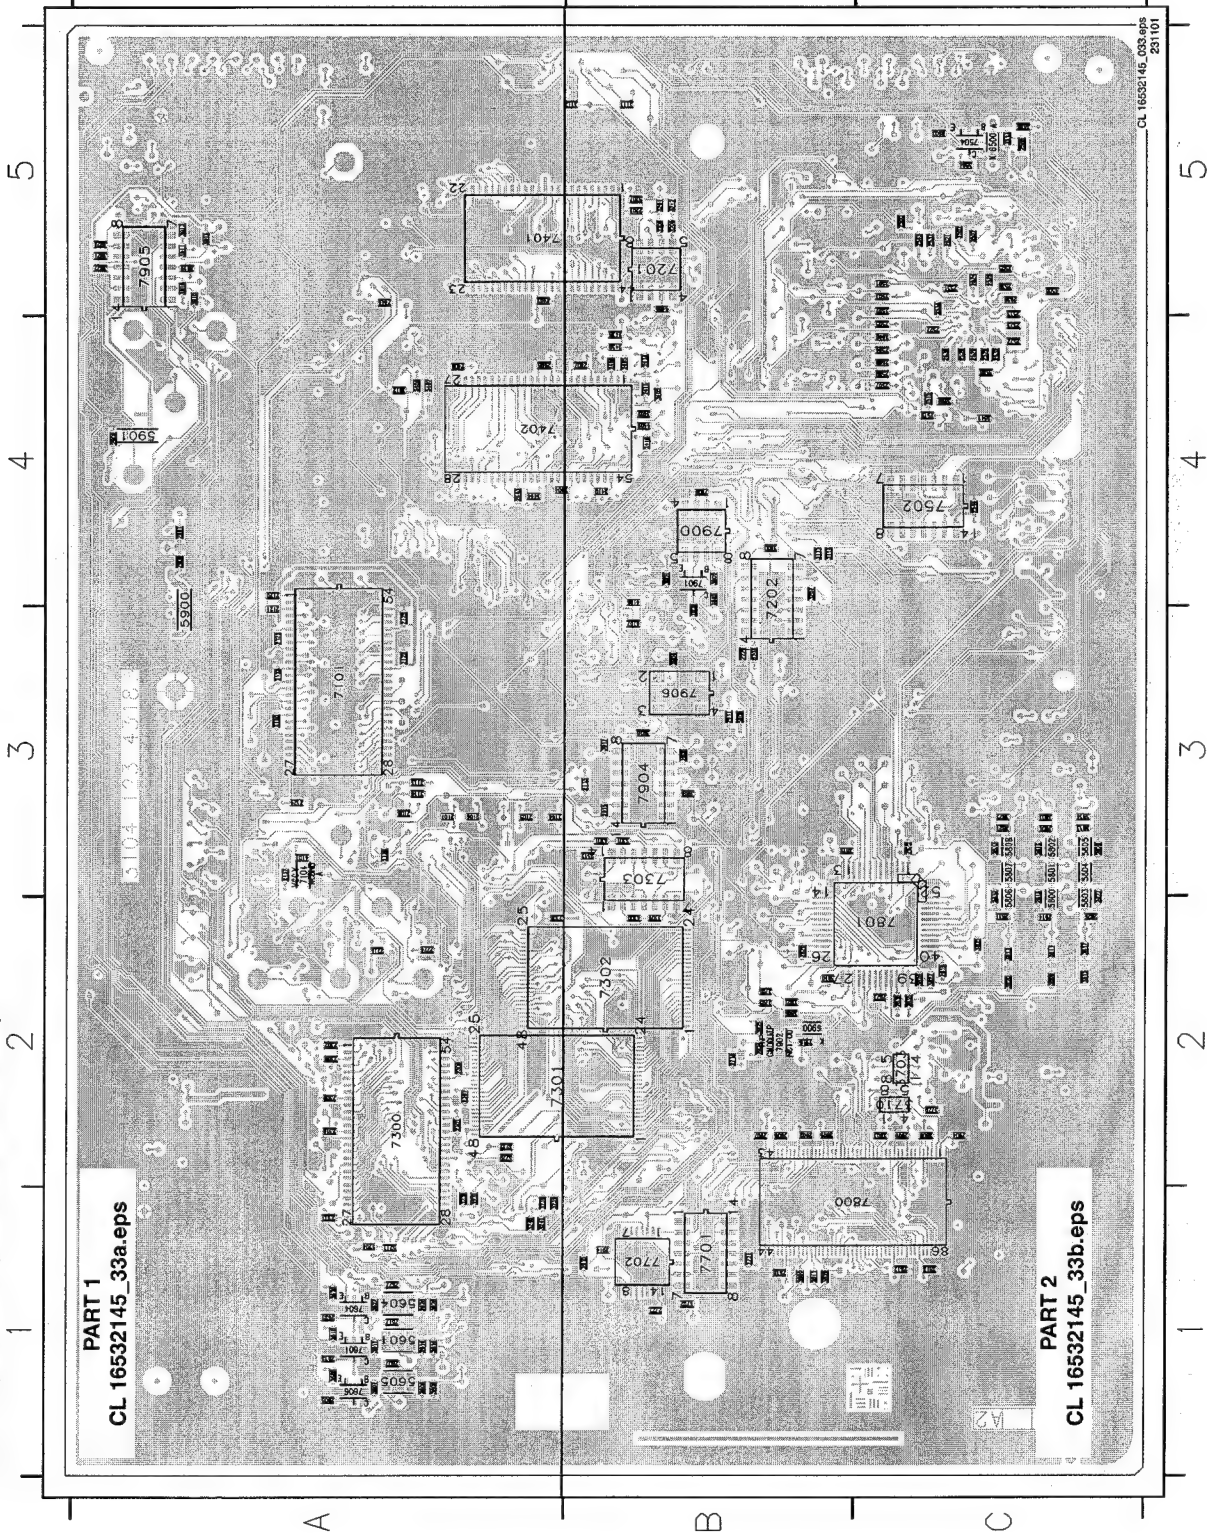

B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12	B13	B14	B15	B16	B17	B18	B19	B20	B21	B22	B23	B24	B25	B26	B27	B28	B29	B30	B31	B32	B33	B34	B35	B36	B37	B38	B39	B40	B41	B42	B43	B44	B45	B46	B47	B48	B49	B50	B51	B52	B53	B54	B55	B56	B57	B58	B59	B60	B61	B62	B63	B64	B65	B66	B67	B68	B69	B70	B71	B72	B73	B74	B75	B76	B77	B78	B79	B80	B81	B82	B83	B84	B85	B86	B87	B88	B89	B90	B91	B92	B93	B94	B95	B96	B97	B98	B99	B100	B101	B102	B103	B104	B105	B106	B107	B108	B109	B110	B111	B112	B113	B114	B115	B116	B117	B118	B119	B120	B121	B122	B123	B124	B125	B126	B127	B128	B129	B130	B131	B132	B133	B134	B135	B136	B137	B138	B139	B140	B141	B142	B143	B144	B145	B146	B147	B148	B149	B150	B151	B152	B153	B154	B155	B156	B157	B158	B159	B160	B161	B162	B163	B164	B165	B166	B167	B168	B169	B170	B171	B172	B173	B174	B175	B176	B177	B178	B179	B180	B181	B182	B183	B184	B185	B186	B187	B188	B189	B190	B191	B192	B193	B194	B195	B196	B197	B198	B199	B200	B201	B202	B203	B204	B205	B206	B207	B208	B209	B210	B211	B212	B213	B214	B215	B216	B217	B218	B219	B220	B221	B222	B223	B224	B225	B226	B227	B228	B229	B230	B231	B232	B233	B234	B235	B236	B237	B238	B239	B240	B241	B242	B243	B244	B245	B246	B247	B248	B249	B250	B251	B252	B253	B254	B255	B256	B257	B258	B259	B260	B261	B262	B263	B264	B265	B266	B267	B268	B269	B270	B271	B272	B273	B274	B275	B276	B277	B278	B279	B280	B281	B282	B283	B284	B285	B286	B287	B288	B289	B290	B291	B292	B293	B294	B295	B296	B297	B298	B299	B300	B301	B302	B303	B304	B305	B306	B307	B308	B309	B310	B311	B312	B313	B314	B315	B316	B317	B318	B319	B320	B321	B322	B323	B324	B325	B326	B327	B328	B329	B330	B331	B332	B333	B334	B335	B336	B337	B338	B339	B340	B341	B342	B343	B344	B345	B346	B347	B348	B349	B350	B351	B352	B353	B354	B355	B356	B357	B358	B359	B360	B361	B362	B363	B364	B365	B366	B367	B368	B369	B370	B371	B372	B373	B374	B375	B376	B377	B378	B379	B380	B381	B382	B383	B384	B385	B386	B387	B388	B389	B390	B391	B392	B393	B394	B395	B396	B397	B398	B399	B400	B401	B402	B403	B404	B405	B406	B407	B408	B409	B410	B411	B412	B413	B414	B415	B416	B417	B418	B419	B420	B421	B422	B423	B424	B425	B426	B427	B428	B429	B430	B431	B432	B433	B434	B435	B436	B437	B438	B439	B440	B441	B442	B443	B444	B445	B446	B447	B448	B449	B450	B451	B452	B453	B454	B455	B456	B457	B458	B459	B460	B461	B462	B463	B464	B465	B466	B467	B468	B469	B470	B471	B472	B473	B474	B475	B476	B477	B478	B479	B480	B481	B482	B483	B484	B485	B486	B487	B488	B489	B490	B491	B492	B493	B494	B495	B496	B497	B498	B499	B500	B501	B502	B503	B504	B505	B506	B507	B508	B509	B510	B511	B512	B513	B514	B515	B516	B517	B518	B519	B520	B521	B522	B523	B524	B525	B526	B527	B528	B529	B530	B531	B532	B533	B534	B535	B536	B537	B538	B539	B540	B541	B542	B543	B544	B545	B546	B547	B548	B549	B550	B551	B552	B553	B554	B555	B556	B557	B558	B559	B560	B561	B562	B563	B564	B565	B566	B567	B568	B569	B570	B571	B572	B573	B574	B575	B576	B577	B578	B579	B580	B581	B582	B583	B584	B585	B586	B587	B588	B589	B590	B591	B592	B593	B594	B595	B596	B597	B598	B599	B600	B601	B602	B603	B604	B605	B606	B607	B608	B609	B610	B611	B612	B613	B614	B615	B616	B617	B618	B619	B620	B621	B622	B623	B624	B625	B626	B627	B628	B629	B630	B631	B632	B633	B634	B635	B636	B637	B638	B639	B640	B641	B642	B643	B644	B645	B646	B647	B648	B649	B650	B651	B652	B653	B654	B655	B656	B657	B658	B659	B660	B661	B662	B663	B664	B665	B666	B667	B668	B669	B670	B671	B672	B673	B674	B675	B676	B677	B678	B679	B680	B681	B682	B683	B684	B685	B686	B687	B688	B689	B690	B691	B692	B693	B694	B695	B696	B697	B698	B699	B700	B701	B702	B703	B704	B705	B706	B707	B708	B709	B710	B711	B712	B713	B714	B715	B716	B717	B718	B719	B720	B721	B722	B723	B724	B725	B726	B727	B728	B729	B730	B731	B732	B733	B734	B735	B736	B737	B738	B739	B740	B741	B742	B743	B744	B745	B746	B747	B748	B749	B750	B751	B752	B753	B754	B755	B756	B757	B758	B759	B760	B761	B762	B763	B764	B765	B766	B767	B768	B769	B770	B771	B772	B773	B774	B775	B776	B777	B778	B779	B780	B781	B782	B783	B784	B785	B786	B787	B788	B789	B790	B791	B792	B793	B794	B795	B796	B797	B798	B799	B800	B801	B802	B803	B804	B805	B806	B807	B808	B809	B810	B811	B812	B813	B814	B815	B816	B817	B818	B819	B820	B821	B822	B823	B824	B825	B826	B827	B828	B829	B830	B831	B832	B833	B834	B835	B836	B837	B838	B839	B840	B841	B842	B843	B844	B845	B846	B847	B848	B849	B850	B851	B852	B853	B854	B855	B856	B857	B858	B859	B860	B861	B862	B863	B864	B865	B866	B867	B868	B869	B870	B871	B872	B873	B874	B875	B876	B877	B878	B879	B880	B881	B882	B883	B884	B885	B886	B887	B888	B889	B890	B891	B892	B893	B894	B895	B896	B897	B898	B899	B900	B901	B902	B903	B904	B905	B906	B907	B908	B909	B910	B911	B912	B913	B914	B915	B916	B917	B918	B919	B920	B921	B922	B923	B924	B925	B926	B927	B928	B929	B930	B931	B932	B933	B934	B935	B936	B937	B938	B939	B940	B941	B942	B943	B944	B945	B946	B947	B948	B949	B950	B951	B952	B953	B954	B955	B956	B957	B958	B959	B960	B961	B962	B963	B964	B965	B966	B967	B968	B969	B970	B971	B972	B973	B974	B975	B976	B977	B978	B979	B980	B981	B982	B983	B984	B985	B986	B987	B988	B989	B990	B991	B992	B993	B994	B995	B996	B997	B998	B999	1000
----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

Layout Digital Board (Part 1 Bottom View)

1 2 3 4 5

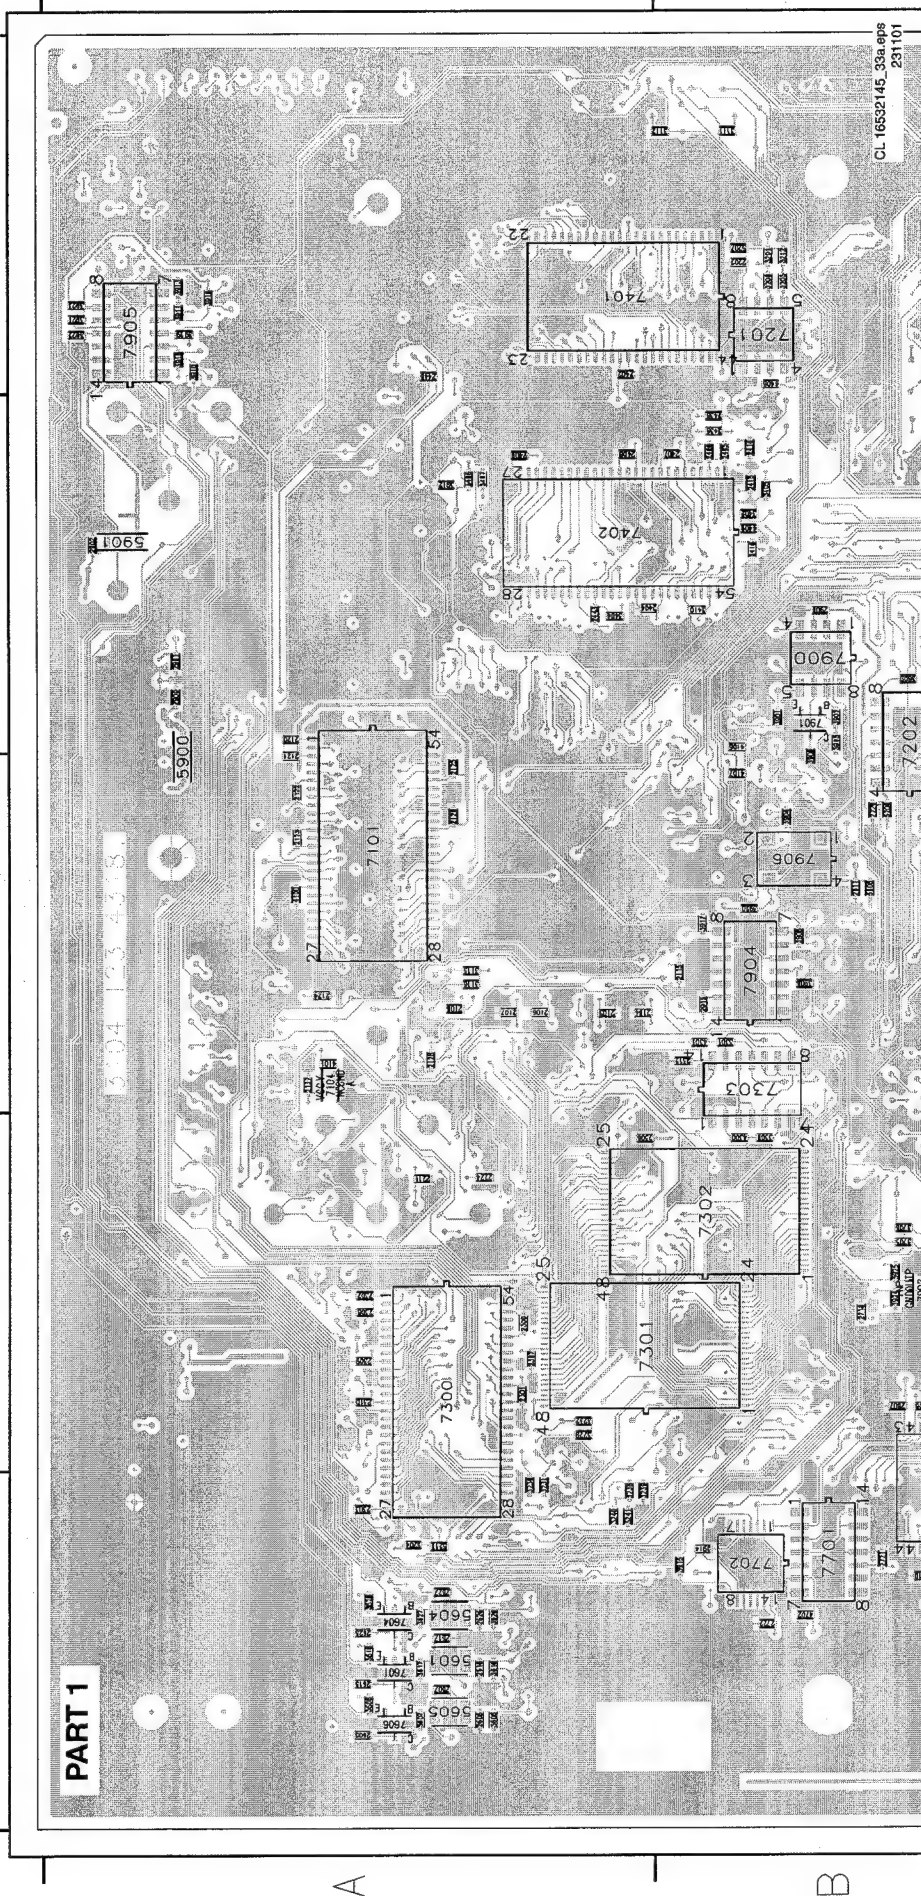

PART 2



5


4

3

2

→

Layout Digital Board (Testlands Bottom View)

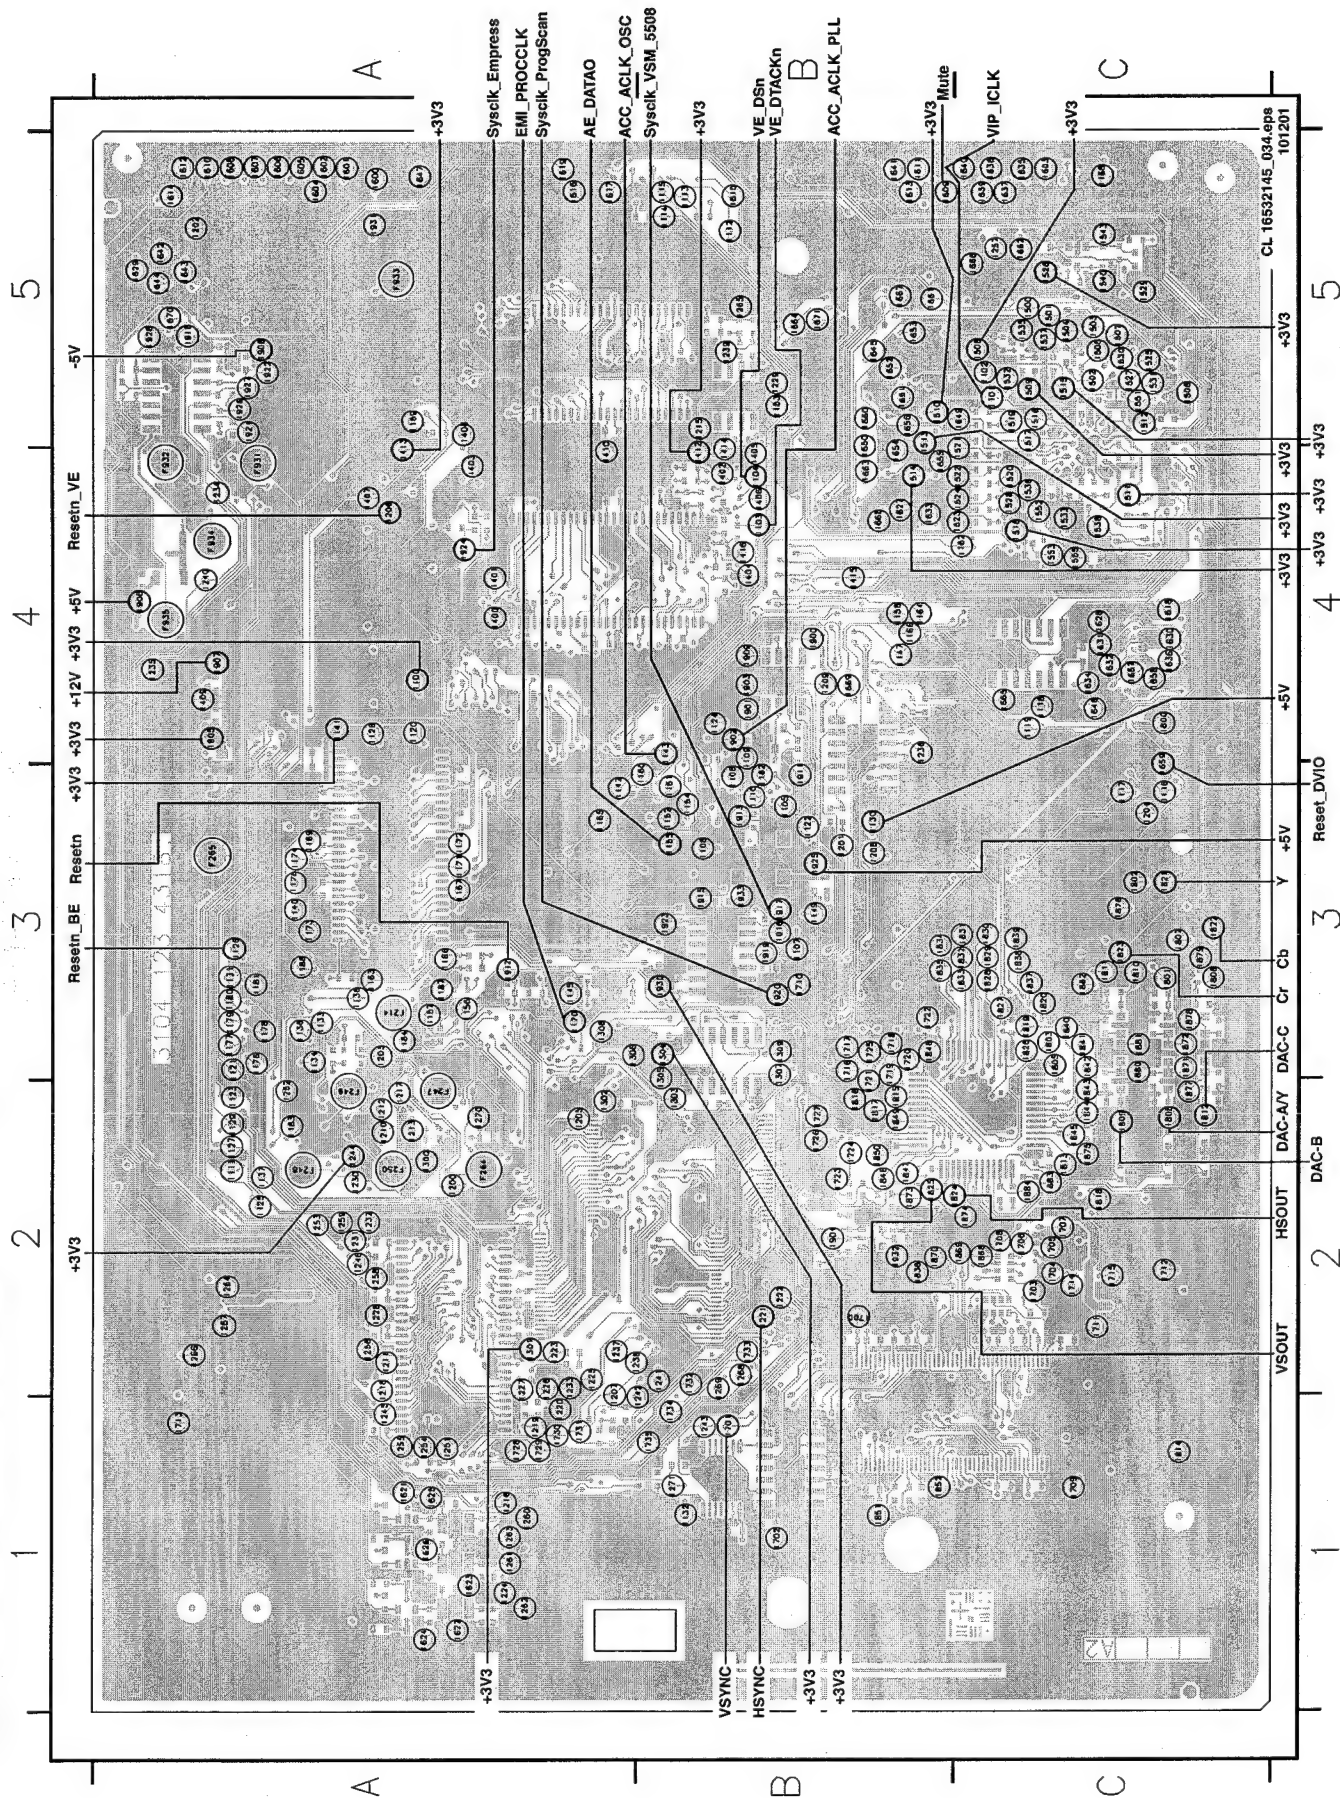

Layout Digital Board (Mapping Testlands)

F214 A3	I175 A3	I300 A2	I610 A5	I720 B3	I880 C3
F247 A2	I176 A3	I301 A2	I611 B5	I721 B2	I881 C3
F248 A2	I177 A3	I302 A2	I612 A5	I722 B3	I882 C3
F249 A2	I178 A3	I303 B2	I613 B5	I723 B2	I883 C2
F250 A2	I179 A3	I304 B3	I614 A5	I724 B2	I884 C2
F264 A2	I180 A3	I305 B3	I615 B5	I725 B3	I900 B4
F265 A3	I181 A3	I306 A3	I616 A5	I726 B2	I901 B4
F931 A4	I182 B3	I307 B3	I617 A5	I727 B2	I902 B4
F932 A4	I183 A2	I308 A3	I618 C4	I728 A1	I903 B4
F933 A5	I184 A3	I309 B3	I619 A5	I729 A1	I904 B2
F934 A4	I186 A3	I400 A4	I621 A1	I730 A1	I905 A4
F935 A4	I187 A3	I401 A4	I622 A1	I731 A1	I905 A4
I100 A4	I188 A3	I402 B4	I623 A1	I732 B2	I907 A4
I101 C5	I200 A2	I403 A4	I624 A1	I733 B2	I908 A5
I102 C5	I201 B3	I404 B4	I625 A1	I734 B1	I909 B4
I103 B4	I202 A5	I405 B4	I626 A1	I735 B1	I911 B3
I104 B4	I203 A3	I406 B4	I627 B4	I800 C4	I912 A3
I105 B3	I204 C3	I407 A4	I628 C4	I801 C3	I913 B3
I106 B3	I205 A2	I408 A5	I629 A5	I802 C3	I915 B3
I107 B3	I206 A4	I409 A4	I630 C4	I803 C3	I916 B3
I108 B3	I207 A2	I410 A4	I631 C4	I805 C3	I917 B3
I109 B4	I208 B3	I412 B4	I632 C4	I806 C3	I918 A5
I110 B3	I209 B4	I413 A4	I633 B4	I807 C3	I919 B3
I111 A2	I210 A2	I414 B4	I634 C4	I808 C2	I920 B3
I112 B5	I211 A2	I415 B4	I635 C5	I809 C2	I921 A5
I113 B5	I212 A2	I416 B4	I636 C4	I810 C3	I922 A5
I114 B5	I213 A2	I500 C5	I637 C5	I811 C3	I923 B3
I115 B5	I215 B5	I501 C5	I638 C5	I812 C2	I924 A4
I116 C3	I216 A1	I502 C5	I639 C5	I813 C2	I925 B3
I117 C3	I217 A2	I503 C5	I640 C5	I814 C1	I926 A5
I118 C4	I218 A2	I504 C5	I641 B5	I815 B2	I927 A5
I119 C4	I219 A1	I505 C5	I642 A5	I816 B2	I928 A5
I120 A4	I220 A1	I506 C5	I643 A5	I817 B2	I930 B3
I121 A3	I221 B2	I507 C5	I644 A5	I818 C2	I931 A5
I122 B3	I222 B2	I508 C5	I645 B5	I819 C3	I932 B2
I123 A2	I223 A2	I509 C5	I646 C4	I820 C3	I933 B3
I124 B4	I224 A1	I510 B5	I647 A5	I821 C3	
I125 A2	I225 A2	I511 C4	I649 C5	I822 C3	
I126 A3	I226 A2	I512 C5	I650 B4	I823 C3	
I127 A2	I227 A2	I513 B5	I651 B5	I824 B2	
I128 A4	I228 A2	I514 B4	I652 B5	I825 B2	
I129 A2	I229 B5	I515 C5	I653 B5	I826 C3	
I130 B3	I230 A2	I516 C5	I654 B4	I827 C3	
I131 A3	I231 A2	I517 C5	I655 B4	I828 C3	
I132 B1	I232 A2	I518 C4	I656 B5	I829 C3	
I133 A3	I233 A2	I519 C5	I657 C4	I830 C3	
I134 A3	I234 A4	I520 C4	I658 C4	I831 C3	
I136 A3	I235 A4	I521 C4	I659 C5	I832 C3	
I137 A2	I236 B4	I523 C4	I660 B5	I833 C3	
I138 A3	I237 A2	I524 C4	I661 B5	I834 B3	
I141 A4	I238 A5	I525 C5	I662 C5	I835 B2	
I142 A3	I239 B5	I526 C5	I663 B4	I836 B2	
I143 B4	I241 B2	I527 C5	I664 B5	I837 C3	
I145 A3	I242 B1	I528 C4	I665 C5	I838 C3	
I147 B4	I243 B1	I529 C5	I666 B4	I839 C3	
I149 B3	I244 A2	I530 C5	I667 B5	I840 C3	
I152 B3	I245 A1	I531 C5	I668 B4	I841 C3	
I154 B3	I246 A2	I532 C5	I669 B4	I842 C3	
I155 B3	I251 A1	I533 C4	I670 A5	I843 C2	
I156 A3	I252 A2	I535 C5	I671 B5	I844 C2	
I157 A3	I253 A2	I536 C4	I700 B2	I845 C2	
I158 B4	I254 A1	I537 C5	I701 B1	I846 B3	
I159 A5	I255 A1	I538 C4	I702 B1	I847 B2	
I160 B3	I256 A2	I540 C5	I703 C2	I848 B2	
I161 B3	I257 C5	I543 C5	I704 C2	I849 B2	
I162 C4	I258 A2	I551 C5	I705 C2	I850 B2	
I163 A3	I259 A2	I552 C4	I706 C2	I851 B1	
I164 B4	I260 A1	I553 C4	I707 C2	I852 B1	
I165 A3	I261 A1	I555 C4	I708 C2	I866 C2	
I166 B4	I263 A1	I600 A5	I709 C1	I869 C2	
I167 A3	I263 A1	I601 A5	I710 B3	I870 B2	
I168 C5	I264 A2	I602 A5	I711 C2	I871 C3	
I169 A3	I265 B5	I603 C5	I712 C2	I872 C3	
I170 A3	I266 A2	I604 A5	I713 A1	I873 B2	
I171 A3	I267 A2	I605 A5	I714 C2	I874 C2	
I172 A3	I268 B2	I606 A5	I715 C2	I875 C2	
I173 A3	I269 B2	I607 A5	I716 B3	I876 C3	
I174 A3	I270 A2	I608 A5	I717 B3	I877 C2	
	I271 B1	I609 B5	I718 B3	I878 C3	
			I719 B3	I879 C3	

CL 16532145-34m.aps
101201

Personal Notes:


8. Alignments

8.1 Alignment Instructions Analogue Board

Test equipment:

1. Oscilloscope
2. Frequency counter
3. Frequency counter
4. Signal generator
5. Test pattern generator

How to read the adjustment procedures:

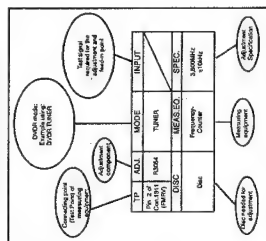

Front End (FV)

Service leads after replacement of IC 7710, coil L2718 and L2711:

1 AFC Adjustment:

Purpose: Correct adjustment of demodulator AFC - circuit.
Symptom: If incorrectly set.

Procedure: Connect the test equipment as shown in the diagram.

PAL - AFC adjustment (L2711):

TP	ADJ	MODE	INPUT
L2710	ADJ1	MODE	INPUT
Pt17	ADJ1	MODE	INPUT
Pt18	ADJ1	MODE	INPUT
Pt19	ADJ1	MODE	INPUT
Pt20	ADJ1	MODE	INPUT
Pt21	ADJ1	MODE	INPUT
Pt22	ADJ1	MODE	INPUT
Pt23	ADJ1	MODE	INPUT
Pt24	ADJ1	MODE	INPUT
Pt25	ADJ1	MODE	INPUT
Pt26	ADJ1	MODE	INPUT
Pt27	ADJ1	MODE	INPUT
Pt28	ADJ1	MODE	INPUT
Pt29	ADJ1	MODE	INPUT
Pt30	ADJ1	MODE	INPUT
Pt31	ADJ1	MODE	INPUT
Pt32	ADJ1	MODE	INPUT
Pt33	ADJ1	MODE	INPUT
Pt34	ADJ1	MODE	INPUT
Pt35	ADJ1	MODE	INPUT
Pt36	ADJ1	MODE	INPUT
Pt37	ADJ1	MODE	INPUT
Pt38	ADJ1	MODE	INPUT
Pt39	ADJ1	MODE	INPUT
Pt40	ADJ1	MODE	INPUT
Pt41	ADJ1	MODE	INPUT
Pt42	ADJ1	MODE	INPUT
Pt43	ADJ1	MODE	INPUT
Pt44	ADJ1	MODE	INPUT
Pt45	ADJ1	MODE	INPUT
Pt46	ADJ1	MODE	INPUT
Pt47	ADJ1	MODE	INPUT
Pt48	ADJ1	MODE	INPUT
Pt49	ADJ1	MODE	INPUT
Pt50	ADJ1	MODE	INPUT
Pt51	ADJ1	MODE	INPUT
Pt52	ADJ1	MODE	INPUT
Pt53	ADJ1	MODE	INPUT
Pt54	ADJ1	MODE	INPUT
Pt55	ADJ1	MODE	INPUT
Pt56	ADJ1	MODE	INPUT
Pt57	ADJ1	MODE	INPUT
Pt58	ADJ1	MODE	INPUT
Pt59	ADJ1	MODE	INPUT
Pt60	ADJ1	MODE	INPUT
Pt61	ADJ1	MODE	INPUT
Pt62	ADJ1	MODE	INPUT
Pt63	ADJ1	MODE	INPUT
Pt64	ADJ1	MODE	INPUT
Pt65	ADJ1	MODE	INPUT
Pt66	ADJ1	MODE	INPUT
Pt67	ADJ1	MODE	INPUT
Pt68	ADJ1	MODE	INPUT
Pt69	ADJ1	MODE	INPUT
Pt70	ADJ1	MODE	INPUT
Pt71	ADJ1	MODE	INPUT
Pt72	ADJ1	MODE	INPUT
Pt73	ADJ1	MODE	INPUT
Pt74	ADJ1	MODE	INPUT
Pt75	ADJ1	MODE	INPUT
Pt76	ADJ1	MODE	INPUT
Pt77	ADJ1	MODE	INPUT
Pt78	ADJ1	MODE	INPUT
Pt79	ADJ1	MODE	INPUT
Pt80	ADJ1	MODE	INPUT
Pt81	ADJ1	MODE	INPUT
Pt82	ADJ1	MODE	INPUT
Pt83	ADJ1	MODE	INPUT
Pt84	ADJ1	MODE	INPUT
Pt85	ADJ1	MODE	INPUT
Pt86	ADJ1	MODE	INPUT
Pt87	ADJ1	MODE	INPUT
Pt88	ADJ1	MODE	INPUT
Pt89	ADJ1	MODE	INPUT
Pt90	ADJ1	MODE	INPUT
Pt91	ADJ1	MODE	INPUT
Pt92	ADJ1	MODE	INPUT
Pt93	ADJ1	MODE	INPUT
Pt94	ADJ1	MODE	INPUT
Pt95	ADJ1	MODE	INPUT
Pt96	ADJ1	MODE	INPUT
Pt97	ADJ1	MODE	INPUT
Pt98	ADJ1	MODE	INPUT
Pt99	ADJ1	MODE	INPUT
Pt100	ADJ1	MODE	INPUT

Storage in NVRAM via command mode interface of DSW.
Note: The reference value is 250° measured voltage loc. loc is 0V.
The reference value is 250° measured voltage loc. loc is 0V.
Example: 250° loc 0V.

Figure 8-1

8.2 Reprogramming Procedure of NVM on the Microprocessor Sub PCB

The NVM, item 7808, on the Microprocessor Sub board contains the following factory settings:

1. AFC reference value
2. AFC reference value
3. Slash version

The settings 1, 2 and 3 are stored in the NVM during the production of the set. The slash version is stored at the end of the production line of the set.

In case of failure, the NVM must be replaced by an empty one. The factory settings must be restored in the NVM.

8.2.1 Clock Correction Adjustment

To guarantee an exact function of the real time clock, an adjustment of the clock frequency is possible. The adjustment is stored in the NVM.

Procedure:

1. Put the set in service command mode
2. execute command 722 to initiate that a signal with 32768 Hz is available on pin 3 of connector 1886
3. measure the frequency f_{meas} of the Clock Crystal with an accuracy of ± 0.1 Hz.
4. Calculate the parameter to be entered: $32768 \times \frac{f_{meas}}{32768} \pm 10^6$
5. Note down the value and enter it into the parameter field of 1000037. If the parameter and therefore the frequency of the crystal is outside this range, the crystal must be replaced.
6. execute command 721 with the parameter as input

example: DD-721 1000037

8.2.2 AFC Reference Voltage Tuner

This function stores the reference voltage for the tuner in the NVM. Before this value can be stored, the AFC adjustment, described in the adjustment instructions of the analogue board, must be carried out.

1. Adjust AFC circuit
2. Calculate the reference value
3. Enter the reference value into the parameter field of 1000038
4. Execute command 732 and use the calculated reference value as parameter

DD-732 128

8.2.3 Slash Version

The slash version is stored with command 715 followed by the slash version as parameter.

The slash version used in DVD-R890 and DVD-R890 are the following:

- DVD-R890/00X: 63
- DVD-R890/02X: 63
- DVD-R890/04X: 63
- DVD-R890/06X: 61
- DVD-R890/08X: 61
- DVD-R890/10X: 62
- DVD-R890/12X: 81
- DVD-R890/14X: 81

Example:
DD-715 63

Reset of Slash Version

Use command 729 to reset the analogue board to the default settings.

Procedure:

- Put the set in DSW command mode
- execute command 729 with the following parameters: 729 00000000
- Leave the DSW command mode and start up the set in application mode

No background is visible on the TV screen. The analogue board is ready to accept the appropriate slash version

8.3 Rework Procedure IEEE Unique Number

8.3.1 Scope:

The procedure describes how to upgrade sets with a unique number after repair. The unique number is stored in the NVRAM (item 7201) at the digital board at the end of the production line.

The procedure is only valid for necessary when:

- The digital board is replaced
- NVRAM on the digital board is replaced
- NVRAM is deleted
- In all cases where the original set retains its unique number.

The procedure defines several means to reassign the unique number depending on the possibilities of repair or the state the faulty set is in.

8.3.2 Handling:

State of original (defective) board:

1. The digital board starts up in Diagnostics Mode: follow procedure A to retrieve the valid unique number
2. The digital board starts NOT start up in Diagnostics Mode: follow procedure B.

8.3.3 Procedure A

1. Connect defective digital board to PC via serial cable (3122 785 90017)
2. Connect the serial terminal or any other serial terminal via the correct settings (DSW command mode interface)
3. read out existing unique number via nucleus 403
example:
Nucleus 403
40300: DV Unique ID = 0007A1FC9C
Test OK
4. note read out
5. program new digital board via nucleus 410
example: DD> 410 0007A1FC9C
41000:
Test OK

The set has now the original unique number

8.3.4 Procedure B

1. Note the serial number of the set.
example:
VN5051=production online (V.N., SpokoinyShtetn).
2. We use the following code:
05 = change code (this is not used for this calculation)
01 = YEAR
02 = MONTH
03 = WEEK
130169 = LOT and SERIAL number
2. Calculate the unique number: this number always exists out of 10 hexadecimal numbers.
Formula below:
Serial number:
 $33028 \cdot \text{YEAR} + 676 \cdot \text{YEAR} + 365 \cdot \text{W} + \text{K} + \text{E}783$
The figures are fixed, $\text{YEAR} + \text{WEEK} + \text{K} + \text{factory code} / \text{V}$
Example:
55282017-676-365-22-14-878 = 69538 (decimal)
Then we translate the decimal number to a hexadecimal number:
 $69538 \text{ (decimal)} = 10FA2 \text{ (hex)}$
4. Last 5 numbers:
The last 5 numbers exist out of the LA4 and SERIAL numbers.
We use the following code to translate the decimal number to the next 5 hexadecimal numbers:
Example:
130169 (decimal) = 1F65C (hex)
10FA2 (hex) = 000010FA2 (hex) = 410
Therefore we use the 10 hexadecimal numbers we calculate above:
example:
4005-410 100741F65C
5. Test OK ☺

The set has now its original unique number

9. Circuit-, IC Descriptions and List of Abbreviations

9.1 Display Board

9.1.1.1 Microcontroller

- The core element of the Display Control unit is the microcontroller TMP87C47AF [11]. The TMP87C47AF is an 8-bit microcontroller (integrated with 32kB ROM and 1kB RAM. It requires 5V supply) and is responsible for the following functions:
 - Interface to Central Controller; up
 - Evaluation of the keyboard matrix
 - Decoding the remote control commands from the infra-red receiver
 - Activation and control of the local display
 - Heater voltage generation
- The 8 MHz resonator (Pmax 111) generates the system clock. The reset is generated by the CCU pin +POR_OC-signal where the transistor [7106] is used as a level-shifter from 3V3 to 5V.

9.1.2 Interface to the Central Control μP

The communication to the main microcontroller (CC) on the μ P-Sub-PCB is done via I²C-Interface, where the TMP87C74FAF acts in slave-mode. An additional wire ("INT"-line) is used to signal the Central controller that data are ready, e.g. when a key has been pressed.

9.1.3 Evaluation of the Keyboard Matrix

There are 10 different keys on the display board. A resistor network is used to generate a specific direct voltage value, depending on the pressed key. Via the resistors 3168 and 3169 on the analog/digital (A/D) ports (7110 pin 37 and 38) the evaluation is done.

9.1.4 IR Receiver and Signal Evaluation

The IR receiver [7150] contains a selectively controlled amplifier as well as a photo-diode. The photo-diode changes the received infra red transmission (approx. 340nm) to electrical pulses, which are then amplified and demodulated. On the output of the IR receiver [7150], a pulse sequence with TTL-level, which corresponds to the envelope curve of the received IR remote control command, can be measured. This pulse sequence is fed into the controller for further processing via port TC1 [7110, pin20].

9.1.5 Vacuum Fluorescence Display

The VFD "10-BT-242GNK" [POS 7100] is fully controlled by the microcontroller. The μ C also includes the driving stages. Only two additional drivers [POS 7101 and 7102] are necessary for the grids 8 and 10 because of their large size.

9.1.6 VFD Hester Voltage Generator

The circuit around POS 7103, 7104 and 7105 is used to generate a proper AC-Voltage for the filament of the VFD. For this the microcontroller generates an appropriate rectangular signal with 50% duty-cycle and a frequency of 30 kHz at pin 19. Sps. [5193] and [2102] are acting as a resonance-circuit. Via Zener-Diode [2103] and resistors [3100, 3103 and 3104] the two heater-pins of the VFD ("FIL1" and "FIL2") are clamped so that the grids and segments can be fully switched off.

9.1.7 REC-LED

The REC-LED is a red LED, located on a small PCB together with the REC-Switch and controlled via pin 3 of the microcontroller. The POS [7180] is used as a driver for the led.

9.2 Microcontroller Sub Board (UPC12 SUB PCB)

General

This small PCB is directly soldered in on top of the Analogue-Board.

It is used with no diversity in all three different basic versions (Europe, NAFTA and APAC-Pal). Only the software being loaded into the external Flash-memory is not the same.

9.2.2.2 Microcontroller

[illegible]

9.2.3 Control-Interfaces


The CC is communicating with the digital board via a serial connection, which operates at a speed of 19.4 kbit/sec. The CC sends the following commands to the digital board: "CC DMA", "DATA", "RD-RNW" and "A-RD"-signal (1986b). By generating a high level on the CC the digital board PC8 can be reset (inverter 1987.17 in Fig. 1).

Most of the other parts are controlled by the μP via "PC-bus" ("SMA" and "SCA"-signal). The F57s [1981 and 1982] are used for adaptation of the 3V3-level on CC-side to the components supplied with 5V.

The CC can also reset the digital-board- μP by pulling pin 39 to high.

The translator 17916 [9] acts as a level shifter for the "WT"-signal. The European standard is based on the TTL-level of the Schottky-Emitter-Inverter (SEI) devices. The SEI devices are used in the SCOT 1997-very-low-power ICs. The processing is done by pin 14 (output) and pin 38 (input) of the CC and the circuit around 17913, 17914 and 17915.

Blockdiagram Control Lines and Bus Systems

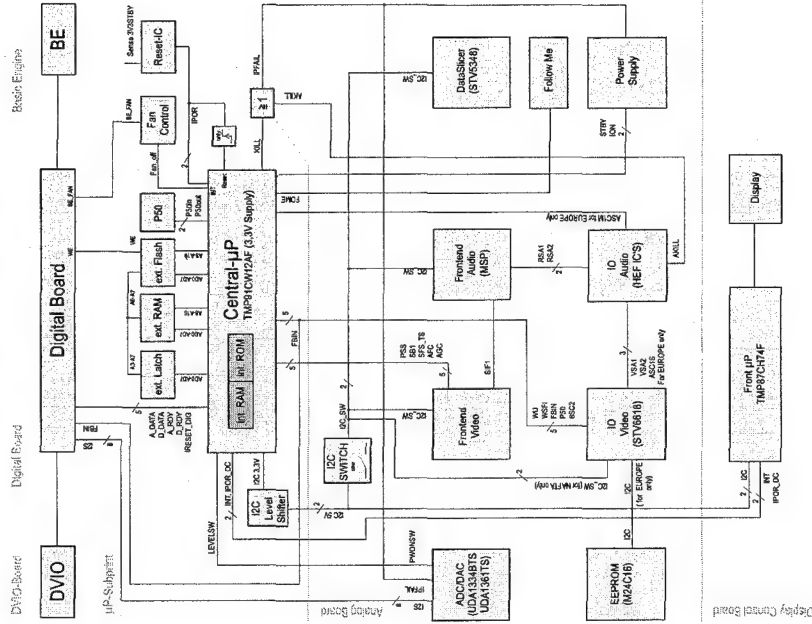

TR 01024.001
170002

9.2.4 EPROM

The EPROM M24C16 (7908) is an electrical erasable and programmable read-only memory (EEPROM) device. It is a 16 Kbit (2 Kbytes) device, organized as 1024 words of 16 bits each. The device is accessed by the CPU via the I²C-bus.

9.2.5 Sync Separator

To select whether a video signal is available or not a separate IC (7925) is used to extract the sync information out of the video signal that is also routed to the digital board for recording. The signal on the input is processed by (7925) and (7925) limits the bandwidth to additional filter distortions. Afterwards the sync-signal is routed to pin11 of the CC.

9.2.6 Fan Control

To avoid unwanted temperatures inside the set (especially the Laser on the CPU of the drive is very sensitive) a fan is located on top of the basic engine. The speed control is dependent on the ambient temp. A NTC resistor (3172) is used to sense the temperature. An operational amplifier (7925) generates a proper voltage, which is then fed to the engine (FAN-FAN-line). Below 25°C ambient temp. the fan-voltage is approx. 5V and is increased to 10V when the ambient temperature goes up to approx. 35°C. The fan speed is controlled by the engine. The age of any temperature-sensitive part in case the NTC or the fan is damaged. It acts as a comparator and pulls the 'BE_FAN'-signal to 10V. As the fan has to be stopped in case of a fault, the 'BE_FAN'-signal is pulled to 10V by the CC 'FAN_OFF'-signal. The double-shot (8903) acts as a Op-Amp-circuit.

9.2.7 Power Supply

The SSM and BSM supply are switched off in case of standby from the P via the STBY-line. This is possible for power-savings. The (STBY-line must be low in case of STBY). There is also a power fail circuit on the PS-schematic which is necessary to mute AUDIO when IPAL is low.

9.3 Analog Board Europe

9.3.1 General

This PCB consists out of the following parts:

- Power-Supply-Unit
- Frontend (Audio & Video)
- Video (STV6918)
- Audio ADC- & DAC-processing
- VSPDTC- and Test-Data slicer
- Analog Follow-Me Circuit

All functional groups are either controlled via I²C-bus or via the STBY-line. The microprocessor on the CPU-Sub-board controls the standby mode of the set. Several parts are not supplied (Tuner, MSP, ...). The microprocessor is running and maintains the clock of the set. To avoid bus because the IC-bus ('SCL-SW' & 'SDA-SW') for the microprocessor is not connected to the set. The set is connected to the general bus ('SCL' & 'SDA').

9.3.2. Power Supply Unit

Functional Principles

Functional Principle: This power supply works in the way of a flyback converter. In the main input part [133] to 2309], the mains voltage is rectified and buffered in the capacitor [2309]. From this direct voltage at [2309] energy is transferred into the transformer [300]. The transformer [300] is a step-down transformer with a turns ratio of 1:100 (for 7307) and is stored there as magnetic energy. This energy is passed to the secondary outputs of the power supply [307]. With the blocking phases of the switching transistor [7307]. With the switch-on time of the switching transistor [7307], the energy transferred in every cycle is regulated in such a way that the output voltage is constant. The output voltage is regulated by the power feedback output. The Power transistor is driven by the incommutated circuit [2313].

Mains input part:

Mainline input part:
The mains input port extends from the mains socket [13031] to the capacitor [2309]. The diodes [3001, 6302, 8005 and 9306] rectify the AC supply voltage, which is then buffered by the capacitor [2309]. The common mode coil [5302] and capacitor [2302] work as a filter to block interference arising in the power supply from the mains. Components [1302, 9306] protect the power supply against short-term over voltages in the mains, e.g. caused by indirect lightning.

Start-up with Mains

Start-up with Mains-on: After connecting the power cord to the mains, the capacitor [2325] is loaded via a current source between pin 8 and pin 1 in the IC [7313]. Once the voltage on [2325] and therefore the supply voltage V_{CC} of the IC [7313] has reached approx. 11V, the IC starts up and provides pulses at its output approx. 11V. These pulses are used to drive the gate of the power transistor [2307]. The frequency of these pulses is depending on load and mains voltage. The current consumption of the IC is approx. 5 mA at V_{CC} in normal mode.

V_{∞} exceeds approximately

V_{cc} exceeds approximately 16V (e.g., interruption of the control loop), the output of the IC (7313, pin 5) is blocked and a new start-up cycle begins. (See also "Overload, Power Limitation, Burst Mode" section)

Normal operation:

Normal operation: With increasing bias on one or more of the power supply outputs, the switch-on time for the power transistor (73071) increases, and thus also the peak value of the delta-shaped current through this power transistor. The equivalent voltage of this current profile is passed from resistors [3321] and [3352] via [3365] to pin 5 of the IC 73131. If the voltage on pin 2 reaches approx. 0.4 V in one switching cycle, the conductive phase of the switching transistor is ended immediately. This process check is done in each individual switching cycle. This process ensures that no more than approx. 50W can be taken out from the males (= power limitation).

ages and the supply

ages and the supply voltage V_{cc} on pin 1 of the IC (7313) will be reduced following further loading. If V_{cc} is less than approx. 9V at any point during this process, the output of the IC (7313, pin 6) is locked. At output voltages and V_{cc} decrease and a new start-up cycle begins. If the overvoltage status or short-circuit remains, the power limitation will be activated immediately and the voltages will again decrease, followed by another start-up cycle (**Burst Mode**). The amount of power taken up from the mains in burst mode is low.

Overload, power line

Overload, power limitation, burst mode

With the power supply in normal mode, the periodic sequences in the circuit are divided primarily into the conductive and blocking phase of the switching transistor T3071. During the conductive phase of the switching transistor T3071, current flows from the rectified mains voltage at capacitor C3091 through the primary coil of the transformer T5000, plus T3091, the transistor T3070 and resistors R3321, R3322 to ground.

The positive voltage on pin 7 of the transformer (E500) can be considered as constant for a switching cycle. The current in the primary coil of the transformer (E500) increases linearly. A secondary winding field receives a certain value of the primary current. The secondary field is formed by the transformer. In this phase, the voltages on the secondary coils are polarized such that the diodes E500, E501, E502, E510, E511, E512 and E519 block E500 from the controller (7315). A current is supplied into the CTRL from the controller (7315) to the CPU via the optocoupler (7314). Once the CPU switch on the IC pin 3, 7313 via optocoupler (7314), this corresponds to the time of the switching transistor (7307), this corresponds to the current supplied into the CTRL input - has been switched. This switching transistor (7307) is switched off.

When the switching transistor has been switched off, the blocking phase begins. No more energy will be transferred into the transformer. The inductivity of the transformer will attempt to keep the current flowing at a constant level (L di/dt = 0). Switching of transistor T3007 interrupts the primary current of the transformer circuit. The polarity of the voltages on the transformer is reversed, which means that the diodes [6300, 6303, 6307, 6308, 6309, 6310, 6313, 6317 and 6319] become conductive and the current flows into the capacitors [2320, 2312, 2319, 2322, 2323 and 2328] and the load. This current is also amplified (see Fig. 15) and the switching transistor is destroyed.

[illegible]

Standard models

Standby modes: In the "Standby" operating mode of the set, the "ION" control line is primarily used to switch off all output voltages for Basic Engine and Digital Board (supplies 3V3, 5V, 12V, 5V and 4V6 at Connectors 1932 and 1933) of the power supply. This reduces the amount of power taken from the mains. In Low Power Standby mode additionally the "STBY" control line is used to switch off output voltages 55W and 85W. This reduces power consumption to less than 3W. The power supply will continue operating in Standby mode with a switching frequency of around 25 kHz.

Frontend

Frontend

- Tuner UV1316K [1705]
- IF amplifier & video demodulator IC TDA 9818/9817 [7710]
- Sound processor MSP3415G [7600]

Tuner and IF selection

Tuner and IF selection

The Tuner [17] converts the RF-signal coming from the antenna input into an IF-signal. The tuner is fully controlled by the CC-IP. The CC-IP is also equipped with a "passive" boost-through between antenna and tuner to save power in the tuner. The IF frequency of the video carrier is 38.9 MHz for all systems. A quasi-split audio system is used. Separate surface-wave filters (SAW) are switched in [1701], the signal path for Digi-SECAM audio [1702] is switched in [1703]. In this case the signal "SBS" is "high". In the case of the signal "SBS" is "low", the signal path for B33 reception [1703] is switched into the signal path for B33 reception (SBS is "low"). Then the switch [1713] is open and the close [1704] is conducting. For Digi-SECAM/LD reception the close [1704] is conducting. For Digi-SECAM/LD reception

tion, an additional circuit for suppressing the audio carrier of the adjacent channel is used. This circuitry is adjusted by coil 57101 for maximum suppression at 40.4MHz.

IF demodulator


[illegible]

Audio demodulator

Audio demodulator
The sound demodulation is done by the MSP3415 [7600], which is also fully controlled via PC-bus by the CC-uP (determination of bandwidth, amplitude, standard, ...). The audio signals are available at pin 30 and pin 31 of [7600] and fed as "AEBD" & "AEEI" into the audio-I/O for further processing.

9.3.4 Audio routing

Audio IO Europa Overview

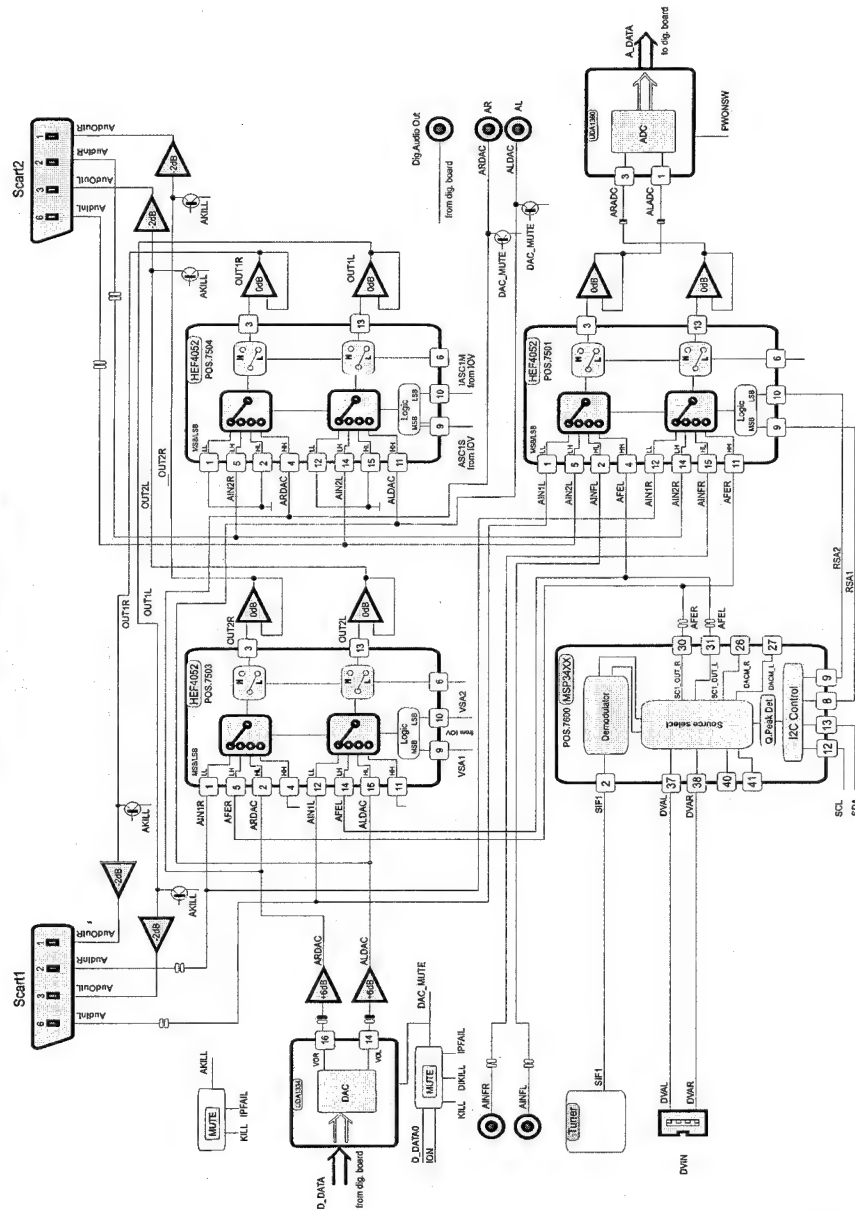

The processing of audio is always done in stereo (e.g. separate left and right channels). The audio signal is processed by using HEF4052, which is a dual four-to-one multiplexer. In principle there are three independent selectors:

a) Start 1-Output-Path:

Pin [7504] is used to select either Start 2-input ("ANIN1"/"ANIN2") or the signal directly from the audio DAC [7001] ("ALDAC"/"ARDAC") as the output source for Start 1 ("AOUT1"/"AOUT1P").

The output data by means of the line "ASC1" is copied from [7408] IC [7408] acts as a port expander for the CC-IP and "ASC1M", which is directly coming from the CC-IP [7412] is used for level adaptation (3V3 to 5V) in between.

b) Start 2-Output-Path:

Pin [7523] selects between Start 1-input ("ANIN1"/"ANIN2") signals from the internal frontend ("AFEL"/"AFER") via MSP [7000] or audio directly from the DAC [7001] ("ALDAC"/"ARDAC"). The outputs of this switch are routed to Start 2 ("AOUT2"/"AOUT2P"). These lines come from [7408] that is acting as a port expander for the CC-IP.

c) Record-Path:

Pin [7501] selects either signals from Start 1 ("ANIN1"/"ANIN2") or Start 2 ("ANIN2"/"ANIN2P") or Clich-Front ("ANIN1"/"ANIN2P") or the MSP [7000] ("AFEL"/"AFER") and routes to the audio ADC [7008] ("ALADC"/"ARADC") for record purposes. The switch is controlled via "ASC2" from the "ASC2" port of the CC-IP. The output of this switch is routed to the port expander of the CC-IP. As there can also exist a 5th input in case of DV-In is present the corresponding analog audio signals from the DVD-board are firstly routed via extra cable to the "ASC2" port of the CC-IP. The output of this port expander between audio from internal frontend of the DV-In.

Each of these three selectors [7501], [7503] & [7504] has a "KILL" line. The "KILL" line is used to deactivate the selector and the output signal for the record path [7505-A & -B] respectively for Start 2. Every audio output line on the two record paths is controlled via "KILL" line. The "KILL" line is controlled by a extra transistors [7504] [7503] [7501] [7505-A & -B] and the "KILL" line. The signal is generated by the circuit around [7403]/[7421] and is a combination of the "KILL" from the CC-IP and the "KILL" of the power-supply-unit.

Additionally to analog audio the set is also equipped with a digital output via cinch plug [185]. The signal is generated on the dig. board and routed via audio interface cable and connector [1900] to the Anal-PCB. Here the "DAOUT"-line first passes a 6-ohm inverter [7380] being used as a driver and/or buffer. The signal is then routed via a transformer [5580] and also to have a floating output with isolated ground before the signal is fed via [5860] to cinch plug [195]. The capacitor [5860] performs an AC-coupling between connector- and signal-ground.

9.3.5 Audio ADC/DAC

The conversion of analog audio signals from the record-path to digital is done via the "ALDAC" & "ARDAC". The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a

6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V.

The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V.

The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V.

The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V. The "ALDAC" & "ARDAC" is done via UDA1341TS [7005]. The "ALDAC" & "ARDAC" is done via 2V_{ref} by using external resistors [3039] [3041] in series to the input pins. As the level from the DVD-Board is only 1V_{rms} a 6dB gain can be performed by setting pin 7 of [7005] to 3.3V.

Video 10 Europe Overview



14.11.2001

The complete Video/C-switching is basically realized by the matrix switch ST16618 (7406), which is controlled via PC-bus by the CC. All video inputs excluding pin 21 (Y/CBS-REC) have a 6 dB-amplification and a 75 Ohm driver-stage inside. This CC includes also several digital outputs, which are used for switching purposes on the analog board. The second selector inside the switch selects between the CVBS from frontland into the switch selects between the CVBS from frontland ("VFV"), the input from Start 1 ("Y/CBSINT") or the signal from Start 2 ("Y/CBSIN2"). Afterwards the signal passes another switch [7411] in which a selection between the signals from the front or the prestretched ones are done. The output signals of [7411] are fed as "A/CBSVBS" and "A/CVBS" into the digital board for further processing.

To reduce the number of external presets there exists only one preset for CVBS- and Y/C-front. The set automatically detects between the two inputs depending on the presence of a video signal (sync separator-circuit on mP-sub-board) where Y/C has higher priority.

The TIGB inputs and the Fast-Blanking line on S-Card 2 are directly routed to the digital PCB. These signals are not available on the corresponding input/pins of the STV6918 to enable a loop-through in AV-Standby. In this mode the set has to behave like a cable between the two S-Card-connectors. AV-Standby is activated either by a "high" level on pin 6 of S-Card 2 ("active device is present") or by the "VU-line" (wake up). This signal is generated out of the circuit around [7] 740283. [7403] and will become "high" if there is a signal on pin 20 of S-Card 1 or S-Card 2. The detection of the input level on pin 20 of S-Card 2 (referred to as "high") is done by the S-Card unit on pin 28 of S-Card 2 [28C2] means inactive; 4.5V to an analog input of the CPU* (less than 2V means inactive; 4.5V to a 74V01 determines a source with 16:9 picture-ratio and greater than 9.5V is an active 4:3 source).

All signals from the digital board ("D_R", "D_G", "D_B", "D_C", "D_Y" and "D_CVBS") are routed to the proper inputs of the STV6618 for amplification and driving purpose before they can be seen on the appropriate S-car outputs.

Parallel to this the "D_CVBS", and the "D_Y"-line are passing a 6 dB-amplifier and driver-IC [7410] and are then routed to the CVBS-Cinch and Y/C-out rear. The chroma signal for this Y/C-out is coming from the STV6618 - which makes the 6 dB-amplification - and a driver [7406] in between.

The detection of the picture ratio information on the Y/C-input front is made by measuring the DC-level on the Chroma signal via analog input of the CC- μ P ("WSF-line"). In case the level is higher than 3.5V the input signal is a 1:3 source. If the level is lower than 2.4V the picture ratio is 4:3.

For generation of the appropriate DC-voltage on the Y/C-out rear the "WSRO"-line is controlled via pin 18 of [7408] by the CC- μ P (Pin 18 set to low means 4:3, pin 18 set to high determines 16:9).

The control of the switching voltage (Pin 8 of S-Card 1) is done by 3-level-pin (*m.2*) of the STV6618 [7408] and the transistors [7405], [7407] & [7409]. A "low" on pin 2 of [7408] causes around 11V on pin 8-S-Card 1 (e.g., source with 4.3 picture-ratio active). Medium level (2.5V) on pin 2 of the STV6618 generates medium level (approx. 6V) on pin 8-S-Card 1 (e.g., active source with 1.9:9) and a "high" on pin 2 of the STV6618 pushes pin 8-S-Card 1 to "low" (e.g., inactive).

9.3.7 VPS/PDC- and Text-Datascraper

For extraction of relevant information out of the video signal (time controlled recording, net-name-identification, time- & date- download) the STV5348 [7931] is used. Data transfer to the CC is fully done via I²C-bus and the input signal for

decoding is the same as the one being routed to the digital board for recording purposes ("A YCVBS"-line).

9.3.8 Analog Follow-Me

This circuit compares the video signal from the internal front-end (FVE) of the recorder with that one of the connected TV-set ("CVBS1"). The TV set delivers the signal via SCART-cable. A comparator (7934) and several additional parts (7932), (7933, ...) are used to compare the two video signals. In case of both input signals are equal the output-line of this circuit ("FOMET") is set to low. Detection is made via an input port of the CC-up.

9.4 Analog board NAFTA- & APAC-Pat- version

9.4.1 Frontend NAFTA

[Tuner and IF-demodulator are in one unit. Also a modulator is included in that part. The audio- and video-signal to the modulator are the ones from the selected input or the playback path of the tape (AMGCO-2, TV, CVBS)-line. The control of the tuner is fully done via PC-bus by the CC-Plus via the 'SWSW'-line. The 'SWSW'-line is a 10-pin ribbon cable, opposite to this the antenna POS (1700) is used with the difference. In the APCAP-Plus version POS (1700) is used with the difference that it demodulates only PAL. Instead of NTSC-signals there has also no modulator. The 'CSW'_'SSW' line switches the modulator between CH3 or CH4 in the NTSC-version. To achieve optimal tuning the video-signal is locked by the 'SWSW'-line to the 'SWSW'-line. (1700) is also used for level adaptation (SV to 3V3). Pos (1700) is a drow for the video signal.


The sound demodulation is realized by the MSP3445S [7600], which is also fully controlled via PC-bus by the CC-yip (color-mixation of bandwidth, amplitude, standard, ...). The audio signals are available at pin 30 and pin 31 of [7600] and fed as "AFER" and "AFEL"-line to the audio-IO for further processing. As this PCB is used for different regions (NAFTA and APAC) either MSP3425 or MSP3415 are assembled.

decoding is the same as the one being routed to the digital board for recording purposes ("A YCVBS"-line).

9.4.2 Audio routing

Audio IO NAFTA / APAC Overview

12.03.2002 Vers. 05

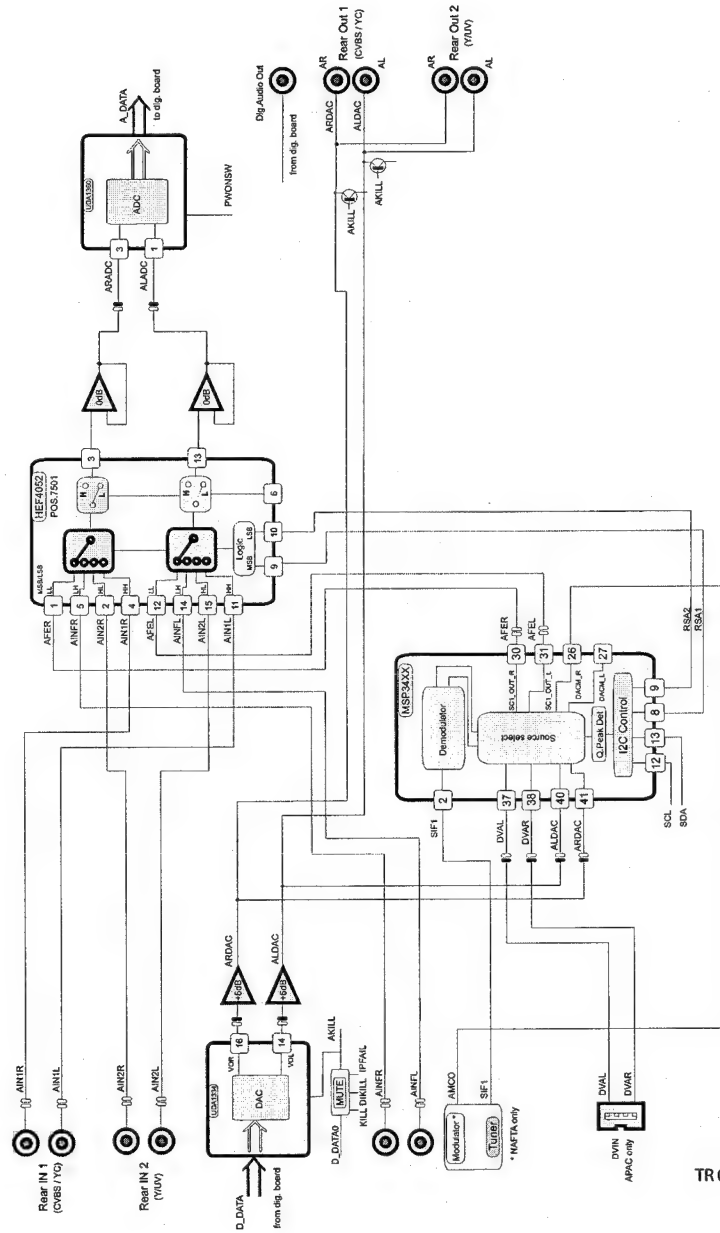

TR01057_001
170502

The sound processing is always done in stereo (that means separate left- and right-channel). The complete selector of the signal is done by the IC. The signal is processed with a 4x4 bit digital four-to-one multiplexer. The Op-Amp on the input [7504] is necessary for performance reasons and acts also as a driver. The selected signals "ARADC" and "ALADC" are directly fed to the Audio-ADC. The input lines for the selector are controlled via "AIN1L"/"AIN1R" or "AIN2L"/"AIN2R" or "AIN3L"/"AIN3R" or the chip in front ("AINFL"/"AINHR"). The [7501] is controlled via "RSA1L" and "RSA2L" -signals coming from the MSP [7600]. The MSP acts as a port expander of the CC-IP.

As there can exist also a fifth input in case of DV-IP is present the corresponding analog audio signals from the DVC-board are firstly routed via extra cable and connector [980] to the MSP, which acts as a prescaler between audio from internal demand or the DV-Input.

The signals from the audio DAC part ("ARDAC"/"ALDAC") are directly routed to both chip rear outputs, which are connected in parallel. To avoid pops and any other audible noise on the output, the signals are firstly routed via a 4x4 bit digital four-to-one multiplexer. The activation is done via "XALL" -line, which is a combination of the "XLL" from CC-IP, "DAC_Misc" from DAC-part and "IPFALL" of the power-supply-unit. The circuit around [9430], [9431], [7430] and [7434] generates this signal.

Additionally to analog audio the set is also equipped with a digital output via chip plug [1951]. The signal is generated on the dig. board and routed via audio interface cable and connector [1900] to the Atrio-PCB. Here the "DAOUT" -line first is connected to the chip rear output. The signal is then routed via a 6dB step can be performed by setting pin 7 of [7005] to 3.3V via [7008] and "PWONSW" -line controlled by the CC-IP to use the whole dynamic range of the ADC. All required clock signals are generated on the dig. board and copy the audio signals to the CC-IP. The signals are routed from Atrio- to Dig-PCB for further processing.

9.4.3 Audio ADC/DAC

The conversion of analog audio signals from the record-selector [7501] in the IO ("ALADC" & "ARADC") is done via UDA1381TS [7005]. This IC can process input signals up to 192 kHz. The signal is processed with a 4x4 bit digital four-to-one multiplexer. The activation is done via "XALL" -line, which is a combination of the "XLL" from CC-IP, "DAC_Misc" from DAC-part and "IPFALL" of the power-supply-unit. The circuit around [9430], [9431], [7430] and [7434] generates this signal.

The transformation of dig. audio back to the analog domain is done by UDA1348TS [7001]. All necessary clock signals are generated on the dig. board and copy the audio signals to the CC-IP. The signals are routed from Atrio- to Dig-PCB for further processing. The signal is then routed via a 4x4 bit digital four-to-one multiplexer. The activation is done via "XALL" -line, which is a combination of the "XLL" from CC-IP, "DAC_Misc" from DAC-part and "IPFALL" of the power-supply-unit. The circuit around [9430], [9431], [7430] and [7434] generates this signal.

Block Diagram Digital Board

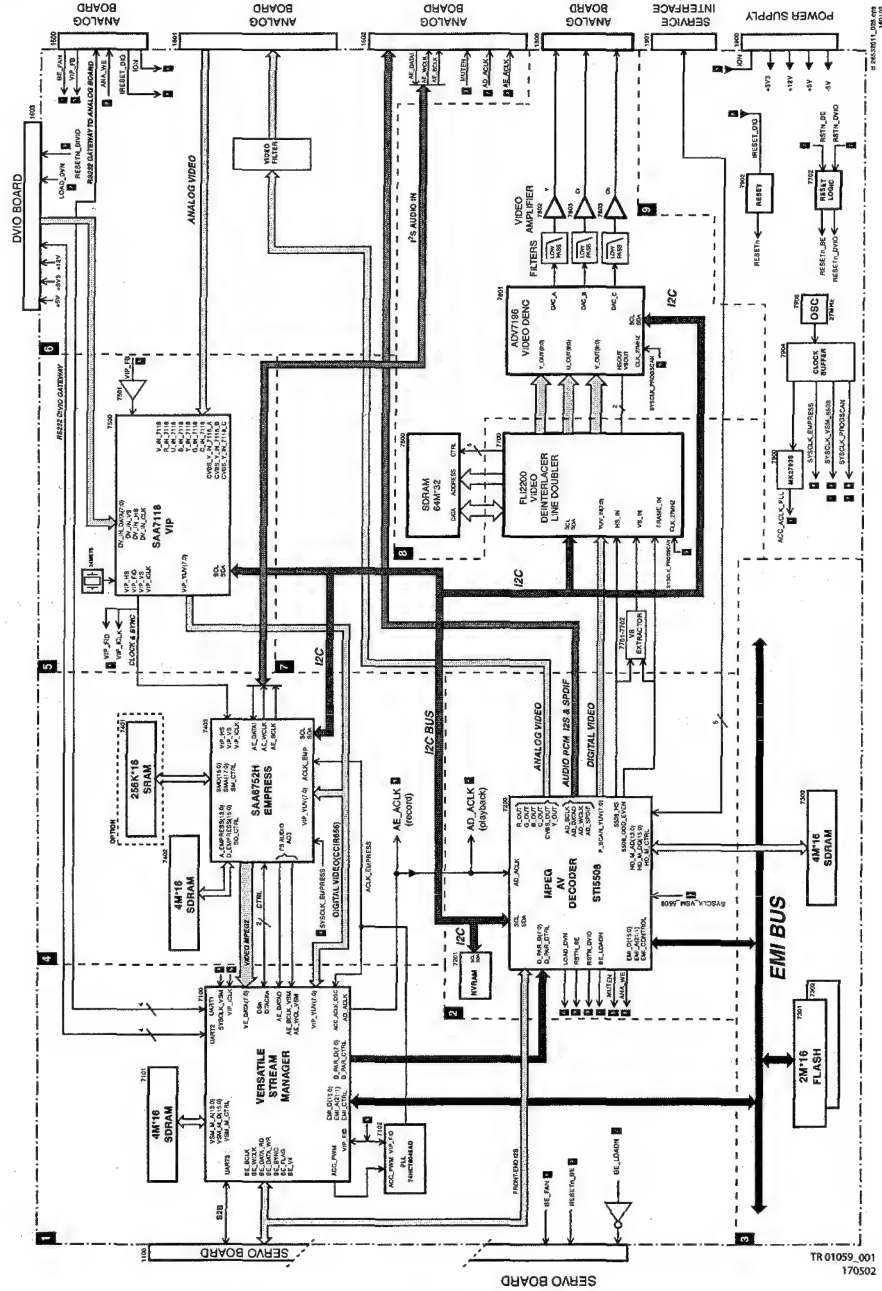


Figure 9-1

Description

The progressive scan part is integrated in the Digital Board and built around the SAGE FI2200 de-interlacer / line doubler (7701). This IC controlled de-interlacer uses a 64Mbit SDRAM (32bit x 2M) to perform high quality deinterlacing (meshing).

signal running on 27Mhz.
Because the ST5508 doesn't have a Vsync output the odd/even output of this IC has to be translated to a Vsync signal.
Some glue logic has been added to extract the vertical sync.
The glue logic circuit consists of Flip-Flop IC 74HC74D (7701) and EXOR 741VC68 (7702). The next diagram shows how the vertical sync is extracted.



The output of the de-interlacer (4:4:4 progressive video) is fed to the Analog Devices ADV71967 MacroVision compliant DENC (7801).

The YUV current output of the DENC is fed via a low pass filter to the single supply output opamps AD9061/8062 (7802-7803). The analog video is fed via a 7-poled flex to the analog board where the YUV 2EH clutch connectors are located.

3.3.1 Short Description of the Module:

The DVIO Module is a decoder for DV streams. The module is intended for the Philips DVDR1000002 on DVDR1000172 intended recorders. Input is a stream from a DV-camera (IEEE1394). Outputs are CBR656 Video and Analog audio (L-R). A serial control interface is present.

9.6.2 Block Diagram

Block Diagram DVIO

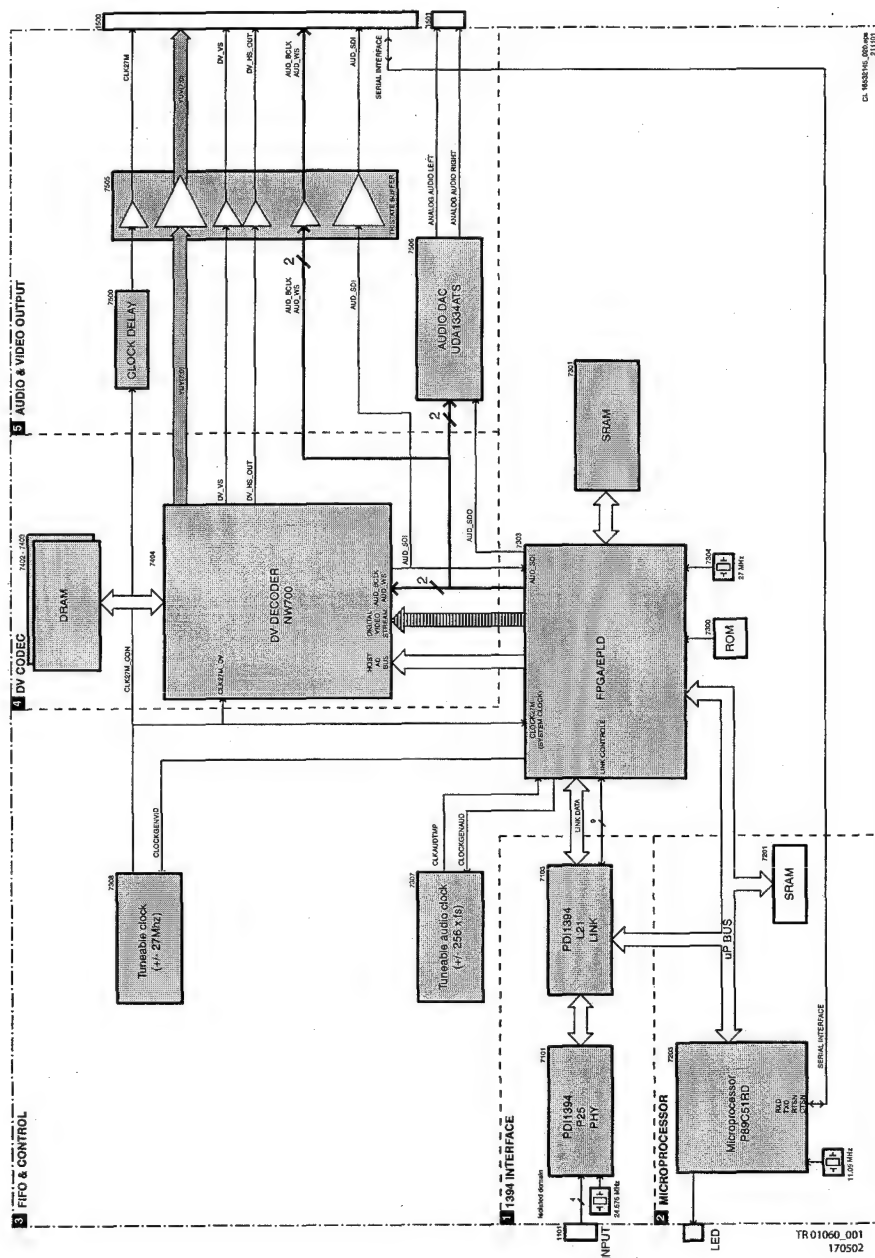


Figure 9-4

9.6.3 Functional Description

- The DVD module consists of the following blocks (see block diagram):
1. IEEE1394 interface
 - PDI384P26(701)
 - PDI384P26(702)
 2. Micro-controller
 - 89C51RB2(703)
 - 32A0 SHAK(701)
 3. FIFO and Control
 - FIFO(704)
 - SRAM(701)
 - SRAM(702)
 - Clock generation(707, 708)
 - Independently tunable audio and video clock, synchronized with FPGA and PLL
 4. DV-Decoder
 - NV700(704)
 5. Audio & Video DAC
 - EDO DRAM(7402, 7403)
 - DAC(7404)
 - DAC(7405)
 - Clock delay(7500)
 - Tri-state buffer(7505)

IEEE1394 Interface
The IEEE1394 interface consists of a PDI384P26 physical layer and a PDI384P26 link layer.
It has the following features:

- S200 operation (200 megabit per second)
- One Link port (4 pin)
- AN link port

Micro-Controller
The 89C51RB2 processor has a 8051 cpu with the following extra features:

- 1 Kbytes of flash memory as program memory
- 1 Kbytes of internal data memory
- watchdog timer
- PCA output
- Power control mode
- Sleep mode
- On board ISP(In Circuit Programming) functionality

ISP
By use of In Circuit Programming, it is possible to update the microcontroller. The microcontroller can be made active by resetting the processor and keeping the ISP pin low during reset. During ISP, the ISP signal on the board has to be kept low. A programming voltage of 5V is always present at the Vpp pin. When the ISP mode is active, the microcontroller can be sent to the microprocessor through the serial port.

Fifo and Control
In this block, an asynchronous AV-stream is flowing through the FIFO. The data is then sent to the microprocessor through data in a FIFO buffer (ping-pong buffer type, i.e. 2 buffers that can hold one whole frame each).

Reset
The FPGA controls the reset signals on the board. This has the advantage that it is possible to reset the board both from software and hardware.

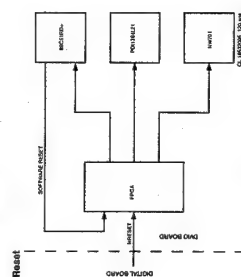


Figure 9-5

The board reset NRESET will reset the whole board, and the software reset can reset everything except the microprocessor itself. Power-on reset is implemented by adding pull-ups and pull-downs to the reset inputs of the devices. Since the FPGA is configured by the microprocessor, the reset signal is driven during configuration time. After configuration of the FPGA, the reset signals are driven inactive. The NRESET signal is used to reset the DVD board. After reset, the tri-state buffers to connector 1500 are disabled.

Clock Circuit

There are 2 clocks to consider in the system, this is the video clock and the audio clock. These two clocks do not have a relation, so these clocks must be considered independently. The video clock is derived from the 1394 interface, which is derived from an external source that is supposed to have the same frequency, it does not have exactly the same clock. Because of this, buffers may under-run or over-run. Since the clock can not be exactly locked from the 1394 interface, there has to be another clock source. The audio clock is derived from the incoming data. The hardware implementation of such a tunable clock is as follows:




Figure 9-6


The same can be applied for the audio clock. For this clock, a frequency of 8.192 MHz, 11.2896 MHz or 12.228 MHz is used. The audio clock is derived from the incoming data. The hardware implementation of such a tunable clock is as follows:

DV Decoder
The AV-data will go from the FIFO to the NV700. The NV700 will convert the AV-data into video data in 608 format and audio data in 625 format.

The microprocessor has the ability to read the status registers of the NV700 through the FPGA. By reading these registers, status data from the DV stream, that is not decoded into audio or video, can be read. This data includes time stamp and some more.


Audio & Video Output

The audio ISB data are sent to audio DAC UDA1334. Analog audio data are sent to video DAC UDA1334. The NV700 will convert the AV-data into video data in 608 format and audio data in 625 format. The tri-state buffer enables the digital video stream to the Video Input Processor on the digital board when the DV source is selected. The clock delay synchronizes the AV clock with the AV data at the output.

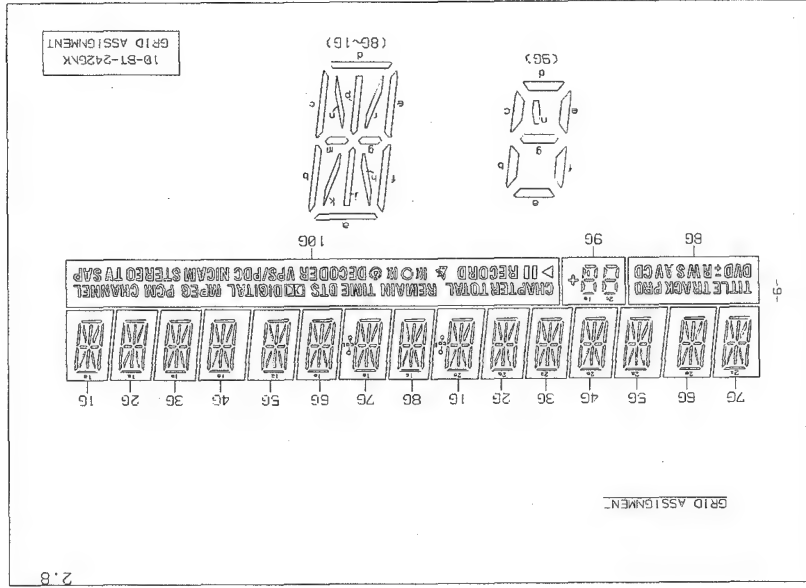

9.7 IC's Display Panel

9.7.1 027100

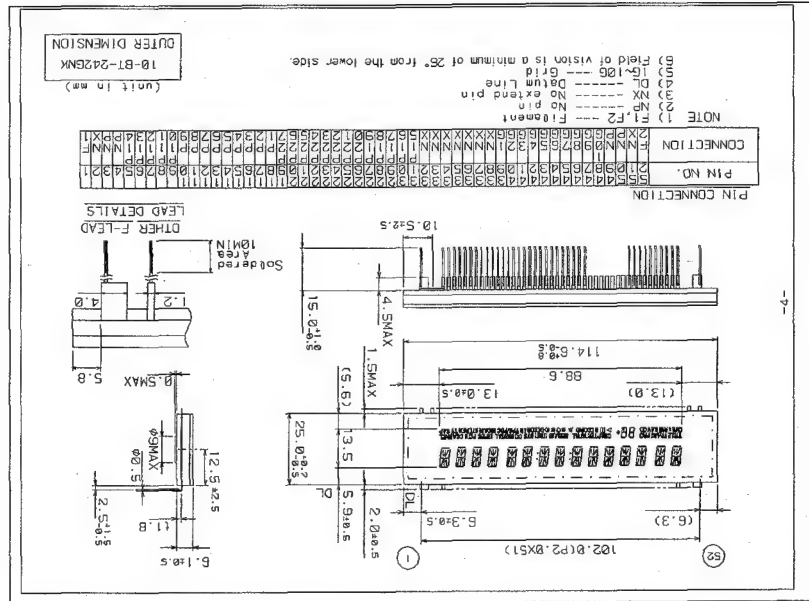



FEATURES

- Member of UVI/100 MK3 family of small-sized UHF/VHF tuners
- Integrated passive splitter
- Systems CUR/ BG, H, L, I and F: OIRT: D/K
- Digitally-controlled (PLL) tuning via I²C-bus
- Fast 400kHz I²C bus protocol compatible with 3.3V and 5V micro controllers
- Off-air, 5-scale and hyperband channels
- World standardized mechanical dimensions and pinning. Horizontal mounting is optionally available.

MARKING

The following items of information are printed on a sticker that is on the top cover of the tuner:

- Type number
- Code number
- Origin letter of factory
- Change code
- Year and week code

DESCRIPTION

The UV1316K MK3 splitter - tuner belongs to the UV1300 MK3 family of tuners, which are designed to meet a wide range of TV applications. It is a full band tuner suitable for CCIR systems E/G, H, L, L', and I'. The low IF output impedance is designed for direct drive of a wide variety of SAW filters with sufficient suppression of triple transition. In addition, it is equipped with 2 to 2 standard items, one a 5 level Analog Digital Converter and the other an internal wide band AGC with i²c selectable TOP.

This tuner complies with the requirements of radiation, signal handling capability and immunity conforming to:

- CISPR 13 (1990) Incl. amendment 1 (1992) and amendment 2 (1993) and CISPR 20
- European standards CENELEC EN55013, EN55020

ORDERING INFORMATION

TYPE	DESCRIPTION	ORDER NUMBERS
UV1316K/A G-3	Asymmetrical IF output; IEC connector	3139 147 17001


[illegible]

1.2 Pin Description

Pin No.	Symbol	Description
1	YCVBSIN_TUN	YCVBS Input from Tuner
2	DIGOUT3	Digital Output Pin 3
3	GNDI	Ground Supply 1 for Video Inputs
4	CVBSIN_ENC	CVBS Input from Encoder
5	DECV	Video decoupling capacitor
6	CIN_ENC	Chroma Input from Encoder
7	YIN_ENC	Y Input from Encoder
8	Vcc	+5 V Power Supply for Video Inputs
9	RYPIN_ENC	Red or Pr or Chroma Input from Encoder
10	GYIN_ENC	Green or Y Input from Encoder
11	BPBIN_ENC	Blue or Pb Input from Encoder
12	GNR2	Ground Supply 2 for Video Inputs
13	BPBIN_AUX	Blue or Pb Input from Auxiliary (SCART2 or external Circuit)
14	DIGOUT4	Digital Output Pin 4
15	GYIN_AUX	Green or Y Input from Auxiliary (SCART2 or external Circuit)
16	DIGOUT5	Digital Output Pin 5
17	RYPIN_AUX	Red or Pr or Chroma Input from Auxiliary (SCART2 or external Circuit)
18	DIGOUT6	Digital Output Pin 6
19	YCVBSIN_AUX	YCVBS Input from Auxiliary (SCART2 or external Circuit)
20	VCCB_REG	Video Output Recorder Buffer Supply Pin
21	YCVBSOUT_REC	YCVBS Output to Recorder
22	GNR_REC	Ground Supply for Recorder Buffer
23	COUT_AUX	Chroma Output to Auxiliary (SCART2 or external Circuit)
24	VCCB1	Video Output Buffer Supply Pin
25	YCVBSOUT_AUX	YCVBS Output to Auxiliary (SCART2 or external Circuit)
26	GNDB	Ground Supply for Video Buffer
27	BPBOUT_TV	Blue or Pb Output to TV (SCART1 or external Circuit)
28	C_GATE	External Transistor Command for Bidirectional SCART IO
29	GYOUT_TV	Green or Y Output to TV (SCART1 or external Circuit)
30	VCCB2	Video Buffer
31	RYPBOUT_TV	Red or Pr or Chroma Output to TV (SCART1 or external Circuit)
32	VCCB3	Video Output Buffer Supply Pin
33	YCVBSOUT_TV	YCVBS Output to TV (SCART1 or external Circuit)
34	FBOUT_TV	Fast Blanking Output to TV (SCART1)
35	FBIN_AUX	Fast Blanking Input from Auxiliary (SCART2)

Pin No.	Symbol	Description
36	VDD	+5 V Digital Power Supply
37	SCL	PC Bus Clock
38	SDA	PC Bus Data
39	GNDD	Digital Ground Supply
40	CIN_TV	Chroma Input from TV (SCART1 or external Circuit)
41	YCVBSIN_TV	YCVBS Input from TV (SCART1 or external Circuit)
42	DIGOUT1	Digital Output Pin 1
43	CIN_TUN	Chroma Input from Tuner
44	DIGOUT2	Digital Output Pin 2


Figure 2: STV6618 Input/Output Diagram

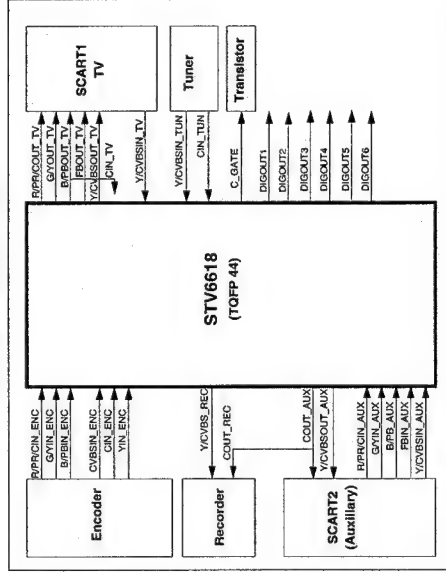

GENERAL OVERVIEW

STV6618

Figure 3: STV6618 Block Diagram

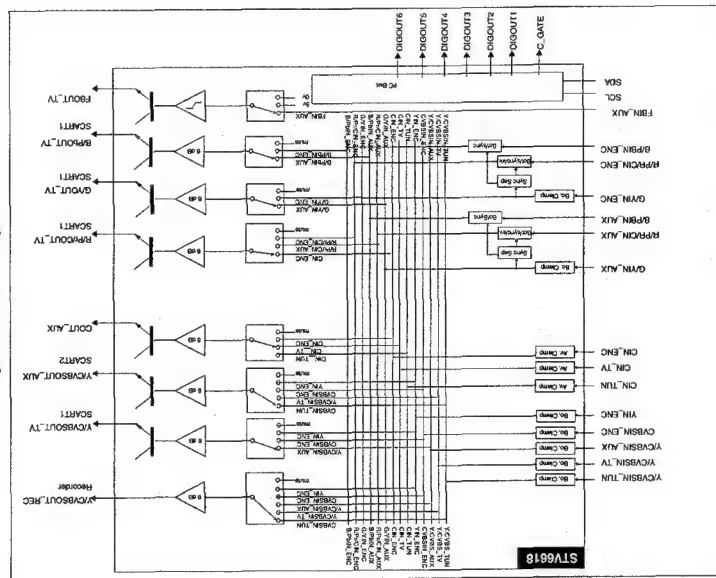


STMicroelectronics Confidential 6/25

5

GENERAL OVERVIEW

STV6618

Figure 3: STV6618 Block Diagram

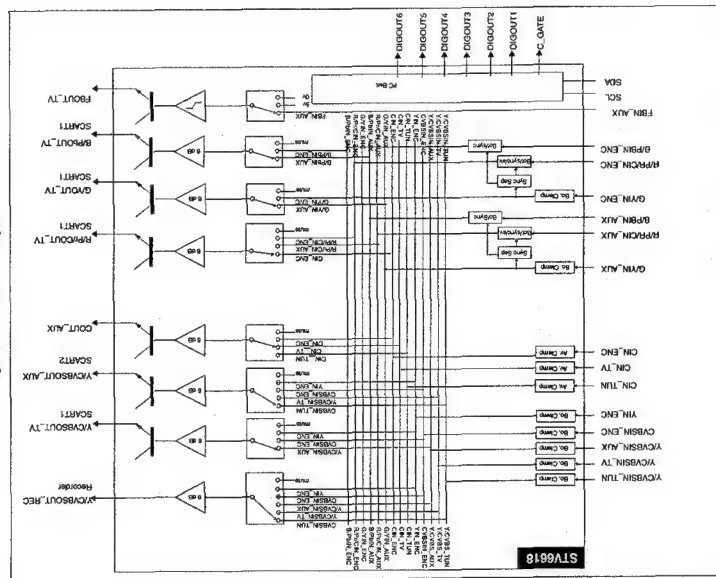

STMicroelectronics Confidential 6/25

5

NJM2265

JEC

2-INPUT 3CHANNEL VIDEO SWITCH

■ GENERAL DESCRIPTION

NJM2265 is a switching IC for switching over from one video or audio source to another. It can be operated independently. Type of them are Clamp type, and they can be operated while setting DC level fixed its position of the video signal. It is a high efficiency video switch, having an on-state resistance of 100Ω, and a frequency response of 10MHz, and then the constant 75Ω for 4.5MHz.


■ FEATURES

- 2 Input Output
- Low Power Consumption (Type of them are Clamp Type)
- Wide Dynamic Range (4.7V-12.0V)
- Wide Bandwidth Frequency Response (4.5MHz)
- Wide Bandwidth Frequency Response (10MHz)
- Package Available in DIP16, SO16, and SMD
- Support Technology

■ APPLICATIONS

- VCR, Video Camera, A/V-TV, Video Disk Player.

■ BLOCK DIAGRAM

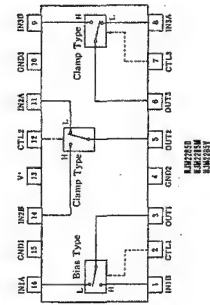

■ PACKAGE OUTLINE

IC7313

GreenChip™II SMPS control IC

TEA1507

FEATURES

Distinctive features

- Universal mains supply operation (70 to 276 V AC)
 - High level of integration, giving a very low external component count.
- #### Green features
- Valley/zero voltage switching for minimum switching losses
 - Efficient quasi-resonant operation at high power levels
 - Frequency reduction at low power standby for improved system efficiency (<3 W)
 - Burst mode operation for very low standby levels (<1 W)
 - On-chip start-up current source.
- #### Protection features
- Safe restart mode for system fault conditions
 - Continuous mode protection by means of demagnetization detection (zero switch-on current)
 - Accurate and adjustable overvoltage protection
 - Short winding protection
 - Undervoltage protection (foldback during overload)
 - Overtemperature protection
 - Low and adjustable overcurrent protection trip level
 - Soft (re)start
 - Mains voltage-dependent operation-enabling level.

APPLICATIONS

Besides typical application areas, i.e. TV and Monitor supplies, the device can be used in all applications that demand an efficient and cost-effective solution up to 250 W.

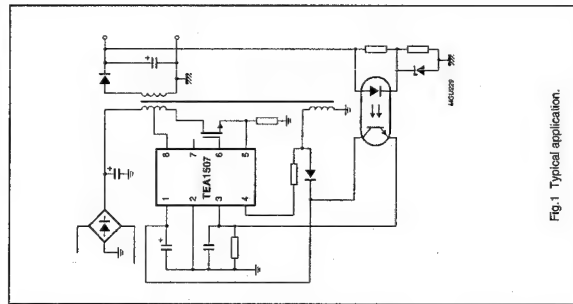


Fig. 1 Typical application.

Philips Semiconductors Preliminary specification

GreenChip™II SMPS control IC

TEA1507

BLOCK DIAGRAM

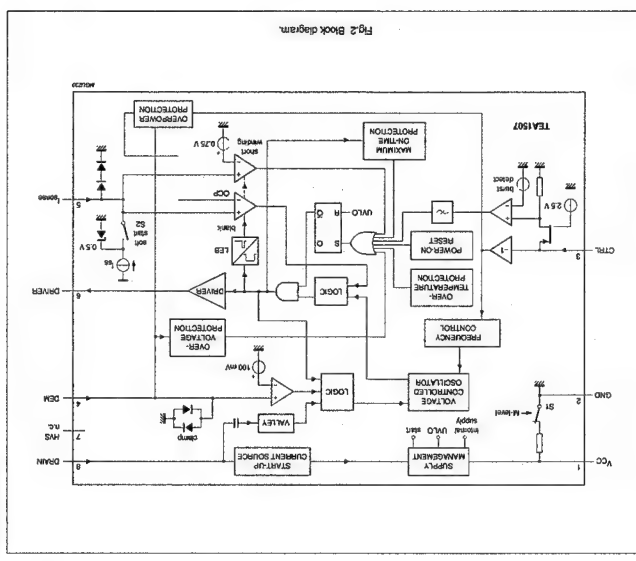


Fig. 2 Block diagram.

2000 Dec 05

Monolithic Linear IC

LA7213

VCR-Use

Automatic Channel Selection Peripheral

SANYO

Overview


The LA7213 is a VCR-use automatic channel selection peripheral IC that contains a sync separator and a vertical sync separator.

Functions and Features

- Vertical sync separator.
- Recommended supply voltage: 5V.
- Open collector output ($R_L = 10k\ \Omega$, 1 negative polarity out).

Package Dimensions

unit:mm
3042C-SIP5

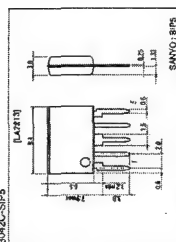

NCP300, NCP301

OPERATING DESCRIPTION

The NCP300 and NCP301 series devices are second generation ultra-low current voltage detectors. They are designed for use in portable microprocessor based systems where extended battery life is paramount.

Initially consider that input voltage V_{IN} is at a nominal level and it is greater than the voltage detector upper threshold (V_{UTR}) and the reset output (Pin 1) will be in the high state for active low devices, or in the low state for active high devices. If there is a positive transient in V_{IN} the detector output will fall below the low detector threshold (V_{LTD}). This sequence of events causes the Reset output to be in the low state for active low devices, or in the

high state for active high devices. After completion of the positive transient, V_{IN} will return to its nominal level and become greater than the V_{UTR} . The voltage detector has built-in hysteresis to prevent erratic reset operation as the comparator threshold is crossed.

Although these device series are specifically designed for use as reset controllers in portable microprocessor based systems, they can be used in other applications where precise voltage monitoring is required. Figure 22 through Figure 29 shows various application examples.

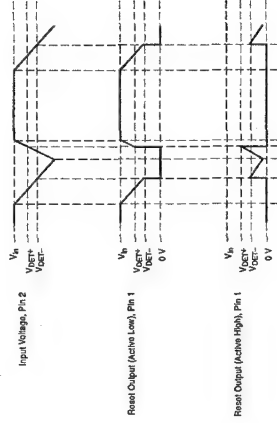


Figure 21. Timing Waveforms

NCP300, NCP301

Voltage Detector Series

The NCP300 and NCP301 series are second generation ultra-low current voltage detectors. These devices are specifically designed for use as reset controllers in portable microprocessor based systems where extended battery life is paramount.

Initially consider that input voltage V_{IN} is at a nominal level and it is greater than the voltage detector upper threshold (V_{UTR}) and the reset output (Pin 1) will be in the high state for active low devices, or in the low state for active high devices. If there is a positive transient in V_{IN} the detector output will fall below the low detector threshold (V_{LTD}). This sequence of events causes the Reset output to be in the low state for active low devices, or in the

high state for active high devices. After completion of the positive transient, V_{IN} will return to its nominal level and become greater than the V_{UTR} . The voltage detector has built-in hysteresis to prevent erratic reset operation as the comparator threshold is crossed.

Although these device series are specifically designed for use as reset controllers in portable microprocessor based systems, they can be used in other applications where precise voltage monitoring is required. Figure 22 through Figure 29 shows various application examples.

Features

- Quiescent Current of 0.5 μ A Typical
- High Accuracy Under Voltage Threshold of 2.0%
- Wide Operating Voltage Range of 0.8 V to 10 V
- Complementary or Open Drain Reset Output
- Active Low or Active High Reset Output

Typical Applications

- Microprocessor Reset Controller
- Low Battery Detection
- Power Fail Indicator
- Battery Backup Detection



ON Semiconductor

http://onsemi.com



THIS SOT-23-5
PACKAGE IS
CASE 418

PIN CONNECTIONS AND MARKING DIAGRAM



XXX = SOI or SOT

Y = Year


W = Work Week

(Top View)

ORDERING INFORMATION

See detailed ordering and shipping information in the marketing literature section on page 22 of this data sheet.

Complementary Output Configuration

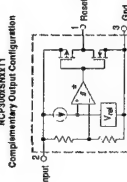

*The representative block diagrams depict active low reset output. If active high reset output is required, the comparator inputs are interchanged for the active high output. *All units are active low.

Open Drain Output Configuration

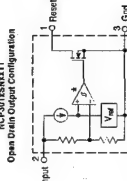


Figure 1. Representative Block Diagrams

PINNING

OVERVIEW

Name	Pins	Type	Function
System			
RESETn	1	In	
SYSCLK (27MHz)	1	In	
Host Interface			
HO_A(21:1)	21	In	
HO_D(15:0)	16	In/Out	
HO_BEN(1:0)	2	In	
HO_RWn	1	In	
HO_CSLn	1	In	
HO_CSHn	1	In	
HO_A22	1	In	
HO_WAIT	1	Out	
HO_PROCLK	1	In	
Memory Interface			
M_A(13:0)	14	Out	
M_DQ(15:0)	16	In/Out	
M_RASn	1	Out	
M_CASn	1	Out	
M_WEn	1	Out	
M_LDQM	1	Out	
M_UDQM	1	Out	
M_CLKOUT	1	Out	
M_CLKEN	1	Out	
Basic Engine Interface			
BE_BCLK	1	In	
BE_DAT1	1	In	
BE_WCLK	1	In	
BE_SYNC	1	In/Out	
BE_FLAG	1	In	
BE_V4	1	In	
BE_DAT0	1	Out	
Video Encoder Interface			
VE_D(15:0)	16	In	
VE_DS0	1	Out	
VE_DTACKn	1	In	
VE_VIP_ERROR	1	In	Signal coming from SAA7114
Audio Encoder Interface			
AE_CS0	1	Out	
AE_BCLK	1	In/Out	(CR157/CR157)
AE_WCLK	1	In/Out	(CR157/CR157)
AE_DATA	1	In	(CR157)

Decoder Interface			
D_PAR_D(7:0)	8	Out	
D_PAR_DVALID	1	Out	
D_PAR_STR	1	Out	
D_PAR_REQ	1	In	
D_PAR_SYNC	1	Out	
D_WCLK	1	Out	
D_V4	1	Out	
Audio Clock Control			
ACC_FID	1	In	(CR200)
ACC_PWM	1	Out	
ACC_ACLK_OSC	1	In	
ACC_ACLK_DAI	1	In	
ACC_ACLK_PLL	1	In	
ACC_ACLK_DEC	1	Out	
VBI Extractor			
VBI_IPD(7:0)	8	In	
VBI_CLK	1	In	
UART 1			
UART1_RX	1	In	
UART1_TX	1	Out (OC)	
UART1_CTSn	1	In	
UART1_RTSn	1	Out (OC)	
UART 2			
UART2_RX	1	In	
UART2_TX	1	Out (OC)	
UART2_CTSn	1	In	
UART2_RTSn	1	Out (OC)	
UART 3 (as V4B)			
UART3_RX	1	In	
UART3_TX	1	Out	
UART3_CTSn	1	In	
UART3_RTSn	1	Out	
Interrupt Controller			
EXTINT(3:0)	4	In	From: VEnc, AEnc, BE, VSync (ST15505)
CPUINT(1:0)	2	Out (OC)	
JTAG			
TCK	1	In	Boundary Scan
TDI	1	In	
TDO	1	Out/Z	
TMS	1	In	
TRSTn	1	In	
Test			
TEST0	1	In	Amal Test
TEST1	1	In	
Power Supply			
VDD	20	Power	10% of total pins package
VSS	20	Power	10% of total pins package
Total Pins	208		

MPEG-2 video and MPEG-audio/AC-3 audio
encoder with multiplexer

The SAA6752HS/02 is intended for customers whose application does not require the DDCE function.

- Parallel interface 8-bit master/slave output
 - 3-state output port
 - Glueless interfacing with IEEE 1394 chip sets (for example, PCI 1394 L1t)
 - Data Expansion Bus Interface (DEBI) interface.
- ### 1.7 Control domain
- All control done via FC-bus
 - FC-bus slave transceiver up to 400 MHz
 - FC-bus slave address select pin
 - Host interrupt flag pin.
- ### 1.8 Other features
- Single external clock or single crystal 27 MHz
 - Separate 27 MHz system clock output
 - Interface voltage 3.3 V
 - TTL compatible digital outputs

2.2 Application Fields

- ### 2.2.1 DVD BASED OPTICAL DISC RECORDERS (DVD+RW, DVD-RW, DVD-RAM)

Emerging optical disc based recording systems target to replace the existing consumer recording (VCR) and playback (DVD and VCD) products. The first generation recordable DVD based products will want to maximise recording times for the 4.7 Gbyte storage capacity. For these systems the SAA675HS is critical, with its superior noise filtering and motion estimation, in enabling high quality at low bit rates.

Playback compatibility with existing DVD decoding solutions will also be important, which is why the SAA6752HS provides Dolby® digital consumer (AC-3) audio encoding to allow playback through existing players implementing DDCE (AC-3) decoding dominant in current DVD platforms.

The DVD stream is based on MPEG Program Stream (PS). The SAA6752HS directly outputs MPEG PS compliant to the DVD standard.

(1) MIPS is a registered trademark of MIPS Technologies.

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer

FEATURES

- **Video input and preprocessing**
 - Digital YUV input according to "ITU-R BT.656" (8 bit at 27 MHz) and "ITU-R BT.601"
 - Support of enhanced "ITU-R BT.656" input format
 - Controlling clock rate relative with I/O-channels
 - Supporting of digital video standards (CCIR, SMPTE, VHS)
 - Support of compressed video signals (MPEG-1, MPEG-2)
 - Support of copyright information (Copy Generation Management System (CGMS))
 - **Processing of non broadcast video signals from analog VCR according to ECT 756**
 - **Two digital clock input pins for switching two digital video sources**
 - "ITU-R BT.601" format conversion to 12D1, 23D1 and Standard Interchange Format (SIF)
 - 4 : 2 : 2 to 4 : 2 : 0 colour format conversions
 - Decimation filtering for all format conversions
 - Adaptive frame and motion compensated filter for temporal noise reduction.

1.2 Video compression

- Real-time MPEG-2 encoding, compliant to Main Profile at Main Level (MP@ML) for 625 and 525 interlaced line systems
- Peranlite PC, Peranlite P4 and bit stream information captured for identification of modes during bypass of compressed audio data for MPEG-1, MPEG-2, DD and DTS according to IEC 61937
- Audio mode via PC-bus control for all modes except DVD-compliant bypass.

1.5 Stream multiplexer

- | | |
|--|--|
| <ul style="list-style-type: none"> • Multiplexing of video and audio streams according to the MPEG-2 systems standard ("ISO 13818-1") • Generation and output of MPEG-2 Transport Streams (TS), MPEG-2 Program Streams (PS), Packetized Elementary Streams (PES) and Elementary Streams (ES) compliant to the DVB, D-VHS and DVB standards • MPEG time stamp (PTS/DTS/SCR/PCR) generation and insertion (synchronization) • Insertion of metadata • Optional generation of empty time slots for subsequent insertion of application specific data packets • Optional insertion of user data in the GOP header and in the picture header. | |
|--|--|

- (1) Dolby is a registered trademark of Dolby Laboratories Licensing Corporation.

1.3 Audio Input

- Audio inputs: i2S format or EIAJ format (16, 18 or 20 bits), master or slave mode at 32, 44.1 and 48 kHz
- Two digital i2S input ports for selection between two digital audio sources

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer SAA6752HS

2.2.2 HDD BASED TIME SHIFT RECORDING
Hard Disc Drive (HDD) based time-shift systems enable Personalized TV (PTV) functionality, providing consumers with new powers of control over what and when to watch broadcast content. With the audio and video content recorded digitally, identification, search and retrieval becomes a 'no brainer' task as compared to traditional VCR functionality. Combine this with electronic program guides and intelligent control, and the PTV can also analyse the viewers watching habits to search for programs likely to be of interest and automatically recorded in anticipation of the viewers preferences.

2.2.3 DIGITAL VCR (DVHS) RECORDING
A DVHS player records streams based on MPEG Transport Streams (TS) packed in logical tape tracks. The SAA6752HS output streams are compliant with DVHS standard requirements.

2.2.4 VIDEO EDITING/TRANSMISSION/SURVEILLANCE/CONFERRING
The SAA6752HS can operate as a stand-alone device in all above applications. The SAA6752HS full features and flexibility allows customers to tailor functionality and performance to specific application requirements. All required control settings such as GOP size and bit rate modes can be selected via I²C-bus.

Since HDD recorders are closed systems, the recording format stream can be proprietary. SAA6752HS flexible multiplexing formats, support a number of recording stream formats for HDD including MPEG Transport Stream (TS) or MPEG Packetized Elementary Stream (PES).

3 QUICK REFERENCE DATA

SYMBOL	PARAMETER	MIN.	TYP.	MAX.	UNIT
V _{DD}	digital supply voltage (pad cells)	3.0	3.3	3.6	V
V _{DDIO}	digital supply voltage (core)	2.3	2.5	2.7	V
V _{DDA}	analog supply voltage (oscillator and PLL)	2.3	2.5	2.7	V
I _{DDIO}	analog + digital supply current	407	453	525	mA
P _{tot}	total power dissipation	1.2	1.4	1.9	W
f _Q	quartz frequency (digital controlled tuning)	27 × (1 - 200 × 10 ⁻⁶)	27	27 × (1 + 200 × 10 ⁻⁶)	MHz
f _{SDRAM}	SDRAM clock frequency	108	—	—	MHz
f _{PC}	I ² C-bus input clock frequency	100	—	400	MHz
B	output bit-rate	1.5	—	25	Mbits
V _{IL}	HIGH-level digital input voltage	1.7	—	3.6	V
V _{OL}	LOW-level digital input voltage	-0.5	—	+0.7	V
V _{OH}	HIGH-level digital output voltage	V _{DD} - 0.4	—	V _{DD}	V
V _{OL}	LOW-level digital output voltage	0	—	0.4	V
T _{amb}	ambient temperature	0	—	70	°C


4 ORDERING INFORMATION

PACKAGE		
TYPE NUMBER	NAME	DESCRIPTION
SAA6752HS01(1)	SOP208	plastic shrink quad 781 package; 208 leads (lead length 1.3 mm);
SAA6752HS02(2)		body 28 × 28 × 3.4 mm; high stand-off height

- Notes
1. MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer.
 2. MPEG-2 video and MPEG-audio encoder with multiplexer, but without AC-3 audio encoder.

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer SAA6752HS

5 BLOCK DIAGRAM

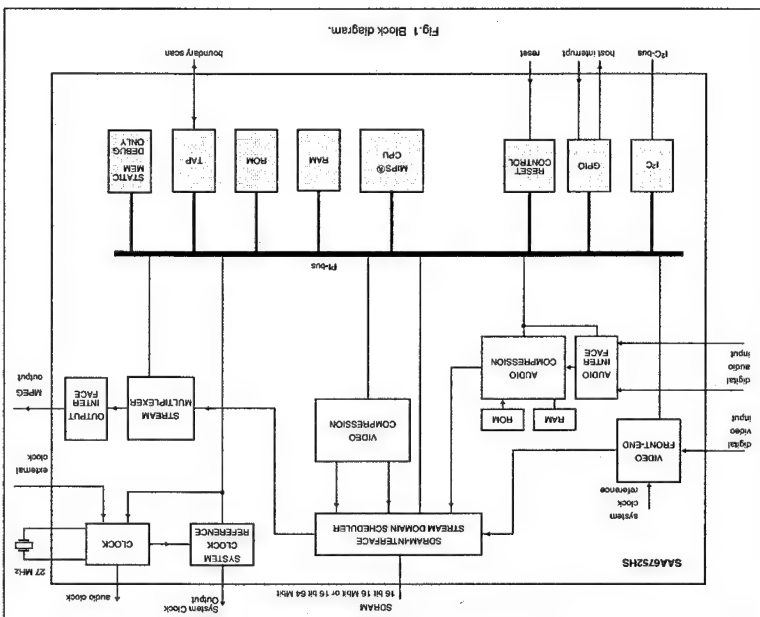

MPEG-2 video and MPEG-audio/AC-3 audio
encoder with multiplexer

SAA6752HS

6 PINNING			
SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	DESCRIPTION
V _{SSP}	1	ground	pad ground
SDATA1	2	input	I ² S-bus serial data input port 1 with internal pull-down resistor
SCLK1	3	input/output	I ² S-bus serial clock port 1 with internal pull-down resistor
SWSI	4	input/output	I ² S-bus word select port 1 with internal pull-down resistor
V _{DDP}	5	supply	pad ring supply voltage (3.3 V)
SDATA2	6	input/output	I ² S-bus serial data input port 2 with internal pull-down resistor
SCLK2	7	input/output	I ² S-bus serial clock port 2 with internal pull-down resistor
SWSE	8	input/output	I ² S-bus word select port 2 with internal pull-down resistor
ACLK	9	output	audio clock output (256 × f _i or 384 × f _i)
V _{SSP}	10	ground	pad ground
IDQ	11	input	reserved (recommended connect to pin V _{SSP}) with internal pull-down resistor
YUV0	12	input	video input signal bit 0 (LSB)
YUV1	13	input	video input signal bit 1
YUV2	14	input	video input signal bit 2
YUV3	15	input	video input signal bit 3
YUV4	16	input	video input signal bit 4
YUV5	17	input	video input signal bit 5
YUV6	18	input	video input signal bit 6
YUV7	19	input	video input signal bit 7 (MSB)
V _{SSP}	20	ground	pad ground
HSYNC	21	input	horizontal sync input (video) with internal pull-down resistor
VSYNC	22	input	vertical sync input (video) with internal pull-down resistor
FID	23	input	video field identification input (odd/even field) with internal pull-down resistor
VCLK1	24	input	video clock input 1 (27 MHz) with internal pull-down resistor
V _{SSP}	25	ground	core ground
V _{SSP}	26	ground	core ground
V _{DDP}	27	supply	core supply voltage (2.5 V)
V _{DDP}	28	supply	core supply voltage (2.5 V)
V _{DDP}	29	supply	core supply voltage (2.5 V)
VCLK2	30	input	video clock input 2 (27 MHz) with internal pull-down resistor
PDOAV	31	3-state output	parallel stream data output for audio/video identifier
PDOIS	32	input	parallel stream data input for data strobe (request for packet in Data Expander Bus interface (DEBI) slave mode) with internal pull-up resistor
PDOISYNC	33	3-state output	parallel stream data output for packet sync
V _{SSP}	34	ground	pad ground
PDOVAL	35	3-state output	parallel stream data valid output with internal pull-up resistor
PDOO	36	3-state output	parallel stream data output bit 0 (LSB)

2001 Aug 01

7

MPEG-2 video and MPEG-audio/AC-3 audio
encoder with multiplexer

SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
PDO1	37	3-state output	4	parallel stream data output bit 1
PDO2	38	3-state output	4	parallel stream data output bit 2
V _{DDP}	39	supply	—	pad ring supply voltage (3.3 V)
PDO3	40	3-state output	4	parallel stream data output bit 3
PDO4	41	3-state output	4	parallel stream data output bit 4
PDO5	42	3-state output	4	parallel stream data output bit 5
PDO6	43	3-state output	4	parallel stream data output bit 6
V _{SSP}	44	ground	—	pad ground
PDO7	45	3-state output	4	parallel stream data output bit 7 (MSB)
PDOCLK	46	input/output	4	parallel stream clock input/output
PCADDRESSL	47	input	—	I ² C-bus address select input with internal pull-up resistor
SD_DO15	48	input/output	8	SDRAM data input/output bit 15 (MSB)
V _{DDP}	49	supply	—	pad ring supply voltage (3.3 V)
SD_DO0	50	input/output	8	SDRAM data input/output bit 0 (LSB)
SD_DO14	51	input/output	8	SDRAM data input/output bit 14
SD_DO1	52	input/output	8	SDRAM data input/output bit 1
V _{SSP}	53	ground	—	pad ground
SD_DO13	54	input/output	8	SDRAM data input/output bit 13
SD_DO2	55	input/output	8	SDRAM data input/output bit 2
SD_DO12	56	input/output	8	SDRAM data input/output bit 12
V _{DDP}	57	supply	—	pad ring supply voltage (3.3 V)
SD_DO3	58	input/output	8	SDRAM data input/output bit 3
SD_DO11	59	input/output	8	SDRAM data input/output bit 11
SD_DO4	60	input/output	8	SDRAM data input/output bit 4
SD_DO10	61	input/output	8	SDRAM data input/output bit 10
V _{SSP}	62	ground	—	pad ground
SD_DO5	63	input/output	8	SDRAM data input/output bit 5
SD_DO9	64	input/output	8	SDRAM data input/output bit 9
SD_DO6	65	input/output	8	SDRAM data input/output bit 6
SD_DO8	66	input/output	8	SDRAM data input/output bit 8
V _{DDP}	67	supply	—	pad ring supply voltage (3.3 V)
SD_DO7	68	input/output	8	SDRAM data input/output bit 7
SD_DQM1	69	output	8	SDRAM data mask enable output bit 1
SD_DQM0	70	output	8	SDRAM data mask enable output bit 0 (LSB)
SD_WE	71	output	8	SDRAM write enable output (active LOW)
V _{SSP}	72	ground	—	pad ground
SD_CAS	73	output	8	SDRAM column address strobe output (active LOW)
SD_CLK	74	output	8	SDRAM clock output
SD_RAS	75	output	8	SDRAM row address strobe output (active LOW)
SD_CKE	76	output	8	SDRAM clock enable output

2001 Aug 01

8

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
V _{SSCO}	77	ground	—	core ground
V _{SSCO}	78	ground	—	core and substrate ground
V _{DDCO}	79	supply	—	core supply voltage (2.5 V)
V _{DDCO}	80	supply	—	core supply voltage (2.5 V)
V _{DDCO}	81	supply	—	core supply voltage (2.5 V)
V _{DDCO}	82	supply	—	core supply voltage (2.5 V)
SD_CS	83	output	8	SDRAM chip select output (active LOW)
SD_A13	84	output	8	SDRAM address output bit 13 (bank selection for 64 Mbit)
SD_A9	85	output	8	SDRAM address output bit 9
SD_A8	86	output	8	SDRAM address output bit 8
V _{SSP}	87	ground	—	pad ground
SD_A11	87	output	8	SDRAM address output bit 11 (bank selection for 16 Mbit)
SD_A7	88	output	8	SDRAM address output bit 7
SD_A12	89	output	8	SDRAM address output bit 12 (bank selection for 64 Mbit)
SD_A6	90	output	8	SDRAM address output bit 6
V _{DDP}	91	supply	—	pad ring supply voltage (3.3 V)
SD_A10	92	output	8	SDRAM address output bit 10
SD_A5	93	output	8	SDRAM address output bit 5
SD_A0	94	output	8	SDRAM address output bit 0 (LSB)
SD_A4	95	output	8	SDRAM address output bit 4
V _{SSP}	96	ground	—	pad ground
SD_A1	97	output	8	SDRAM address output bit 1
SD_A3	98	output	8	SDRAM address output bit 3
SD_A2	99	output	8	SDRAM address output bit 2
SD_DQM3	100	output	8	reserved (do not connect)
V _{DDP}	101	supply	—	pad ring supply voltage (3.3 V)
SD_DQM2	102	output	8	reserved (do not connect)
SD_DQ31	103	input/output	8	reserved (do not connect)
SD_DQ16	104	input/output	8	reserved (do not connect)
V _{SSP}	105	ground	—	pad ground
SD_DQ30	106	input/output	8	reserved (do not connect)
SD_DQ17	107	input/output	8	reserved (do not connect)
SD_DQ29	108	input/output	8	reserved (do not connect)
V _{DDP}	109	supply	—	pad ring supply voltage (3.3 V)
SD_DQ18	110	input/output	8	reserved (do not connect)
SD_DQ28	111	input/output	8	reserved (do not connect)
SD_DQ19	112	input/output	8	reserved (do not connect)
SD_DQ27	113	input/output	8	reserved (do not connect)
V _{SSP}	114	ground	—	pad ground
SD_DQ20	115	input/output	8	reserved (do not connect)
SD_DQ26	116	input/output	8	reserved (do not connect)

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
V _{SSCO}	77	ground	—	core ground
V _{SSCO}	78	ground	—	core and substrate ground
V _{DDCO}	79	supply	—	core supply voltage (2.5 V)
V _{DDCO}	80	supply	—	core supply voltage (2.5 V)
V _{DDCO}	81	supply	—	core supply voltage (2.5 V)
SD_CS	82	output	8	SDRAM chip select output (active LOW)
SD_A13	83	output	8	SDRAM address output bit 13 (bank selection for 64 Mbit)
SD_A9	84	output	8	SDRAM address output bit 9
SD_A8	85	output	8	SDRAM address output bit 8
V _{SSP}	86	ground	—	pad ground
SD_A11	87	output	8	SDRAM address output bit 11 (bank selection for 16 Mbit)
SD_A7	88	output	8	SDRAM address output bit 7
SD_A12	89	output	8	SDRAM address output bit 12 (bank selection for 64 Mbit)
SD_A6	90	output	8	SDRAM address output bit 6
V _{DDP}	91	supply	—	pad ring supply voltage (3.3 V)
SD_A10	92	output	8	SDRAM address output bit 10
SD_A5	93	output	8	SDRAM address output bit 5
SD_A0	94	output	8	SDRAM address output bit 0 (LSB)
SD_A4	95	output	8	SDRAM address output bit 4
V _{SSP}	96	ground	—	pad ground
SD_A1	97	output	8	SDRAM address output bit 1
SD_A3	98	output	8	SDRAM address output bit 3
SD_A2	99	output	8	SDRAM address output bit 2
SD_DQM3	100	output	8	reserved (do not connect)
V _{DDP}	101	supply	—	pad ring supply voltage (3.3 V)
SD_DQM2	102	output	8	reserved (do not connect)
SD_DQ31	103	input/output	8	reserved (do not connect)
SD_DQ16	104	input/output	8	reserved (do not connect)
V _{SSP}	105	ground	—	pad ground
SD_DQ30	106	input/output	8	reserved (do not connect)
SD_DQ17	107	input/output	8	reserved (do not connect)
SD_DQ29	108	input/output	8	reserved (do not connect)
V _{DDP}	109	supply	—	pad ring supply voltage (3.3 V)
SD_DQ18	110	input/output	8	reserved (do not connect)
SD_DQ28	111	input/output	8	reserved (do not connect)
SD_DQ19	112	input/output	8	reserved (do not connect)
SD_DQ27	113	input/output	8	reserved (do not connect)
V _{SSP}	114	ground	—	pad ground
SD_DQ20	115	input/output	8	reserved (do not connect)
SD_DQ26	116	input/output	8	reserved (do not connect)

MPEG-2 video and MPEG-audio/AC-3 audio
encoder with multiplexer

SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
SD_D021	117	Input/output	8	reserved (do not connect)
SD_D025	118	Input/output	8	reserved (do not connect)
V _{DDP}	119	supply	—	pad ring supply voltage (3.3 V)
SD_D022	120	Input/output	8	reserved (do not connect)
SD_D024	121	Input/output	8	reserved (do not connect)
SD_D023	122	Input/output	8	reserved (do not connect)
EXTCLK	123	Input	—	27 MHz external clock input with internal pull-up resistor
V _{SSP}	124	ground	—	pad ground
V _{SSA}	125	ground	—	oscillator analog ground
XTALI	126	analog input	—	crystal oscillator input (27 MHz); note 2
XTALO	127	analog output	—	crystal oscillator output (27 MHz)
V _{DDA}	128	supply	—	oscillator analog supply voltage (2.5 V)
V _{SSC}	129	ground	—	core ground
V _{SSC}	130	ground	—	core ground
V _{DDC}	131	supply	—	core supply voltage (2.5 V)
V _{DDC}	132	supply	—	core supply voltage (2.5 V)
V _{DDP}	133	supply	—	pad ring supply voltage (3.3 V)
TDI	134	Input	—	boundary scan test data input; pin must be set to HIGH during normal operation; with internal pull-up resistor; note 3
TMS	135	Input	—	boundary scan test mode select; pin must be set to LOW during normal operation; with internal pull-up resistor; note 3
TCK	136	Input	—	boundary scan test clock; pin must be set to LOW during normal operation; with internal pull-up resistor; note 3
TDO	137	3-state output	4	boundary scan test data output; pin not active during normal operation; with 3-state output; note 3
V _{SSP}	138	ground	—	pad ground
TRST	139	Input	—	test reset input (active LOW), for boundary scan test (with internal pull-up); notes 3 and 4
CLKOUT	140	output	4	27 MHz system clock output
TEST0	141	Input/output	4	reserved (do not connect)
TEST1	142	Input/output	4	reserved (do not connect)
V _{DDP}	143	supply	—	pad ring supply voltage (3.3 V)
TEST2	144	Input/output	4	reserved (do not connect)
SDA	145	Input/output-drain output	—	serial data input/output (I ² C-bus)
SCL	146	Input/output-drain output	—	serial clock input/output (I ² C-bus)
RESET	147	Input	—	reset input (active LOW); with internal pull-up resistor
V _{SSP}	148	ground	—	pad ground
RTS	149	output	4	reserved (do not connect); Universal Asynchronous Receiver/Transmitter (UART) request to send output (active LOW)

2001 Aug 01

10

MPEG-2 video and MPEG-audio/AC-3 audio
encoder with multiplexer

SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
CTS	150	Input	—	reserved (recommended connect to pin V _{DDP}); UART clear to send input; external static memory select input (active LOW); with internal pull-up resistor
RXD	151	Input	—	reserved (recommended connect to pin V _{DDP}); UART receive data; internal boot select input; with internal pull-up resistor
TXD	152	output	4	reserved (do not connect); UART transmit data
V _{DDP}	153	supply	—	pad ring supply voltage (3.3 V)
SM_TB	154	Input/output	4	reserved (do not connect)
SM_TB	155	Input/output	4	reserved (do not connect)
H_IPF	156	3-state output	4	host interrupt 7ag output; with internal pull-up resistor
V _{SSP}	157	ground	—	pad ground
SM_OE	158	output	4	reserved (do not connect); static memory output enable output (active LOW)
SM_A9	159	output	4	reserved (do not connect); static memory address output bit 9
SM_A10	160	output	4	reserved (do not connect); static memory address output bit 10
V _{DDP}	161	supply	—	pad ring supply voltage (3.3 V)
SM_A8	162	output	4	reserved (do not connect); static memory address output bit 8
SM_A11	163	output	4	reserved (do not connect); static memory address output bit 11
SM_A7	164	output	4	reserved (do not connect); static memory address output bit 7
SM_A12	165	output	4	reserved (do not connect); static memory address output bit 12
V _{SSP}	166	ground	—	pad ground
SM_A6	167	output	4	reserved (do not connect); static memory address output bit 6
SM_A13	168	output	4	reserved (do not connect); static memory address output bit 13
SM_A5	169	output	4	reserved (do not connect); static memory address output bit 5
SM_A14	170	output	4	reserved (do not connect); static memory address output bit 14
V _{DDP}	171	supply	—	pad ring supply voltage (3.3 V)
SM_WE	172	output	4	reserved (do not connect); static memory write enable output (active LOW)
SM_D7	173	Input/output	4	reserved (do not connect); static memory data input/output bit 7 with internal pull-down resistor
SM_D8	174	Input/output	4	reserved (do not connect); static memory data input/output bit 8 with internal pull-down resistor
SM_D6	175	Input/output	4	reserved (do not connect); static memory data input/output bit 6 with internal pull-down resistor
V _{SSP}	176	ground	—	pad ground
SM_D9	177	Input/output	4	reserved (do not connect); static memory data input/output bit 9 with internal pull-down resistor
SM_D5	178	Input/output	4	reserved (do not connect); static memory data input/output bit 5 with internal pull-down resistor
SM_D10	179	Input/output	4	reserved (do not connect); static memory data input/output bit 10 with internal pull-down resistor

2001 Aug 01

11

MPEG-2 video and MPEG-audio/AC-3 audio encoder with multiplexer SAA6752HS

SYMBOL	PIN	INPUT/OUTPUT ⁽¹⁾	I _{max} (mA)	DESCRIPTION
SM_D4	180	input/output	4	reserved (do not connect), static memory data input/output bit 4 with internal pull-down resistor
V _{ssco}	181	ground	—	internal pre-driver and substrate ground
V _{ssco}	182	ground	—	core ground
V _{ssco}	183	supply	—	core supply voltage (2.5 V)
V _{ssco}	184	supply	—	internal pre-driver supply voltage (2.5 V)
V _{ssco}	185	supply	—	pad ring supply voltage (3.3 V)
SM_D11	186	input/output	4	reserved (do not connect), static memory data input/output bit 11 with internal pull-down resistor
SM_D3	187	input/output	4	reserved (do not connect), static memory data input/output bit 3 with internal pull-down resistor
SM_D12	188	input/output	4	reserved (do not connect), static memory data input/output bit 12 with internal pull-down resistor
SM_D2	189	input/output	4	reserved (do not connect), static memory data input/output bit 2 with internal pull-down resistor
V _{ssr}	190	ground	—	pad ground
SM_D19	191	input/output	4	reserved (do not connect), static memory data input/output bit 13 with internal pull-down resistor
SM_D1	192	input/output	4	reserved (do not connect), static memory data input/output bit 1 with internal pull-down resistor
SM_D14	193	input/output	4	reserved (do not connect), static memory data input/output bit 14 with internal pull-down resistor
SM_D0	194	input/output	4	reserved (do not connect), static memory data input/output bit 0 (LSB) with internal pull-down resistor
V _{ssr}	195	supply	—	pad ring supply voltage (3.3 V)
SM_D15	196	input/output	4	reserved (do not connect), static memory data input/output bit 15 (MSB) with internal pull-down resistor
SM_CS3	197	output	4	reserved (do not connect), static memory chip select output for external ROM or RAM (active LOW)
SM_A4	198	output	4	reserved (do not connect), static memory address output bit 4
SM_A3	199	output	4	reserved (do not connect), static memory address output bit 3
V _{ssr}	200	ground	—	pad ground
SM_A2	201	output	4	reserved (do not connect), static memory address output bit 2
SM_A15	202	output	4	reserved (do not connect), static memory address output bit 15
SM_A1	203	output	4	reserved (do not connect), static memory address output bit 1
SM_A16	204	output	4	reserved (do not connect), static memory address output bit 16
V _{ssr}	205	supply	—	pad ring supply voltage (3.3 V)
SM_A0	206	output	4	reserved (do not connect), static memory address output bit 0 (LSB)
SM_A17	207	output	4	reserved (do not connect), static memory address output bit 17 (MSB)
SM_CS0	208	output	4	reserved (do not connect)

IC7706:FLI2200

FLI2200

Description

The FLI2200 is a single chip implementation of Faroudja Laboratories' award winning deinterlacing and post-processing algorithms that produce the highest quality progressive video output from a variety of interlaced video inputs including 525/60 (NTSC) or 625/50 (PAL or SECAM). It uses patented and patent pending motion-adaptive deinterlacing algorithms that produce a deinterlaced video signal with no visible artifacts. The FLI2200 also includes detection and proper interleaving of 3:2 and 2:2 pull-down for film-based sources, including continuous monitoring and compensation for bid edits that occur frequently in broadcast material due to poor scene cuts or insertion of commercials. Video material is processed by a set of content-sensitive spatio-temporal filters that adapt to the appropriate direction for smoothest interpolation using the patented Faroudja DC3™ algorithm. The FLI2200 also includes motion-adaptive cross-color suppression that removes highly objectionable coloration artifacts produced by commonly used video decoders. Its internal processing uses 10 bits per channel to maintain the highest quality. Its inputs and outputs are 10-bit channels for best quality but also support 8-bit channels for lower cost applications. The FLI2200 contains 4 MB of low cost SDRAM for best quality deinterlacing, but it can also be operated in an optimized intra-field mode without memory for more cost-sensitive applications. This makes possible the use of a single design for both high-end and low-end applications. The FLI2200 integrates a number of functions to provide maximum flexibility in a low cost configuration. This includes an on-chip clock generator, SDRAM controller, display controller, input and output color-space converters. It uses a standard 2-wire serial control interface for easy control and access to the registers. The FLI2200 can be connected without glue logic to the FLI2000 video decoder and FLI2220 Enhancer and OSD Generator to produce the highest quality video pipeline for premium applications. It is also fully compatible with other decoders having a ITU-R BT 656 output format.

Applications

Flat panel TV - LCD, PDP
Progressive scan TVs
Multimedia projector/pros
Home Theater
Scan Converters
Multimedia PCs/Workstations

DC3™ is a Faroudja trademark.

Features

- Motion-adaptive cross-color suppression removes artifacts produced by improper Y/C separation in low-cost video decoders
- Motion-adaptive video deinterlacing selects optimal filtering on a per-pixel basis
- Film-mode for proper handling of 3:2 and 2:2 pull-down material
- Bad-edited detection/correction compensates for poor scene cuts and insertions common in broadcast material
- Motion-weighted interpolation for video sources produces maximum resolution without introducing motion artifacts
- Directional Correlational Deinterlacing (DCD™) minimizes jaggies on angled lines
- 8/10-bit Y/CbCr (Y) (ITU-R BT 656), 16/20-bit Y/CbCr (ITU-R BT 601), 24/30-bit RGB or Y/CbCr/YbPr interlaced input options
- 7 Supports 525/60 (NTSC), 625/50 (PAL/SECAM)
- 7 Accepts up to 1100 pixels/line
- 8/10-bit, 16/20-bit YUV, 24/30-bit RGB or Y/CbCr/YbPr progressive output options
- Supports 8- or 10-bit inputs and outputs
- 10-bit internal processing for highest quality
- Includes color-space converters at input and output for maximum flexibility
- Auto-decision of NTSC/PAL/SECAM inputs
- High-order filtering produces smooth chroma output in 4:2:2 to 4:4:4 or 4:4:4 to 4:2:2 conversions
- Resolution recovery maximizes output signal-to-noise ratio and dynamic range
- Can be operated with glue logic with FLI2000 Video Decoder and FLI2220 Enhancer and OSD Generator ICs to produce highest quality video pipeline
- Glue-less interface to most standard video decoders
- Built-in display timing generator
- On-chip clock generator eliminates external PLLs
- On-chip SDRAM controller
- Uses low cost SDRAM as field memory - 4 MB
- Optimized intra-field operation allows memory-less configuration for lowest cost applications with same design and layout as for high-end applications
- 2-wire serial control interface for easy control
- 176-pin TQFP package

Pin Connections and Functions

Pin #	Name	Description
See list	V_{SS}	Ground connections. Connect to the digital ground plane. Pins: 2, 17, 34, 55, 64, 74, 85, 96, 106, 115, 124, 132, 138, 145, 152, 159, 168
See list	$V_{DD3.3}$	Pad Ring digital power connections. Connect to the digital 3.3 volt power supply and decouple to the digital ground plane. Pins: 1, 33, 63, 73, 84, 95, 105, 114, 123, 137, 144, 151, 167
See list	$V_{DD2.5}$	Core Logic digital power connections. Connect to the digital 2.5 volt power supply and decouple to the digital ground plane. Pins: 16, 54, 107, 158
43	AV_{SS}	Ground connection for the clock PLL circuit. Connect to the digital ground plane
42	AV_{DD}	Analog power connections for the clock PLL circuit. Connect to a separately decoupled 2.5 volt power supply and decouple directly to the AV_{SS} pin.
49	RESETB	Reset. When this input is set low it will reset all the internal registers to the default states. Refer to the section on the control registers for details of these states. The device must be reset after it is powered-up.
53	OE	When this pin is set high the outputs of the FLI2200 will be enabled; when it is set low the outputs will be set into a high-impedance state.
56-58	IFORMAT ₂₀	Input signal format control. The settings of these pins set the format of the input signal. This can be overridden by the OFmtOvr bit, bit 3 in register 07 _h , allowing this function to be set or changed via the IFC bus. Please refer to the description of register 07 _h for details.
59-61	OFORMAT ₁₆	Output signal format control. The settings of these pins set the format of the output signal. This can be overridden by the OFmtOvr bit, bit 3 in register 07 _h , allowing this function to be set or changed via the IFC bus. Please refer to the description of register 07 _h for details.
44-45	DADDR ₁₀	The settings of DADDR ₁₀ allow the device address of the control bus to be programmed to prevent conflict with the other devices connected to the bus. DADDR ₁₀ allow the device address to be set to any of the following values: 00C4 _h , C2C3 _h , E0E1 _h , E2E3 _h . Please refer to the section "Control Bus Operation and Protocol" for further information.
46	MODE	When this pin is set low the control bus will operate in the slave mode; allowing the device to be programmed from an external controller. When it is set high the FLI2200 will self-program from an external IFC memory connected to the bus. Please refer to the "Control Bus Operation and Control Protocol" section for more details.
47	SDA	2-wire serial control bus data. Data can be written to the control registers via this pin when it is in the input mode and data can be read from the control registers when it is in the output mode. Refer to the section on the serial port for timing and format details and to the section on the registers for programming information.
48	SCL	2-wire serial control bus clock. When the control port operates in slave mode this pin will be an input and when it operates in the self-programming mode it will be an output.
40	PIXCLK	Pixel clock input. This clock is used to drive all the circuits in the FLI2200. An internal PLL is used to unconvert this clock to provide the master clock signal and other clocks used internally. Note that when the FLI2200 is used in the D1 input mode the PIXCLK input should run at the rate of two cycles per pixel (one for luma and one for chroma).
62	NIN/OUT	NTSC/PAL input or output. The default function of this pin is NTSC/PAL signal indicator output. When the input video signal is a 525 line signal this pin will be set high and when it is a 625 line signal the pin is set low. This function of this pin can be programmed to be an input according to the setting of this pin if the NPO ₁₄ bits, bits 5-4 in register 03 _h , are set to 00 _h , overriding the internal line counter. I.e., it will treat the signal as a 525 line signal when it is set high and a 625 line signal when it is set low.

Pin #	Name	Description
65-72 75-76	GYOUT ₈₀	Green or luminance output bus. In the RGB mode this output is the Green signal and in the YCbCr mode it is the Y signal. The mode is set by the OFORMAT ₂₀ pins. This can be overridden by the OFmtOvr bit, bit 3 in register 07 _h , allowing this function to be set or changed via the IFC bus. Please refer to the description of register 07 _h for details. The signal is clocked out on the falling edge of YCLKO.
93-94 97-104	BCKOUT ₂₀	Blue or Ch chrominance output bus. In the RGB mode this output is the Blue signal, in the YCbCr mode it is the Ch signal. The mode is set by the OFORMAT ₂₀ pins. This can be overridden by the OFmtOvr bit, bit 3 in register 07 _h , allowing this function to be set or changed via the IFC bus. Please refer to the description of register 07 _h for details. The buses used in the multiplexed modes are set by means of bit 5 in register 08 _h . The signal is clocked out on the falling edge of YCLKO in the RGB and YUV 4:4:4 modes, on the falling edge of YCLKO prior to the next rising edge of CCLKO in the YUV 4:2:2 mode, and on the rising edge of MEMCLKO in the multiplexed YCbCr (pseudo D1) mode.
77-83 86-88	RCKOUT ₈₀	Red or Cr chrominance output bus. In the RGB mode this output is the Red signal, in the YCbCr mode it is the Cr signal. The mode is set by the OFORMAT ₂₀ pins. This can be overridden by the OFmtOvr bit, bit 3 in register 07 _h , allowing this function to be set or changed via the IFC bus. Please refer to the description of register 07 _h for details. The buses used in the multiplexed modes are set by means of bit 5 in register 08 _h . The signal is clocked out on the falling edge of YCLKO in the RGB and YUV 4:4:4 modes, on the falling edge of MEMCLKO in the multiplexed YCbCr (pseudo D1) mode.
116	CCLKO	Chroma output sampling clock. This clock is derived from PIXCLK and will be at half the frequency of YCLKO. In 30-bit 4:2:2 output mode the chroma output signals will change on the falling edge of YCLKO prior to the next rising edge of this clock.
117	YCLKO	Luma output sampling clock. This clock is derived from PIXCLK and is double the frequency of PIXCLK. In 30-bit and 20-bit output modes the output signals will change on the falling edge of this clock.
89	VREFO	Start of active field or frame indicator. This signal goes high to indicate the first active line in each field or frame and goes low during the vertical blanking interval. The polarity and timing of this signal are programmable.
90	HREFO	Start of active line indicator output. This signal goes high to indicate the first active pixel in each line and goes low during the horizontal blanking interval. The polarity and timing of this signal are programmable.
91	VSYNC/CREFO	Vertical sync output. This signal provides the vertical sync function for the outputs. Its polarity is programmable to be active high or active low. It can also be programmed to be a composite reference for applications requiring this instead of sync.
92	HCSYNCO	Horizontal or composite sync output. This signal provides the horizontal sync function for the outputs. Its polarity is programmable to be active high or active low. This signal can also be programmed to be the composite sync output, CSYNC.
108	FSYNC	Film mode sync output. When film mode is detected this pin will toggle in sync with the 3.2 (NTSC) or 2.2 (PAL) and 30 Hz film in NTSC) pulldown sequence detected in the source.
110	FILM	Film mode detector output. This pin will be set high when the FLI2200 detects that the video input was converted from 24 fps film with a telecine machine. If film mode is not detected this pin will be set low.

Pin #	Name	Description
125-131	ADDR _{10:4}	SDRAM Address bus. This signal bus is used to address the external SDRAM(s) used for field memories. It should be connected to the A _{10:0} bus of the memory chip(s). Please refer to the Applications section of this data sheet for further details.
176-169	DATA _{24:0}	SDRAM Data bus. This signal bus is used to transfer the data to and from the external SDRAM(s) used for field memories. It should be connected to the DQ _{24:0} bus of the memory chip when using a 64 Mbit SDRAM. When using two 16 Mbit SDRAMs this 30-bit bus may be connected to the two 16-bit data buses of the memories in two ways: either connect 16 lines to one chip and 14 to the other, or connect 15 to both. In all cases the two unused data lines on the memory chip(s) should be connected to ground via 22 K Ω resistors. Please refer to the Applications section of this data sheet for further details.
118	MEMCLKO	SDRAM clock and 2x output sampling clock. This clock is derived from PIXCLK and will be at double the frequency of YCLKO. This active signal should be connected to the CLK pin(s) on the SDRAM(s). When the 10-bit output mode selected the output signals will also change at this clock rate and this should then be used as the output clock.
119	WEN	SDRAM Write Enable. This active low signal should be connected to the WE pin(s) on the SDRAM(s).
120	RASN	SDRAM Row Address Select. This active low signal should be connected to the RAS pin(s) on the SDRAM(s).
121	CASN	SDRAM Column Address Select. This active low signal should be connected to the CAS pin(s) on the SDRAM(s).
122	BSEL	SDRAM Bank Select. When using two 16 Mbit SDRAMs this signal should be connected to the BA (also called BS or A ₁₁) pin on both SDRAMs. When using a 64 Mbit SDRAM this signal should be connected to the BA0 (also called BS0 or A ₁₁) pin on the SDRAM and BA1/BS1 (also called BA when BA0 is referred to as A ₁₁) should be tied low.
41, 50, 51, 109, 111	TEST _{1:0}	These pins are used for test purposes only and should always be tied low for normal operation.
112, 113	TESTO _{1:0}	These pins are test outputs and should be left unconnected in normal operation.

9.11 IC's Divio Board

9.11.1 IC7404: NW700




Divio NW700 DV Decoder, DV Time Base, Reference Solution

divio introduces the NW700, the world's first single-chip DV decoder. Fully DVSD compliant and designed with divio's patented pending compression technology, the NW700 delivers unrivaled video quality, performance and compatibility. With a single-chip design and guided interface to standard video components, divio's single-chip DV decoder will replace current multi-chip solutions and enable a new generation of cost-effective digital video consumer products.


divio has created the "Divio Board" reference solution that includes the NW700, Philips Semiconductor's PD1394LX audio/video 1394 LINK layer controller and PD1394PT1A 200 Mbit/sec PHY. divio provides a complete easy to integrate DVIEEE1394 solution to OEMs to reduce time-to-market and development costs.

The NW700 provides an unprecedented feature-set that deliver real-time DV decoding functions to empower the next generation of consumer electronics devices.

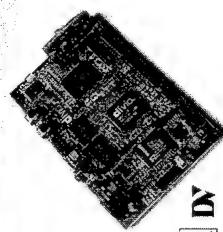

Features and Benefits

- Enhanced Feature Set
 - Fully DVSD Compliant
 - Automatic Audio and A/D Code Processing
 - Pin compatible with NW701 (DV CODEC)
 - Low System Cost
 - Integrated single-chip design including AV
 - Pin compatible with Philips PD1394LX
 - On-chip DVSD and Video Encoder
 - On-chip DVSD and Video Decoder
 - On-chip DVSD and Video Encoder (SDA1340),
 - Micro-controller, and memory
 - Integrated shuffle memory logic
 - Requires only one 256K x 32 EDO DRAM
- Real-time Performance
 - High speed (330Mbytes throughput)
 - 54Mbit double clock speed for dual channel applications
- Video and Audio Support
 - On-chip audio output and PS
 - Audio output
 - Support NTSC and PAL
 - Selectable Audio channel (AB or CD)
 - 48, 44.1, and 32KHz (12- and 16-bit) audio support
- Simple Host Bus connectivity
 - 3 or 16-bit synchronous host bus interface
 - built-in 512 byte DV FIFO
 - Three memory pins for enhanced system control

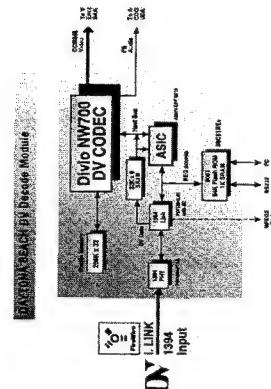

Variable Stream Manager UART1 received data to analog

VSM_UART12_RTSN

Variable Stream Manager UART2 received data to DVO

VSM_UART2_RX

Variable Stream Manager UART1 transmitted data to analog

VSM_UART2_TX

Variable Stream Manager UART2 transmitted data to DVO

VSM_OUT

Vertical synchronization OUT

WE

Write Enable

Y_OUT

Luminance input from analog board

Y_OUT

Luminance output from Host Decoder

Y_OUT10

YOUT10

Luminance output from FLI

YOUT10

DVO Board

+3V3_VD_EDO

+3V3 Power supply EDO Bus IC7404

+3V3_VD

+3V3 Power supply

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7404

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

+3V3 Power supply for IC7500

+3V3_VD

LINK_AVALID

LINK IC Audio/Video data valid

LINK_IC_0

LINK IC chip select

LINK_INTN

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

LINK IC interrupt

LINK_IC_INTERRUPT

10. Spare Parts List

[illegible]

EN 211

Circuit, IC Descriptions and List of Abbreviations

DVR880-890/0X1

9.

*Follow ME Status line (matching signals yes/no; only for

AD	AD Converter	Pin for Reference-voltage Input to AD-converter
AD10	AD10	Pin for Reference-voltage Input to AD-converter
DISP	DISPLAY GRID	VS1/2
INT	Interrupt OUT for the OC	WR
INT1	Interrupt1 – line from Display Print	WS1 Enable (CC - Flash-ROM and S-RAM)
ON	ON	Wide Screen Signalling Front In
ONLINE	inverses On-Line	WU
PFALL	Power Fail Detection	WU Up
PFALL	Power Fail Detection	X
POR	inverses Power On Reset	Oscillator Pin
RESET	RESET	Oscillator Pin
RR	inverses Reset Input	Oscillator Pin
RR	Reset	XOUT
Signal	Signal from IR-Receiver	Oscillator Pin
1	1	X11 Frequency Oscillator Pin
Key-Input-Line	Key-Input-Line	X12
Key-Input-Line	Key-Input-Line	Oscillator Pin
LL	LL	Oscillator Pin
LL	LL	X2
Audio Mute	Audio Mute	Oscillator Pin
250	250 Input-line (only for Europe)	Oscillator Pin
50	50 OUT	Oscillator Pin
750	750 OUT-line (only for Europe)	Oscillator Pin
POR_LDC	POR_LDC	XOUT
Power On Reset	Power On Reset for Display Control Print (ECL_DL)	X11
SS	SS	Frequency Oscillator Pin
outScam-Select	outScam-Select	X12
VLM_FL	VLM_FL	Low Frequency Oscillator Pin
Control line for Filament Voltage Generation	Control line for Filament Voltage Generation	YFN
Amplifier Switch Audio AD Converter	Amplifier Switch Audio AD Converter	Luminescence Front In
3D	3D	
Output Enable Head (CC - Flash-ROM and S-RAM)	Output Enable Head (CC - Flash-ROM and S-RAM)	
Reset Line for Flash-ROM	Reset Line for Flash-ROM	
Reset Signal for REC-LED	Reset Signal for REC-LED	
RESET_DVG	RESET_DVG	
Reset Line to Digital Board	Reset Line to Digital Board	
SP	SP	
inverses Reset line to Flash-ROM	inverses Reset line to Flash-ROM	
RSAL1/2	RSAL1/2	
Record Selector 1/2	Record Selector 1/2	
RYABV	RYABV	
Sound Frequency	Sound Frequency	
SH	SH	
Sound Intermediate frequency	Sound Intermediate frequency	
BB1	BB1	
inverses Band 1 (PCB-Test enhance)	inverses Band 1 (PCB-Test enhance)	
PC-Bus	PC-Bus	
PC-Bus	PC-Bus	
PC-Bus	PC-Bus	
Switched PC-Bus	Switched PC-Bus	
SDASW	SDASW	
SRSLTS	SRSLTS	
Printer Select Trip Select	Printer Select Trip Select	
STERY	STERY	
Standby-Line (Flash_Toriball)	Standby-Line (Flash_Toriball)	
SYNC	SYNC	
Video Sync Input	Video Sync Input	
MP_EHS	MP_EHS	
Temperature Sense Line	Temperature Sense Line	
VER	VER	
HW-version Input	HW-version Input	
VR	VR	
Video from Frontend	Video from Frontend	
VKK	VKK	
VRFTV	VRFTV	
Driver Power Supply	Driver Power Supply	
VREF	VREF	

Spare Parts List

[illegible]

EN 216 10. DVD880-890 /OX1 Spare Parts List

6801	5322 130 34331	BAV70		2038 586 59812 0603 50V 100NPM
6903	5322 130 34331	BAV70		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7801	9352 190 00118	IC SM 74LVC573AD (P+SE)		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7902	4822 130 61553	DTG12AL		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7903	9322 131 96668	(CYPR) R		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7904	3103 165 13721	IC T9M931CW12AF1LRP1		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7905	9865 000 13398	M39V6002-80N1/		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7906	9322 163 26885	ANT10021		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7907	4822 203 78592	RMB7269		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7913	3198 010 42310	IC B647BW		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7915	3198 010 42310	IC B647BW		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7916	3198 010 42310	IC B647BW		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7917	3198 010 42310	IC B647BW		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7918	3198 010 42310	IC B647BW		2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
				2038 586 59812 0603 50V 100NPM
7921	9340 500 92355	BSH111		2038 586

Spare Parts List
DVDR880-890 /OX1
10.
EN 215

7702	4822 130 61553	DTC124EU	IC	SM	TD49817TV	(PHSE)
7704	4822 130 61553	DTC124EU	IC	SM	TD49817TV	(PHSE)
7706	4822 130 61553	DTC124EU	IC	SM	TD49817TV	(PHSE)
7710	9352 606 11118	ICSM	TD49818TV	(PHSE)		
7710	9352 606 11118	IC	SM	TD49817TV	(PHSE)	
7711	9352 621 33116	IC	SM	TD49817TV	(PHSE)	
7711	3198 010 42320	BC857BW				
7712	4822 130 61553	DTC124EU				
7713	3198 010 42320	BC857BW				
7716	3198 010 42320	BC857BW				
7716	3198 010 42320	BC857BW				
7731	4822 130 42755	BCV434D				
7931	4822 209 17505	STV5344D				
7932	3198 010 42310	BC847BW				
7933	3198 010 42310	BC847BW				
7934	4822 209 60177	LM339D				

UPC12 Sub PWB			
Various			
1801	2422 543 01115	RES XTL	SM 24M576 12P
1805	4822 242 70358	TA292E00	(32 768KHZ)
1980	4822 025 17723	CON BM V 8P	M2.00 C36 B
1984	2422 025 16777	CON BM V 8P	M2.00 C36 B
1985	2422 025 16777	CON BM H 10P F	M2.00 C36 B
1987	2422 025 17723	CON BM V 8P	M2.00 C36 B
1988	2422 025 17723	CON BM V 8P	M2.00 C36 B
-I-			
2600	2336 586 59812	0603 50V	100NP80M
2601	4822 126 13863	2200F 5% 50V	
2602	4822 126 13863	2200F 5% 50V	
2603	2336 586 59812	0603 50V	100NP80M
2604	2336 586 59812	0603 50V	100NP80M
2605	2336 586 59812	0603 50V	100NP80M
2606	2336 586 59812	0603 50V	100NP80M
2607	4822 126 13879	2200F 20% 16V	
2608	2336 586 59812	0603 50V	100NP80M
2609	2336 586 59812	0603 50V	100NP80M
2610	4822 126 13863	2200F 5% 50V	
2611	4822 126 13863	2200F 5% 50V	
2612	5322 126 11583	100F 10K 50V	0603
2613	4822 126 33741	100F 10K 50V	0603
2614	4822 126 33741	100F 10K 50V	0603
2615	4822 126 33741	100F 10K 50V	0603
2616	4822 126 11586	2200F 20% 5.5V	
2617	2336 586 59812	0603 50V	100NP80M
2618	4822 126 13863	2200F 5% 50V	
2619	4822 126 13863	2200F 5% 50V	
2620	5322 126 11583	100F 10K 50V	0603
2621	2336 586 59812	0603 50V	100NP80M
2622	2336 586 59812	0603 50V	100NP80M
2623	3126 126 11580	100F 10K 50V	0603
2624	3198 017 41050	0603 10V	COL R
2625	2022 552 94427	0603 50V	100P PMS R
2626	2336 586 59812	0603 50V	100NP80M
2629	4822 124 21712	100F 20% 25V	
2630	2336 586 59812	0603 50V	100NP80M
2631	5322 126 11583	100F 10K 50V	0603
□			
3600	4822 051 30223	22K 5% 0.052W	
3601	4822 051 30103	10K 5% 0.052W	
3602	4822 051 30103	22K 5% 0.052W	
3603	4822 051 30102	1K 5% 0.052W	
3604	4822 051 30103	10K 5% 0.052W	
3605	4822 051 30101	1000 5% 0.052W	
3606	4822 051 30223	22K 5% 0.052W	
3607	4822 117 13652	100K 1% 0.050 0.62W	
3608	4822 117 13652	100K 1% 0.050 0.62W	
3609	4822 117 13652	100K 1% 0.050 0.62W	
3610	4822 117 13652	100K 1% 0.050 0.62W	
3611	4822 051 30101	1000 5% 0.052W	
3612	4822 051		

Spare Parts List

5302A	2422	549	44509	MAINS 25mm O4	HP202R	5422	9322	129	34685	DIO REG SM BZM55-C5	(TEGO)	
5304	4922	157	70926	544H		6423	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5305	4922	157	70926	544H		6424	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5306	2422	535	94634	NO FXD LHLO8 S 21UP PM20		6425	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5307	4822	157	11737	224H 10% 9X8.5		6426	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5308	4822	157	11737	224H 10% 9X8.5		6427	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5309	4822	157	11737	224H 10% 9X8.5		6428	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5310	4822	157	11737	224H 10% 9X8.5		6429	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5311	4822	157	11737	224H 10% 9X8.5		6430	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5312	4822	157	11737	224H 10% 9X8.5		6431	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5313	4822	157	11737	224H 10% 9X8.5		6432	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5314	4822	157	11737	224H 10% 9X8.5		6433	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5315	4822	157	11737	224H 10% 9X8.5		6434	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5316	4822	157	11737	224H 10% 9X8.5		6435	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5317	4822	157	11737	224H 10% 9X8.5		6436	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5318	4822	157	11737	224H 10% 9X8.5		6437	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5319	4822	157	11737	224H 10% 9X8.5		6438	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5320	4822	157	11737	224H 10% 9X8.5		6439	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5321	4822	157	11737	224H 10% 9X8.5		6440	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5322	4822	157	11737	224H 10% 9X8.5		6441	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5323	4822	157	11737	224H 10% 9X8.5		6442	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5324	4822	157	11737	224H 10% 9X8.5		6443	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5325	4822	157	11737	224H 10% 9X8.5		6444	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5326	4822	157	11737	224H 10% 9X8.5		6445	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5327	4822	157	11737	224H 10% 9X8.5		6446	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5328	4822	157	11737	224H 10% 9X8.5		6447	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5329	4822	157	11737	224H 10% 9X8.5		6448	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5330	4822	157	11737	224H 10% 9X8.5		6449	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5331	4822	157	11737	224H 10% 9X8.5		6450	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5332	4822	157	11737	224H 10% 9X8.5		6451	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5333	4822	157	11737	224H 10% 9X8.5		6452	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5334	4822	157	11737	224H 10% 9X8.5		6453	9340	548	61115	DIO REG SM PDZ12B	(PHE)R	
5335	4822	157	11737	224H								

[illegible]

1600	2422 025 16729	CON BM V 10P F 1.00 FFC	0.3 R
1601	2422 025 16389	CON BM V 22P F 1.00 FFC	0.3 R
1602	2422 025 16389	CON BM V 22P F 1.00 FFC	0.3 R
1603	2422 025 16389	CON BM V 60P F 0.80 04616	0.3 R
-H-			
2100	2238 586 59812	0603 50V 100NP80M	
2101	2238 586 59812	0603 50V 100NP80M	
2102	2238 586 59812	0603 50V 100NP80M	
2103	2238 586 59812	0603 50V 100NP80M	
2104	2238 586 59812	0603 50V 100NP80M	
2105	2238 586 59812	0603 50V 100NP80M	
2106	2238 586 59812	0603 50V 100NP80M	
2107	2238 586 59812	0603 50V 100NP80M	
2108	2238 586 59812	0603 50V 100NP80M	
2109	2238 586 59812	0603 50V 100NP80M	
2110	2238 586 59812	0603 50V 100NP80M	
2111	2238 586 59812	0603 50V 100NP80M	
2112	2238 586 59812	0603 50V 100NP80M	
2113	2238 586 59812	0603 50V 100NP80M	
2114	2238 586 59812	0603 50V 100NP80M	
2115	2238 586 59812	0603 50V 100NP80M	
2116	2238 586 59812	0603 50V 100NP80M	
2117	2238 586 59812	0603 50V 100NP80M	
2118	2238 586 59812	0603 50V 100NP80M	
2119	3198 030 74760	EL SM 35V 47P PM20 COL	R
2120	2238 586 59812	0603 50V 100NP80M	
2121	2238 586 59812	0603 50V 100NP80M	
2122	2238 586 59812	0603 50V 100NP80M	
2123	2238 586 59812	0603 50V 100NP80M	
2124	2238 586 59812	0603 50V 100NP80M	
2125	2238 586 59812	0603 50V 100NP80M	
2126	2238 586 59812	0603 50V 100NP80M	
2127	3198 030 74760	EL SM 35V 47P PM20 COL	R
2128	3198 016 31600	0603 25V 1Hf	
2129	4822 126 13950	EL SM 50V 21P PM20 COL	R
2130	3198 026 82260	EL SM 50V 21P PM20 COL	R
2131	5322 124 41945	22Hf 20V 35V	
2132	2238 586 59812	0603 50V 100NP80M	
2133	3198 030 74760	EL SM 35V 47P PM20 COL	R
2134	4822 126 11765	0603 50V 47P PM5	
2135	4822 126 11765	0603 50V 100NP80M	
2136	4822 126 11765	0603 50V 47P PM5	
2137	4822 126 11765	0603 50V 100NP80M	
2138	4822 126 11765	0603 50V 47P PM5	
2139	4822 126 11765	0603 50V 47P PM5	
2140	4822 126 11765	0603 50V 47P PM5	
2141	4822 126 11765	0603 50V 47P PM5	
2142	4822 126 11765	0603 50V 47P PM5	
2143	4822 126 11765	0603 50V 47P PM5	
2144	4822 126 11765	0603 50V 47P PM5	
2145	4822 126 11765	0603 50V 47P PM5	
2146	2238 586 59812	0603 50V 100NP80M	
2147	2238 586 59812	0603 50V 100NP80M	
2148	2238 586 59812	0603 50V 100NP80M	
2149	2238 586 59812	0603 50V 100NP80M	
2150	2238 586 59812	0603 50V 100NP80M	
2151	2238 586 59812	0603 50V 100NP80M	
2152	2238 586 59812	0603 50V 100NP80M	
2153	2238 586 59812	0603 50V 100NP80M	
2154	2238 586 59812	0603 50V 100NP80M	
2155	2238 586 59812	0603 50V 100NP80M	
2156	2238 586 59812	0603 50V 100NP80M	
2157	2238 586 59812	0603 50V 100NP80M	
2158	2238 586 59812	0603 50V 100NP80M	
2159	2238 586 59812	0603 50V 100NP80M	
2160	2238 586 59812	0603 50V 100NP80M	
2161	2238 586 59812	0603 50V 100NP80M	
2162	2238 586 59812	0603 50V 100NP80M	
2163	2238 586 59812	0603 50V 100NP80M	
2164	2238 586 59812	0603 50V 100NP80M	
2165	2238 586 59812	0603 50V 100NP80M	
2166	2238 586 59812	0603 50V 100NP80M	
2167	2238 586 59812	0603 50V 100NP80M	
2168	2238 586 59812	0603 50V 100NP80M	
2169	2238 586 59812	0603 50V 100NP80M	
2170	2238 586 59812	0603 50V 100NP80M	
2171	2238 586 59812	0603 50V 100NP80M	
2172	2238 586 59812	0603 50V 100NP80M	
2173	2238 586 59812	0603 50V 100NP80M	
2174	2238 586 59812	0603 50V 100NP80M	
2175	2238 586 59812	0603 50V 100NP80M	
2176	2238 586 59812	0603 50V 100NP80M	
2177	2238 586 59812	0603 50V 100NP80M	
2178	2238 586 59812	0603 50V 100NP80M	
2179	2238 586 59812	0603 50V 100NP80M	
2180	2238 586 59812	0603 50V 100NP80M	
2181	2238 586 59812	0603 50V 100NP80M	
2182	2238 586 59812	0603 50V 100NP80M	
2183	2238 586 59812	0603 50V 100NP80M	
2184	2238 586 59812	0603 50V 100NP80M	
2185	2238 586 59812	0603 50V 100NP80M	
2186	2238 586 59812	0603 50V 100NP80M	
2187	2238 586 59812	0603 50V 100NP80M	
2188	2238 586 59812	0603 50V 100NP80M	
2189	2238 586 59812	0603 50V 100NP80M	
2190	2238 586 59812	0603 50V 100NP80M	
2191	2238 586 59812	0603 50V 100NP80M	
2192	2238 586 59812	0603 50V 100NP80M	
2193	2238 586 59812	0603 50V 100NP80M	
2194	2238 586 59812	0603 50V 100NP80M	
2195	2238 586 59812	0603 50V 100NP80M	
2196	2238 586 59812	0603 50V 100NP80M	
2197	2238 586 59812	0603 50V 100NP80M	
2198	2238 586 59812	0603 50V 100NP80M	
2199	2238 586 59812	0603 50V 100NP80M	
2200	2238 586 59812	0603 50V 100NP80M	
2201	2238 586 59812	0603 50V 100NP80M	
2202	2238 586 59812	0603 50V 100NP80M	
2203	2238 586 59812	0603 50V 100NP80M	
2204	2238 586 59812	0603 50V 100NP80M	
2205	2238 586 59812	0603 50V 100NP80M	
2206	2238 586 59812	0603 50V 100NP80M	
2207	2238 586 59812	0603 50V 100NP80M	
2208	2238 586 59812	0603 50V 100NP80M	
2209	2238 586 59812	0603 50V 100NP80M	
2210	2238 586 59812	0603 50V 100NP80M	
2211	2238 586 59812	0603 50V 100NP80M	
2212	2238 586 59812	0603 50V 100NP80M	
2213	2238 586 59812	0603 50V 100NP80M	
2214	2238 586 59812	0603 50V 100NP80M	
2215	2238 586 59812	0603 50V 100NP80M	
2216	2238 586 59812	0603 50V 100NP80M	
2217	2238 586 59812	0603 50V 100NP80M	
2218	3198 030 74760	EL SM 35V 47P PM20 COL	R
2219	2238 586 59812	0603 50V 100NP80M	
2220	2238 586 59812	0603 50V 100NP80M	
2221	2238 586 59812	0603 50V 100NP80M	
2222	2238 586 59812	0603 50V 100NP80M	
2223	2238 586 59812	0603 50V 100NP80M	
2224	2238 586 59812	0603 50V 100NP80M	
2225	2238 586 59812	0603 50V 100NP80M	
2226	2238 586 59812	0603 50V 100NP80M	
2227	2238 586 59812	0603 50V 100NP80M	
2228	2238 586 59812	0603 50V 100NP80M	
2229	2238 586 59812	0603 50V 100NP80M	
2230	3198 030 74760	EL SM 35V 47P PM20 COL	R
2231	2238 586 59812	0603 50V 100NP80M	
2232	2238 586 59812	0603 50V 100NP80M	
2233	2238 586 59812	0603 50V 100NP80M	
2234	2238 586 59812	0603 50V 100NP80M	
2235	2238 586 59812	0603 50V 100NP80M	
2236	2238 586 59812	0603 50V 100NP80M	
2237	2238 586 59812	0603 50V 100NP80M	
2238	2238 586 59812	0603 50V 100NP80M	
2239	2238 586 59812	0603 50V 100NP80M	
2240	2238 586 59812	0603 50V 100NP80M	
2241	2238 586 59812	0603 50V 100NP80M	
2242	2238 586 59812	0603 50V 100NP80M	
2243	2238 586 59812	0603 50V 100NP80M	
2244	2238 586 59812	0603 50V 100NP80M	
2245	2238 586 59812	0603 50V 100NP80M	
2246	2238 586 59812	0603 50V 100NP80M	
2247	2238 586 59812	0603 50V 100NP80M	
2248	2238 586 59812	0603 50V 100NP80M	
2249	2238 586 59812	0603 50V 100NP80M	
2250	2238 586 59812	0603 50V 100NP80M	
2251	2238 586 59812	0603 50V 100NP80M	
2252	2238 586 59812	0603 50V 100NP80M	
2253	2238 586 59812	0603 50V 100NP80M	
2254	2238 586 59812	0603 50V 100NP80M	
2255	2238 586 59812	0603 50V 100NP80M	
2256	2238 586 59812	0603 50V 100NP80M	
2257	2238 586 59812	0603 50V 100NP80M	
2258	2238 586 59812	0603 50V 100NP80M	
2259	2238 586 59812	0603 50V 100NP80M	
2260	2238 586 59812	0603 50V 100NP80M	
2261	2238 586 59812	0603 50V 100NP80M	
2262	2238 586 59812	0603 50V 100NP80M	
2263	2238 586 59812	0603 50V 100NP80M	
2264	2238 586 59812	0603 50V 100NP80M	
2265	2238 586 59812	0603 50V 100NP80M	
2266	2238 586 59812	0603 50V 100NP80M	
2267	2238 586 59812	0603 50V 100NP80M	
2268	2238 586 59812	0603 50V 100NP80M	
2269	2238 586 59812	0603 50V 100NP80M	
2270	2238 586 59812	0603 50V 100NP80M	
2271	2238 586 59812	0603 50V 100NP80M	
2272	2238 586 59812	0603 50V 100NP80M	
2273	2238 586 59812	0603 50V 100NP80M	
2274	2238 586 59812	0603 50V 100NP80M	
2275	2238 586 59812	0603 50V 100NP80M	
2276	2238 586 59812	0603 50V 100NP80M	
2277	2238 586 59812	0603 50V 100NP80M	
2278	2238 586 59812	0603 50V 100NP80M	
2279	2238 586 59812	0603 50V 100NP80M	
2280	2238 586 59812	0603 50V 100NP80M	
2281	2238 586 59812	0603 50V 100NP80M	
2282	2238 586 59812	0603 50V 100NP80M	
2283	2238 586 59812	0603 50V 100NP80M	
2284	2238 586 59812	0603 50V 100NP80M	
2285	2238 586 59812	0603 50V 100NP80M	
2286	2238 586 59812	0603 50V 100NP80M	
2287	2238 586 59812	0603 50V 100NP80M	
2288	2238 586 59812	0603 50V 100NP80M	
2289	2238 586 59812	0603 50V 100NP80M	
2290	2238 586 59812	0603 50V 100NP80M	
2291	2238 586 59812	0603 50V 100NP80M	
2292	2238 586 59812	0603 50V 100NP80M	
2293	2238 586 59812	0603 50V 100NP80M	
2294	2238 586 59812	0603 50V 100NP80M	
2295	2238 586 59812	0603 50V 100NP80M	
2296	2238 586 59812	0603 50V 100NP80M	
2297	2238 586 59812	0603 50V 100NP80M	
2298	2238 586 59812	0603 50V 100NP80M	
2299	2238 586 59812	0603 50V 100NP80M	
2300	2238 586 59812	0603 50V 100NP80M	
2301	2238 586 59812	0603 50V 100NP80M	
2302	2238 586 59812	0603 50V 100NP80M	
2303	2238 586 59812	0603 50V 100NP80M	

2228	2238	586	58612	603	50V	100NP0M	3118	4822	117	12139	222	5%	0.062W
2229	2238	586	58612	603	50V	100NP0M	3119	4822	051	30222	242	5%	0.062W
2230	2238	586	58612	603	50V	100NP0M	3120	4822	051	30222	242	5%	0.062W
2231	2238	586	58612	603	50V	100NP0M	3121	4822	051	30222	242	5%	0.062W
2232	2238	586	58612	603	50V	100NP0M	3122	4822	051	30222	242	5%	0.062W
2233	2238	586	58612	603	50V	100NP0M	3123	4822	051	30222	242	5%	0.062W
2234	2238	586	58612	603	50V	100NP0M	3124	2322	704	63002	PM1 R		
2235	2238	586	58612	603	50V	100NP0M	3125	2322	704	63002	PM1 R		
2236	2238	586	58612	603	50V	100NP0M	3126	4822	117	12139	222	5%	0.062W
2237	2238	586	58612	603	50V	100NP0M	3127	4822	117	12139	220	1% EFR343	
2238	2238	586	58612	603	50V	100NP0M	3128	4822	051	30479	470	5%	0.062W
2239	3198	030	74780	EL SM 35V	4U7	PM20 COL	3129	4822	051	30479	470	5%	0.062W
2240	3198	030	74780	EL SM 35V	4U7	PM20 COL	3130	2120	611	00019	7		
2241	3198	030	74780	EL SM 35V	4U7	PM20 COL	3131	4822	117	12917	10	5%, 0.062W	CASE0603
2242	3198	030	74780	EL SM 35V	4U7	PM20 COL	3132	4822	117	12917	10	5%, 0.062W	CASE0603
2243	2238	586	58612	603	50V	100NP0M	3133	4822	117	12917	10	5%, 0.062W	CASE0603
2244	2238	586	58612	603	50V	100NP0M	3134	4822	117	12917	10	5%, 0.062W	CASE0603
2245	2238	586	58612	603	50V	100NP0M	3135	4822	117	12917	10	5%, 0.062W	CASE0603
2246	2238	586	58612	603	50V	100NP0M	3136	4822	051	30472	470	5%	0.062W
2247	2238	586	58612	603	50V	100NP0M	3137	4822	051	30472	470	5%	0.062W
2248	2238	586	58612	603	50V	100NP0M	3138	4822	051	30472	470	5%	0.062W
2249	2238	586	58612	603	50V	100NP0M	3139	4822	051	30472	470	5%	0.062W
2250	2238	586	58612	603	50V	100NP0M	3140	4822	051	30472	470	5%	0.062W
2251	2238	586	58612	603	50V	100NP0M	3141	4822	051	30472	470	5%	0.062W
2252	2238	586	58612	603	50V	100NP0M	3142	4822	051	30472	470	5%	0.062W
2253	2238	586	58612	603	50V	100NP0M	3143	4822	051	30472	470	5%	0.062W
2254	2238	586	58612	603	50V	100NP0M	3144	4822	051	30472	470	5%	0.062W
2255	2238	586	58612	603	50V	100NP0M	3145	4822	051	30472	470	5%	0.062W
2256	2238	586	58612	603	50V	100NP0M	3146	4822	051	30472	470	5%	0.062W
2257	2238	586	58612	603	50V	100NP0M	3147	4822	051	30472	470	5%	0.062W
2258	2238	586	58612	603	50V	100NP0M	3148	4822	051	30472	470	5%	0.062W
2259	2238	586	58612	603	50V	100NP0M	3149	4822	051	30472	470	5%	0.062

4822 242 10838 27MHZ 120P FX0-31FT

5100	4822	57	1717	BLM1P6000PST
5101	4822	57	1717	BLM1P6000PST
5102	4822	57	1469	BLM1P6000PST
5103	4822	57	1469	BLM1P6000PST
5200	4822	57	1469	BLM1P6000PST
5201	4822	57	1469	BLM1P6000PST
5202	4822	57	1469	BLM1P6000PST
5203	4822	57	1469	BLM1P6000PST
5300	4822	57	1469	BLM1P6000PST
5301	4822	57	1469	BLM1P6000PST
5302	4822	57	1469	BLM1P6000PST
5303	4822	57	1469	BLM1P6000PST
5400	4822	57	1469	BLM1P6000PST
5401	4822	57	1469	BLM1P6000PST
5402	4822	57	1469	BLM1P6000PST
5403	4822	57	1469	BLM1P6000PST
5404	4822	57	1469	BLM1P6000PST
5500	4822	57	1469	BLM1P6000PST
5501	4822	57	1469	BLM1P6000PST
5502	4822	57	1469	BLM1P6000PST
5503	4822	57	1469	BLM1P6000PST
5504	4822	57	1469	BLM1P6000PST
5505	4822	57	1469	BLM1P6000PST
5506	4822	57	1469	BLM1P6000PST
5507	4822	57	1469	BLM1P6000PST

7. Circuit Diagrams and PWB Layouts

Display Panel

